

PORODO



Porodo



Portable Megaphone

SKU: PD-LFST098

Table of Contents

Schematic View	2
Features	2
Instructions for Use	3
Battery Replacement	4
Bluetooth Connection	4
MP3 Player	4
Panel Operation Guide	5
Specifications	5
Precautions	5
Warranty	6
Contact Us	6

Schematic View

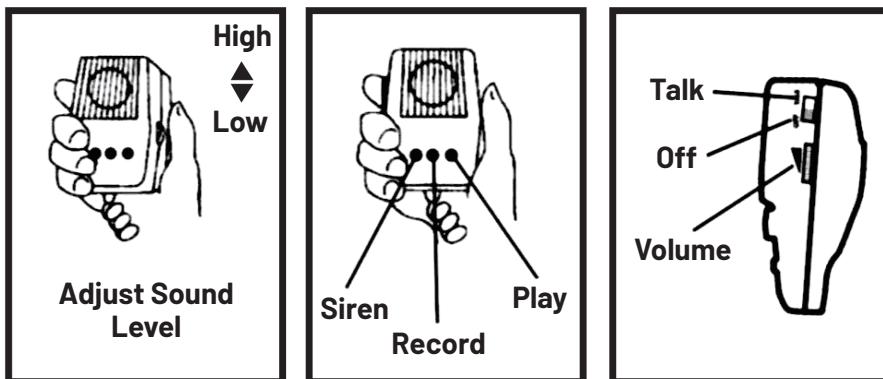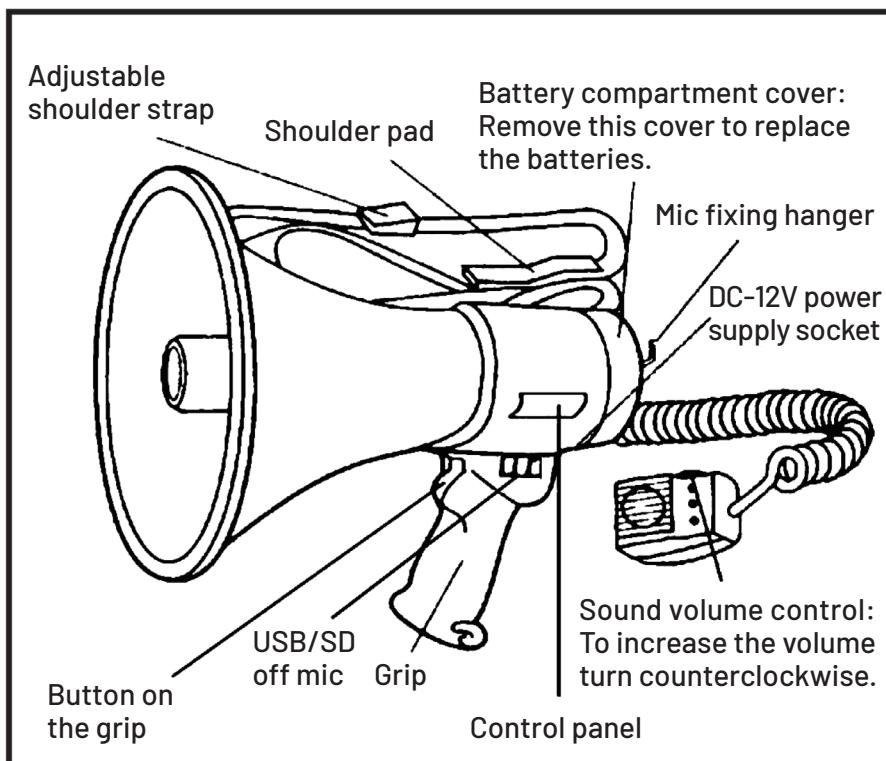

Features

- 1. Versatile Audio Output:** The device allows effortless switching between voice siren, and music modes, offering extended recording capabilities to ensure clear and continuous messaging across all audio settings.
- 2. Recording Feature:** Users can record messages and replay them as needed making it ideal for situations where consistent and reliable message delivery is essential.
- 3. High Power Output:** With a 20W output and a range of 400 meters, the device is perfect for use at outdoor events and large venues, ensuring broad and effective

sound coverage.

4. 700 M Expansive Coverage: The device offers expansive coverage of up to 700 meters, making it suitable for large areas that require widespread sound distribution.

5. Clear & Loud Sound: Designed to provide clear and loud audio, this device ensures that your messages are heard at long distances with excellent clarity.

Instructions for Use

1. Open the back cover and remove the plastic battery sleeve. Insert the batteries ensuring they are placed with the correct polarity. Follow the instructions in the compartment and close the back cover securely. Your megaphone is now ready for use.

2. To activate the megaphone, press the button on the grip when holding it in your hand, after fixing the hanger inlet to the mic fixing hanger. Alternatively switch the button to "MIC" when carrying it on your shoulder.

3. When using the megaphone, place your lips as close as possible to the megaphone's hanger inlet. Adjust the volume control to the desired level without causing feedback or howling.

4. Switch the button to "TALK," and briefly press the "SIREN" button to activate the emergency siren. To turn off the siren, switch the same button to "OFF" or press the "SIREN" button. Press and hold the "SIREN" button to activate the emergency whistle. To turn off the whistle, switch the button to "OFF" or press the "SIREN" button again.

5. Before recording, switch the button to "TALK" and press the "REC" button. The REC indicator light will turn on, indicating that recording is ready. Speak into the microphone on the hanger inlet to start recording. To stop or finish recording, press the "REC" button again. The maximum recording time is 120 seconds.

6. To play back your recorded message or music, press the "PLAY" button. To stop, press the "PLAY" button again.

7. After using the megaphone, remember to switch the button to "OFF."





K Battery Replacement

A. To Replace Batteries

1. Loosen the locking screw of the battery compartment cover on the back of the device. The battery compartment cover will come off.
2. Insert 8 C batteries into the battery case, ensuring correct polarity.
3. Insert the battery case with the batteries into the battery compartment of the megaphone, making sure to observe the correct polarity.

B. To Replace Rechargeable Battery

Open the back cover. Remove the plastic battery sleeve and insert one rechargeable battery, then close the back cover until it locks.

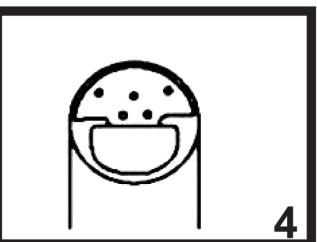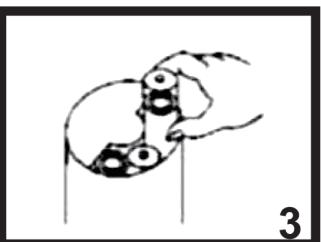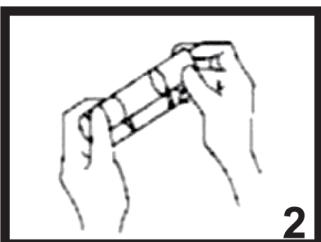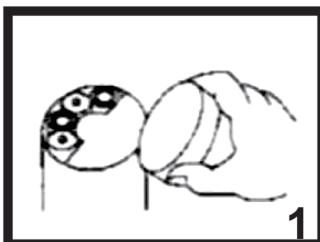

K Bluetooth Connection

When the power is turned on, turn the switch on the side of the handle to the USB/SD position. The light will turn on, indicating that Bluetooth mode is active. The Bluetooth file in the phone is named "Megaphone" for pairing.

K MP3 Player

To use the MP3 card feature, simply insert the USB or SD card into the corresponding card slot to play MP3 format files. The Bluetooth function will automatically be disabled when the MP3 player is in use.

Notice:

1. If you don't want to speak while playing music, turn off the volume control to reduce noise and save battery life.
2. Do not touch the USB drive while the indicator light is flashing.

3. The USB drive should not exceed 6GB in capacity, and it must support MP3 format.

Panel Operation Guide

(◀) Short press to play the previous track, Long press to decrease volume.

(▶) Short press to pause or play. Press and hold to stop.

(▶) Short press to play the next track, Long press to increase volume.

AUX: Input for 3.5mm Audio Jack.

M: Press to switch audio source mode.

Specifications

Battery Type	x8 C Batteries (Not Included)
Battery Life	Up to 8H of continuous use
Effective Range	Up to 700 Meters Outdoor
Power Output	50W
Horn Dimension	Ø137mm, Length 223mm
Weight	1500g

Precautions

- 1.** Ensure that the batteries are inserted correctly, observing the correct polarity.
- 2.** If the megaphone will not be in use for an extended period, remove the dry cells.
- 3.** Drained cells or a rechargeable battery may not provide sufficient sound volume.
- 4.** After using the megaphone, always switch the button to OFF.

Warranty

Products that you buy directly from our **Porodo** website or shop come with a 24-month warranty.

When you buy **Porodo** products from any of our approved sellers, you only get a 12-month warranty. If you want to extend this warranty, go to our website at porodo.net/warranty and fill out the form with your information. Don't forget to upload a picture of the product too. After we've checked and accepted your request, we'll send you an email to confirm that your product's warranty has been extended.

For more info, please check:
[**porodo.net/warranty**](http://porodo.net/warranty)

Contact Us

If you have any questions about this Privacy Policy, please contact us at:

info@porodo.net

Website: **porodo.net**

Service Support: **support@porodo.net**

Instagram: **porodo**