

**PORODO**  
**LIFESTYLE**



**Porodo Lifestyle**

**Multi-Purpose  
Trio Grooming Kit**

SKU: PD-LFST165-BK

# Table of Contents

Important Safety Instructions	2
Charging Instructions	2
Attaching Guide Combs	3
Adjusting the Speed	3
Instructions for Use	3
Troubleshooting	4
Specifications	4
Cleaning and Maintenance	5
Cautions	5
Disposal	5
Warranty	6
Contact Us	6

Before using the product, please carefully read this User Manual to guarantee correct usage and keep it secure for future reference.

## Important Safety Instructions

When using electrical appliances, it is essential to follow basic safety precautions. Please read all instructions thoroughly before operating this appliance.

 **Danger:** To Reduce the Risk of Electric Shock

1. Never touch the appliance if it has fallen into water. Immediately unplug it.
2. Do not use the appliance while bathing or showering.
3. Avoid placing or storing the appliance where it could fall into or be pulled into a bathtub or sink.
4. Do not submerge the appliance in water or other liquids.
5. Always unplug the appliance right after use.
6. Always ensure the appliance is unplugged before cleaning, disassembling, or assembling any parts.

 **Warning:** To Reduce the Risk of Burns, Fire, Electric Shock, or Injury

1. Never leave the appliance plugged in while unattended.
2. Ensure that children or individuals with disabilities use this appliance only under adult supervision.
3. Use the appliance strictly as described in this manual.
4. Do not use accessories not recommended by the manufacturer.
5. Do not operate the appliance if the cord, plug, or unit is damaged, malfunctioning, dropped, or has been submerged in water.
6. Do not use damaged or broken blades or combs to avoid injury.
7. Keep the power cord away from heated surfaces at all times.

## Charging Instructions

1. For optimal performance, fully charge the device before its first use (approximately 2.5 hours). A complete charge provides up to 200 minutes of cordless operation.
2. To ensure safety, always turn off the device while charging.

3. Avoid overcharging the device once it reaches full capacity.
4. Charger Voltage: DC 5V 1A.
5. Keep the charging contacts clean, as dirt and debris may reduce charging efficiency.
6. To preserve battery life, it's best to recharge the device before the battery is completely depleted.
7. To charge, simply plug the charger into a power outlet.
8. If the device has not been used for over a month, charge it for 2 hours to maintain the health of the battery.

## **Attaching Guide Combs**

1. Align the blade teeth with the front of the guide comb. Press the back of the comb downward until you hear a click, indicating it is securely in place.
2. Always ensure the correct side of the comb is attached before starting the cut.
3. Gently pull the tab at the back of the comb and lift it off.

## **Adjusting the Speed**

To adjust the cutting speed, press the + button to increase the speed or the – button to decrease it, allowing you to customize the performance based on your needs.

## **Instructions for Use**

1. Hold the clipper with the blade teeth facing upward for optimal control.
2. Gently lift the clipper head and move it upward and outward to trim the hair.
3. For an even cut, attach the comb guide. Avoid forcing the clipper through the hair. Beginners should start with the longest comb attachment for a smoother experience.
4. To achieve a uniform hair length, select the desired comb, then glide the clipper against the natural direction of hair growth.

**5.** For clean and precise lines at the temples or neckline, remove the comb attachment, reverse the clipper, and lightly touch the blade to the skin at a 90° angle. Slowly pull the clipper downward for a clean, defined edge.

## Troubleshooting

### **Blades Do Not Move:**

The blades may be obstructed or clogged. Refer to the Cleaning & Maintenance section for detailed instructions on how to clean the blades effectively.

### **Clipper Does Not Turn On:**

Ensure the device is fully charged. A full charge typically takes 2.5 hours for optimal performance.

## Specifications

Input	DC 5V/1A
Rated Power	5W
Battery Capacity	2000mAh
Working Time	200 Minutes
Charging Time	2.5H
Motor Speed	7000RPM
Charging Interface	USB-C
Model Number	LFS165

## **Cleaning and Maintenance**

### **1. Blade Cleaning**

**1.1** Remove any hair buildup using the provided cleaning brush.

**1.2** Gently wipe the blades with a slightly damp cloth. Do not immerse the blades in water or wash them.

### **2. After Each Use**

**2.1** Apply 1-2 drops of oil to the blade surface before and after each use to maintain optimal performance and longevity.

**3.** Store the device and cord in a dry area to ensure their durability.

## **Cautions**

**1.** Do not rinse or submerge the device while it is plugged in, as it is not waterproof.

**2.** Avoid using liquid cleaners or abrasive chemicals that could damage the device.

**3.** Always unplug the appliance before cleaning or storing it.

**4.** Do not store the device in environments with temperatures exceeding 140°F (60°C).

## **Disposal**

This product must not be disposed of as unsorted household waste. It is important to separate such waste for proper treatment and recycling, in compliance with local waste management regulations.



## **Warranty**

Products that you buy directly from our **Porodo** website or shop come with a 24-month warranty.

When you buy **Porodo** products from any of our approved sellers, you only get a 12-month warranty. If you want to extend this warranty, go to our website at **porodo.net/warranty** and fill out the form with your information. Don't forget to upload a picture of the product too. After we've checked and accepted your request, we'll send you an email to confirm that your product's warranty has been extended.

For more info, please check:

**porodo.net/warranty**

## **Contact Us**

If you have any questions about this Privacy Policy, please contact us at:

**info@porodo.net**

Website: **porodo.net**

Service Support: **support@porodo.net**

Instagram: **porodo**