

PORODO



Porodo

Wireless Lavalier Microphones

SKU: PD-LFST188-BK


Table of Contents

Product Introduction	2
Operating Guide	2
1. Microphone	2
2. Receiver	3
Charging Guide	4
Compartment Indicator Guide	4
Troubleshooting	5
Specifications	7
Safety Precautions	8
Disposal	9
Warranty	10
Contact Us	10


Product Introduction

Thank you for choosing our wireless lavalier microphone. This manual is designed to provide you with a comprehensive guide, ensuring you can quickly set up and maximize the functionality of your new device.

 
This product comprises three main components: the microphone, the receiver, and the charging compartment. It offers professional-grade recording and live streaming capabilities with plug-and-play functionality, eliminating the need for any apps. It is suitable for a wide range of applications including online live streaming, VLOG video production, program interviews, recording interviews, video teaching, and more.

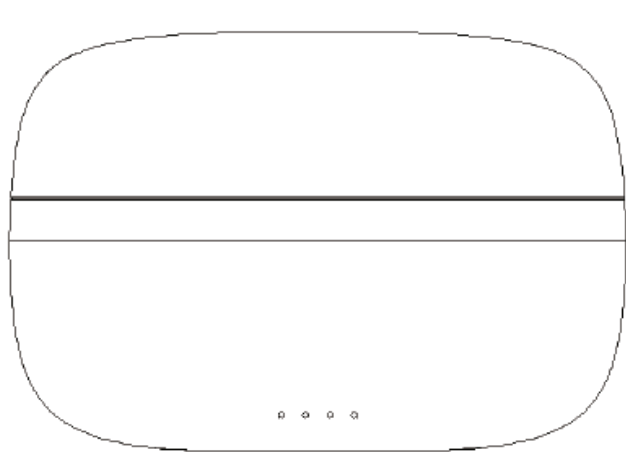

Charging Compartment

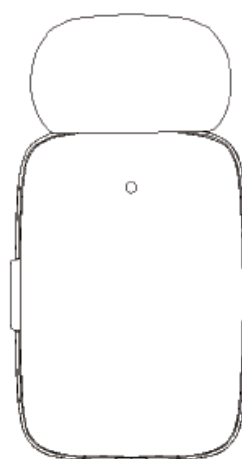 

Microphone

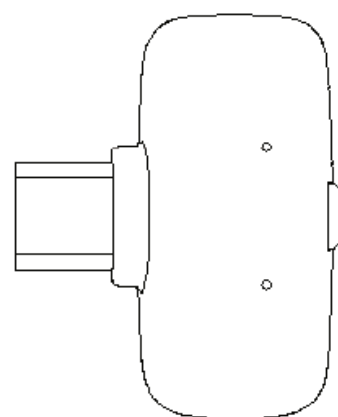 

Receiver

Operating Guide

1. Microphone

Function mode	Button Guide	LED status
Power on	Long press for two seconds or exit the warehouse to turn on the device.	The blue light is on.
Shut down	Long press for two seconds	All lights are off.
Not connected	/	The blue light flashes slowly.
Connected	/	The blue light stays on for a long time.
Mute	Press 2 times	The blue and green lights flash alternately.
Noise reduction	Press 1 times	The blue light represents noise reduction mode is active.
Original sound switching		The green light represents noise reduction mode is active.
Reverberation	Press 3 times	The green light is flashing.
Charging in progress	/	The green light stays on for a long time.
Fully charged	/	All green lights are off.
Low power alarm	/	The green light flashes every 3 seconds.
Low power shutdown	/	The green light flashes three times to shut down.
No connection	/	The device will automatically shut down after 3 minutes of no connection.

When operating in Silent Mode, switching to other modes is disabled. The device will automatically power off after 3 minutes of inactivity or if no connection is established.

2. Receiver


Function mode	Button Guide	LED status
Power on	Plug in your phone	The blue light flashes when the device is connected.
Shut down	Unplug the phone	The ice blue light can be turned off after connecting.
Not connected	/	The ice blue light flashes when connected.
Connected already	/	The ice blue light remains on when connected.
Modulation	Press 1 times	In 1st gear, the green light flashes once.
Default		In 2nd gear, the green light flashes twice.
Second gear		In 3rd gear, the green light flashes three times.
Startup		

Charging Guide



Connecting a Type-C charging cable to the side of the receiver allows simultaneous phone charging and usage.

 Compartment Indicator Guide

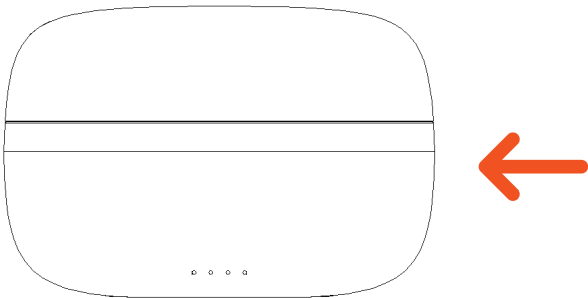

Charging Compartment Indicator Light:
1 LED illuminated: 25% charge
2 LEDs illuminated: 50% charge
3 LEDs illuminated: 75% charge
4 LEDs illuminated: 100% charge

Note: Use a 5V1A Type-C charging port.

Troubleshooting

1. Why can't I record properly after connecting my phone?

1.1 Ensure that the connection indicator lights on both the microphone and the receiver are consistently on.

1.2 Verify that the microphone battery is adequately charged. If the battery level is low, recharge it promptly.

1.3 Some smartphones, such as those from Xiaomi and Huawei, may require a system update. Navigate to:

a. Settings > My Device > Version > Check for updates.

b. Additionally, certain brands like VIVO, OPPO, Realme, OnePlus, iQOO, etc., require the OTG function to be enabled and an external recording device to be activated. Follow these steps:

Step 1: Enable OTG

Go to: Settings > Other Settings > OTG > Enable

Alternatively, search for "OTG" in the settings search bar.

Step 2: Enable External Recording Device

Go to: Settings > Sound and Vibration > More Sound Settings > Default Recording Device > External Device

2. Why can't the microphone record with the device's built-in camera app?

2.1 Certain smartphone brands impose strict system-level restrictions that may prevent external microphones from acquiring audio recording permissions. This limitation is due to the operating system's policies, not the microphone's performance. If this occurs, we recommend contacting the phone manufacturer for further support.

2.2 This microphone is compatible with the majority of third-party recording apps available on the market. If you're experiencing issues, please try using an alternative recording app.

3. Is the recorded sound too low?

3.1 Ensure that the microphone is placed closer to the sound source to prevent distortion. To adjust the volume, press the microphone volume button on the receiver.

3.2 Some smartphone brands, such as VIVO, OPPO, Realme, OnePlus, IQOO, and others, may require the "OTG" function to be enabled and external recording devices to be activated. Please refer to the first point in the FAQ for detailed instructions.

4. What should I do if there is wind noise?

If your model includes a windproof cap, please install it on the microphone to reduce wind noise.

5. What should I do if the phone connected during recording has low battery?

Please connect the charging cable to the charging port on the receiving end to charge the phone during recording.

6. What should I do if there is a response?

Please verify whether the microphone has activated the echo function (indicated by the third light on the indicator). If the echo is enabled, press the multifunction button to deactivate it. Then, navigate to the song request interface in the live broadcast room and set the audio to the original sound in the tuning options.

7. What should I do if there is an echo during the live broadcast?

To avoid an echo during your live stream, please ensure that the sound on your mobile phone is turned off. If the sound is not muted, mobile phones within the same space can cause echo effects, as they are unable to play sound while you are live streaming.

a. Charging Case

Case Battery Capacity	250mAh
Working Time	33H
Recharge Time	1H

b. Microphone

Latency	<22ms
Frequency Response	100Hz-15kHz
Sensitivity	-38dB
SNR	-58dB
Battery Capacity	60mAh
Working Time	4H
Recharge Time	0.5H

c. Receiver

Latency	<22ms
Frequency Range	2.4GHz
Frequency Response	100Hz-15kHz

Safety Precautions

- 1.** This product contains strong magnets. To avoid the risk of magnetization, please keep it away from magnetic cards, credit cards, implantable medical devices (such as pacemakers), hard drives, RAM chips, and any other devices that could be affected by magnetism.
- 2.** It is crucial to prevent the product from coming into contact with any liquids. Avoid immersing the product in water or exposing it to wet conditions. Additionally, do not use the product in environments with high humidity or in rainy weather. Exposure to moisture could lead to internal corrosion, potentially causing spontaneous combustion or even an explosion of the battery.
- 3.** In the event of a fire, immediately use water, water mist, sand, fire blankets, or carbon dioxide fire extinguishers to suppress the flames. Select the appropriate fire suppression method based on the severity of the situation and the specific circumstances.
- 4.** The product should be used in an environment with a temperature between -10°C and 45°C . For optimal performance, the charging environment temperature should be within the range of 5°C to 45°C .
- 5.** Disassembling the product is strictly prohibited. If the battery is punctured during disassembly, it can cause the leakage of hazardous electrolytes and may result in a fire or explosion.
- 6.** Avoid subjecting the product to mechanical impacts, crushing, or throwing. Do not place heavy objects on top of the product.
- 7.** Do not place the product on or near accessories, or inside heating equipment such as microwave ovens, battery-operated ovens, electric heaters, pressure cookers, or gas stoves. This is to prevent overheating, potential battery failure, and risk of explosion.
- 8.** It is prohibited to place the product near heat sources such as stoves, heaters, or in a car on hot days. Additionally, do not store the product in an environment where the temperature exceeds 60°C .
- 9.** To maintain the longevity of the battery, avoid storing it for extended periods

after it has been completely discharged. Storing the battery in an over-discharged state can cause permanent damage to the battery cells, making it impossible to restore functionality.

10. Always use the original, compatible charging case, data cable, and battery as specified.

11. Using unverified or incompatible charging cases, data cables, or batteries may lead to electric shock, fire, explosion, or other hazards.

Disposal

This product must not be disposed of as unsorted household waste. It is important to separate such waste for proper treatment and recycling, in compliance with local waste management regulations.



Warranty

Products that you buy directly from our **Porodo** website or shop come with a 24-month warranty.

When you buy **Porodo** products from any of our approved sellers, you only get a 12-month warranty. If you want to extend this warranty, go to our website at **porodo.net/warranty** and fill out the form with your information. Don't forget to upload a picture of the product too. After we've checked and accepted your request, we'll send you an email to confirm that your product's warranty has been extended.

For more info, please check:
porodo.net/warranty

Contact Us

If you have any questions about this Privacy Policy, please contact us at:
info@porodo.net

Website: **porodo.net**

Service Support: **support@porodo.net**

Instagram: **porodo**