

LèPRESSO



LePresso
Drip Coffee
Machine BS plug 0.75L

SKU: LPDRPCOFM

Table of Contents

Safety Guidelines.....	2
Features.....	4
Schematic View.....	4
Specifications.....	5
Before First Use.....	5
Operation Guideline.....	5
Cleaning and Maintenance.....	6
Descaling.....	7
Tips.....	8
Safe Disposal.....	8
Warranty.....	9
Contact Us.....	9

Before using the product, please carefully read this User Manual to guarantee correct usage and keep it secure for future reference.

Safety Guidelines

When utilizing electrical appliances, adherence to the following fundamental precautions is essential:

- 1.** Thoroughly review all provided instructions before use.
- 2.** Refrain from using any appliance that presents with a damaged cord or plug or exhibits any malfunction or damage in any form. Should such conditions be observed, promptly return the appliance to an authorized service facility for professional examination, repair, or adjustment.
- 3.** If the power supply cord is found to be damaged, it is crucial that it be replaced solely by the manufacturer, its service agent, or another individual with comparable qualifications to prevent any potential hazard.
- 4.** To prevent fire, electric shock, or injury, do not immerse the cord, plug, or appliance itself in water or any other liquids.
- 5.** This appliance is not designed for operation by children. Always keep the appliance and its cord out of children's reach.
- 6.** Disconnect the appliance from the power source when not in use and before disassembling, as well as before cleaning. Allow the appliance to cool before attaching or detaching components.
- 7.** Employing accessories not approved by the appliance manufacturer may lead to a risk of fire, electric shock, or injury to individuals.
- 8.** Exercise caution when interacting with the appliance's sharp blades.
- 9.** Keep your fingers at a safe distance from any moving components.
- 10.** Before operation, inspect the grinding chamber to ensure no extraneous objects are present.
- 11.** Incorrect use of the appliance could lead to potential harm.
- 12.** Under no circumstances should the appliance be submerged in any liquid.

- 13.** This appliance is not designed for outdoor use.
- 14.** Prevent the power cord from draping over the edge of the counters or coming into contact with hot surfaces.
- 15.** Avoid placing the appliance near any source of high heat, such as a lit gas or electric burner, or inside an oven.
- 16.** The appliance should be utilized solely for its intended purposes.
- 17.** Do not place a hot container on top of surfaces that are either hot or cold.
- 18.** Ensure that the coffee maker is never operated without water.
- 19.** The container provided is specifically designed for use with this appliance and should not be used on a stovetop.
- 20.** Refrain from cleaning the container with harsh cleansers, steel wool pads, or other abrasive materials.
- 21.** To disconnect the appliance, first set any controls to the "Off" position, then remove the plug from the wall outlet by grasping the plug itself. Never pull on the cord to disconnect.
- 22.** Opening the water tank lid while brewing may result in scalding due to steam. Exercise caution to avoid steam burns.
- 23.** As certain parts of the appliance become hot during use, avoid direct contact with hands. Use the knobs or handles provided.
- 24.** Do not use the appliance if the container is cracked or the handle is loose or compromised, as it may be fragile and could result in injury or breakage. The jug should only be used in conjunction with this appliance.
- 25.** Supervision of children is necessary to prevent them from playing with the appliance.
- 26.** Individuals with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, may operate the appliance provided they are under supervision or have been instructed on how to use it safely and understand the associated risks.
- 27.** The intended use of this appliance encompasses household and


comparable settings, which include:

- A.** Staff kitchen areas within retail shops, offices, and other professional spaces.
 - B.** Farmhouses.
 - C.** Accommodations in hotels, motels, and other residential establishments.
 - D.** Bed and breakfast venues and similar hospitality environments.
- 28.** This appliance features a grounded plug for safety. Confirm that the wall outlet in your home is properly grounded.
- 29.** Retain these instructions for future reference.

Features

- 1.** The carafe and funnel are safe for dishwasher cleaning.
- 2.** Versatile usage options:
 - a.** Drip coffee brewing method
 - b.** Pour-over coffee brewing method
- 3.** Certification: Meets LFGB and FDA standards for food safety.
- 4.** The automatic shutdown feature activates after 40 minutes.

Schematic View

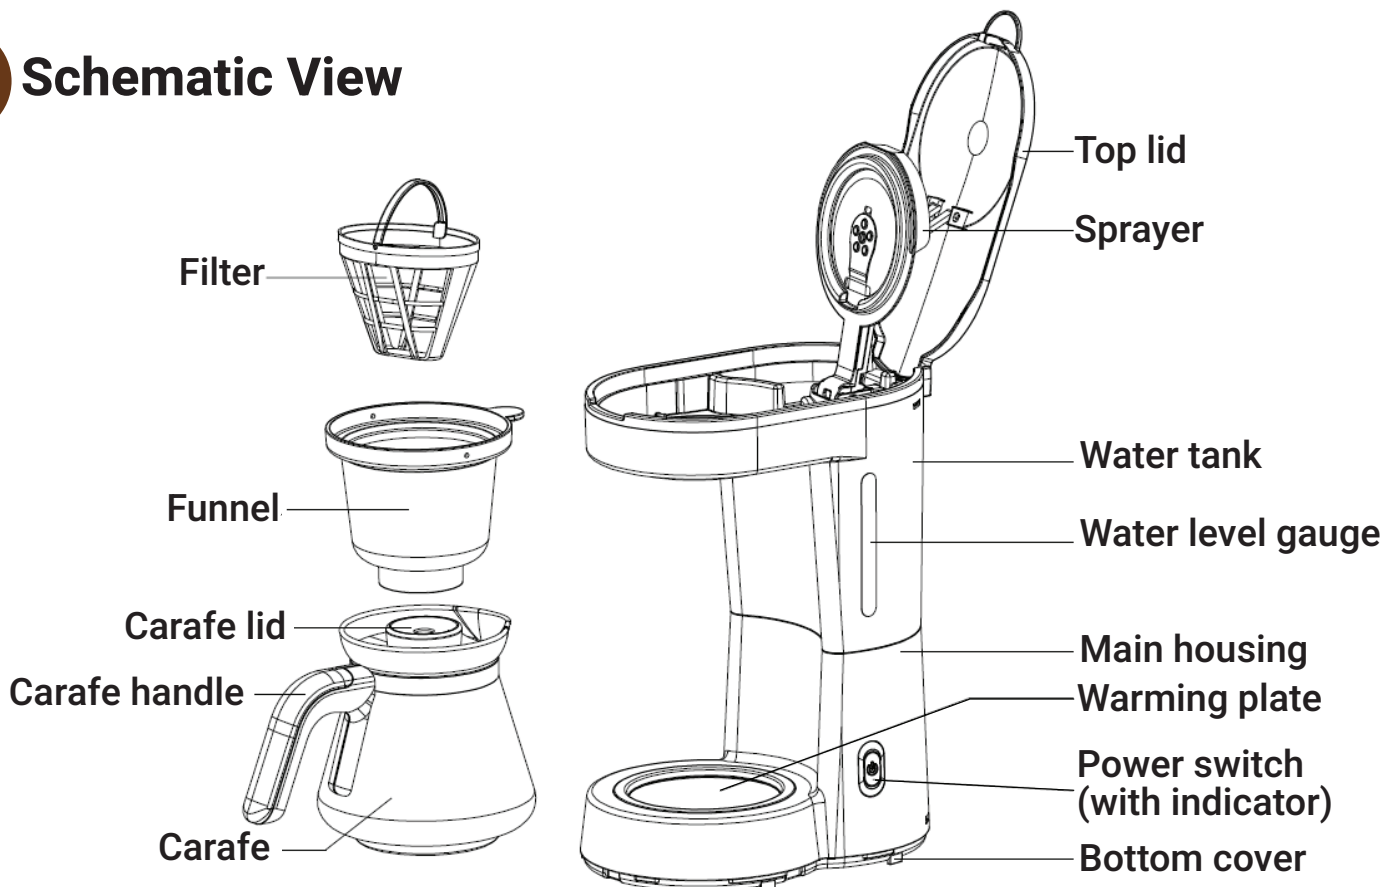

Specifications

Model	LPDRPCOFM
Operating Voltage	240-220V~ 60-50Hz
Power	700W
Water Tank Capacity	0.75L
Dimensions	286×144×220mm
Net Weight	3kg

Before First Use

Ensure all accessories are present and the unit is undamaged. Fill the water tank to the MAX indicator and cycle plain water through the machine several times without coffee. Afterward, dispose of the water. Thoroughly rinse all removable components with water.

Operation Guideline

1. Open the lid and pour fresh water into the water tank, ensuring the level does not surpass the MAX indicator on the water gauge.
2. Place the desired amount of coffee powder into the filter, adjusting the quantity to suit your taste preferences. Typically, a level spoonful per cup is sufficient. Place the coffee powder into the funnel, ensuring the funnel is positioned correctly to secure the top lid in place. Then, close the top lid.
3. Position the carafe on the warming plate, aligning it horizontally.
4. Connect the power cord to the electrical outlet.

5. Activate the machine by pressing the power switch. Upon doing so, the indicator light will turn on, signaling that the appliance is in operation.
6. The brewing process may be paused at any time by pressing the Power switch again and will resume with another press.

Note: The carafe can be removed to pour and serve coffee during brewing without issue; however, this should not exceed 30 seconds to prevent the coffee from continuing to drip.

7. Once brewing is complete, you may serve the coffee approximately one minute after the dripping stops.

Note: The volume of coffee produced will be slightly less than the water added, as the grounds absorb some water. Avoid touching the lid, warming plate, and other parts of the machine during use, as they can become extremely hot.

8. If immediate service is not required, the coffee can remain on the warming plate to stay warm. The machine will turn off automatically 40 minutes after the Power switch has been activated if not turned off manually.

Note: For best results, serve the coffee soon after brewing to enjoy it at its freshest.

9. Always power off and unplug the coffee maker when not in use.

10. Exercise caution when pouring freshly brewed coffee, as it will be hot and may cause burns.



Cleaning and Maintenance

Caution: Ensure this appliance is disconnected before initiating any cleaning procedures. To avoid the risk of electrical shock, the cord, plug, or unit must not come into contact with water or any other liquid. Confirm the plug has been withdrawn from the electrical outlet before cleaning.

1. After each use, disassemble any removable components and cleanse them thoroughly in warm, soapy water.

- 2.** To eliminate any marks, gently pass over the product's outer surface with a soft, moistened cloth.
- 3.** Accumulation of water droplets may occur near the funnel area, leading to potential dripping onto the base of the product while in operation. To control the dripping, wipe off the area with a clean, dry cloth after each use.
- 4.** Clean the warming plate with a damp cloth. Abrasive cleaning agents are strictly prohibited as they may damage the appliance.
- 5.** Upon completion of cleaning, reassemble all components in preparation for subsequent use.

Descaling

To ensure efficient operation of the device, it's crucial to periodically remove the mineral deposits that accumulated from water from the surface of the appliance. The frequency of this maintenance depends on the water quality in your area and frequency of use.

We recommend the following steps to perform the descaling task:

- 1.** Fill the reservoir with water and a descaling agent up to the MAX indicator. Adhere to a water-to-descaler ratio of 4:1, as specified in the descaler's accompanying instructions. For an alternative solution, citric acid (available at pharmacies or drugstores) may be used at a ratio of 100 parts water to three parts citric acid (100:3).
- 2.** Confirm that the filter is devoid of any coffee residue.
- 3.** Activate the appliance by pressing the power switch; this will be indicated by a light.
- 4.** Allow the machine to process two cups of the descaling mixture.
- 5.** To halt operation, press the Power switch once more, ensuring the descaling solution remains within the unit for a minimum of 15 minutes.
- 6.** Power on the appliance again and repeat steps 3 to 5 at least three times to ensure thorough descaling.
- 7.** Following descaling, operate the coffee maker with tap water, without

coffee powder, repeating steps 3 to 6 three times. It is not necessary to wait for 15 minutes during step 5 for these cycles. Continue this process until the reservoir is empty.

Tips

- 1.** Maintaining a clean coffee maker is crucial for brewing delicious coffee. Adhere to the cleaning guidelines provided and always use fresh, cold water in the coffee maker.
 - 2.** Store any unused coffee powder in a cool, dry environment. Upon opening a package of coffee powder, ensure it is sealed tightly and kept in the refrigerator to preserve its freshness.
 - 3.** For the freshest-tasting coffee, purchase whole coffee beans and grind them just before brewing.
 - 4.** Avoid reusing coffee powder as it significantly diminishes the coffee's flavor. Additionally, reheating coffee is not advised as the peak flavor is experienced immediately after brewing.
 - 5.** Clean the coffee maker if there is any oiliness after brewing, which can occur due to over-extraction. This oiliness is characterized by small oil droplets on the surface of the brewed coffee, resulting from the oils extracted from the coffee powder.
- Note:** The oiliness may be more pronounced when using heavily roasted coffee beans.

Safe Disposal

Comply with local regulations regarding the disposal of electrical devices. This product must not be treated as common household waste.

Warranty

Products that you buy directly from our **LePresso** website or shop come with a 24-month warranty.

The 24-month warranty applies to products purchased directly from our **LePresso** website or store. If **LePresso** products are bought from any of our verified retailers, then the product is eligible for only a 12-month warranty. To extend your product's warranty, visit our website <https://www.lepresso.com/warranty> and fill in your details in the provided form along with an uploaded picture of the product to process your request. Once approved, you will receive a confirmation email of the extended product warranty. Upload the required information within 48 hours of purchase to be eligible for a 24-month warranty period.

For more info, please check:
<https://www.lepresso.com/warranty>

Contact Us

If you have any questions or concerns about our Shipping and Returns Policy, please contact us at: info@lepresso.com

Website: <https://www.lepresso.com/>

Instagram: [lepresso_official](#)