



Porodo Lifestyle Mini Steam Iron
1000W UK With Rotatable handle
SKU: PD-LMSIRH

Before using the product, please carefully read this User Manual to guarantee correct usage and keep it secure for future reference.

Caution

1. Please ensure you read this manual thoroughly before use.
2. Prior to usage, verify that the product's voltage aligns with your local supply.
3. Avoid operating the product beyond the specified scope.
4. The use of this product is not recommended for individuals suffering mental or physical disabilities, children, and individuals lacking related operational experience or knowledge, unless under the guidance of someone responsible for their safety who can provide instruction as outlined in this manual.
5. Exercise caution and do not allow children to play with product.
6. Ensure the device is allowed to cool before handling and avoid placement in areas accessible to children.
7. The product should rest on a stable, level surface to ensure safety.
8. Do not introduce any chemical agents, fragrances, or cleaning products into the water reservoir.
9. Do not pour vinegar or other dirt cleaners into the water storage tank.
10. Prohibit the use of chemical additives, flavors or detergents.
11. Please pull out the power cord from the socket before adding water or pouring out the residual water. Ensure the power is disconnected before beginning any maintenance or cleaning.
12. When ceasing use, especially after ironing, remove the plug from the electrical outlet.
13. Do not violently pull the cable or the plug when unplugging the device. If the power cord is damaged or if the product experiences water leakage, cease use immediately and do not reconnect to power.
14. Do not immerse the product to water or other liquids. Do not touch the product with wet hands.
15. Do not expose the product to rain or sun.
16. Handle the product with caution to prevent the generated hot steam from burning the user, particularly when turning the device upside down or when interacting with its components

Warning

1. The steam emitted from this product is at a high temperature. To prevent

- scalding, avoid directing the steam towards any person.
- 2. Do not loop the power cord around the table or allow it to come into contact with any heat source.
 - 3. If the product is damaged, discontinue use immediately. Do not attempt to disassemble it yourself as incorrect reassembly may lead to a risk of leakage during operation.
 - 4. To prevent circuit overload, avoid operating other high-power electrical appliances simultaneously.
 - 5. Ensure this manual is stored in a safe place for future reference.
 - 6. Exercise caution when using the device to avoid the risk of injury from steam splashes.
 - 7. Before filling with water or cleaning, make certain that the power plug is disconnected from the outlet.

Instructions for Use


After usage, remove the water tank and allow the appliance to run for approximately 10 seconds until no more steam is emitted. Subsequently, switch off the power and let the device cool to room temperature before storing or handling further.

Specifications

Product Name	Porodo Lifestyle Mini Steam Iron 1000W UK with Rotatable handle
Model	PD-LMSIRH
Rated Voltage	~ 220 to 240V
Rated Frequency	50/60 Hz
Rated Power	1000W

Schematic View of Porodo Lifestyle Mini Steam Iron

- A. Base
- B. Steam Panel
- C. Switch Button
- D. Indicator Light
- E. Rotating Handle
- F. Water Inlet
- G. Water Tank

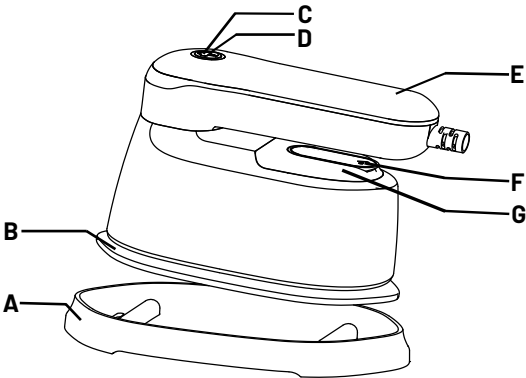

Product Preparation Before Use

1. Remove any labels or protective covers from the steam head. Straighten and sort the wires before the first use, and run the steamer for a few minutes to eliminate any residual impurities or odors from manufacturing.
2. To prevent circuit overload, do not operate this appliance on the same electrical socket as other high-powered appliances.
3. Upon receiving your package, please verify the contents against the provided list to ensure no items or parts are missing.

Operating Settings

This appliance features three steam settings:

1. The first setting, indicated by a red light, is for dry ironing.
2. The second setting, shown by a green light, emits a small amount of steam for standard ironing.
3. The third setting, represented by a blue light, generates a robust steam output for heavy-duty ironing tasks.

Usage Guideline



1. Unbox the product.
2. Fill the water tank with up to 120ml of water using the provided measuring cup.
3. To start using the product, press the switch button to turn the device on. The red indicator light will flicker, signaling that the steam panel is heating up. If pressing the button yields no response, ensure that the product is connected to power. Once the red indicator light remains steadily on, indicating that the temperature has reached the set point, the device is in dry ironing mode.
4. As the Indicator light is red and steady, press the power button again to activate the second steam setting. The indicator light will transition from red to green, generating a small amount of steam.
5. Pressing the button once more activates the third steam setting, changing the light from green to blue and producing a larger volume of steam.
6. Press the button yet another time; the indicator light will revert to red,

returning the device to the first steam setting which is dry ironing mode.

7. Holding the power button for two seconds (2 sec) causes all indicator lights to flash, signaling the initiation of the dryironing mode. If the device runs out of water, it will automatically shut off after 50 seconds of operation, and the lights will blink alternately.

8. After use, ensure the machine is placed on its bottom to avoid scalding clothing.

9. Allow the machine to cool down before emptying the water.

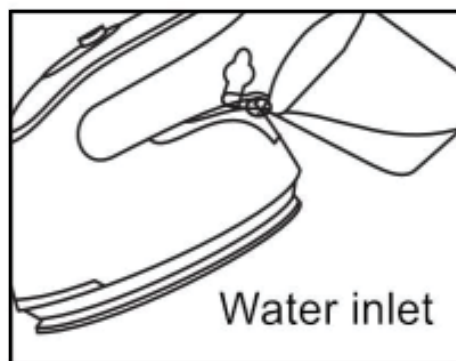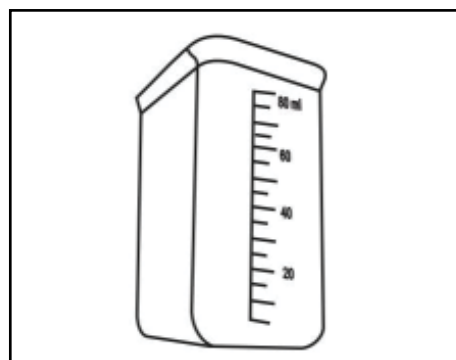

Maintenance and Descaling

1. Remove the plug. Wipe the panel and other parts with a soft cloth after it has cooled sufficiently.
2. If there's significant contamination, please wipe with a soft cloth dipped in a neutral detergent.
3. Due to the high mineral content of water sources in many areas, sediment accumulation is a common issue. The residue of minerals can cause the steam to be ejected intermittently or even prevent it from ejecting steam. The following methods can effectively reduce sediment accumulation. If you are not using mineral-free water or distilled water, we recommend that you clean up the sediment according to the following steps every month:
 - 3.1 Add a 50 % vinegar and 50 % water mixture into the water tank.
 - 3.2 Turn on the power supply, press the steam switch, and let the mixture enter the heating body. Then, pull off the plug, waiting for about 40 minutes.
 - 3.3 Pour out the remaining mixture from the water tank and add clean water.
 - 3.4 Turn on the power and press the steam switch to let the water enter the heating body.
 - 3.5 Repeat several times until the sour taste is removed.

Troubleshooting

Problem	Possible Cause	Solution
Device does not work	The plug is not securely plugged or the switch is burnt out.	Check the plug
No steam is emitted.	1. Insufficient heating. 2. The water level in the tank is too low. 3. The steam switch was not pressed.	1. Do not use until the power indicator is off. 2. Add water to the tank. 3. Press the steam switch fully.
Water leakage from the nozzle.	The product may not be used vertically	1. Ensure the water level does not exceed the maximum mark. 2. Keep the steamer upright as indicated by the instructions in the manual.
Water leakage from the water tank.	The water tank valve is not installed properly.	Inspect the water tank.
The device discharges yellow colored water.	There is residual water in the body after use.	After use, empty the water tank and continue heating for 10 seconds until there is no steam.

The above are standard fault analysis and troubleshooting methods. Please review them carefully before use.

Warranty

*Products that you buy directly from our Porodo website or shop come with a 24-month warranty.

*When you buy Porodo products from any of our approved sellers, you only get a 12-month warranty. If you want to extend this warranty, go to our website at <https://porodo.net/warranty> and fill out the form with your information. Don't forget to upload a picture of the product too. After we've checked and accepted your request, we'll send you an email to confirm that your product's warranty has been extended.

For more info, please check:

porodo.net/warranty

Contact Us

If you have any questions about this Privacy Policy, please contact us at:

info@porodo.net

Website: **porodo.net**

Service Support: **support@porodo.net**

Instagram: **porodo**