

porodo



Lifestyle Portable Vacuum Cleaner 11-12Kpa

SKU: PD-LSPVC

Table of Content

Safety Instructions	2
Caution	2
Batteries and Charging	2
Shipping Instructions	3
Schematic View	4
1. Structure of Main Unit	4
2. Accessories	5
Installation Guide	5
User Guide	6
Charging	6
Precautions in Use	6
Guide for Using Accessories	7
Maintenance	8
1. Cleaning the Main Unit	8
2. Cleaning the Dust box	9
3. Cleaning the Filter	9
4. Installing the Pre-filter	10
5. Cleaning the Rolling Brush	10
Specification	11
Troubleshooting	12
Instructions for Battery Disposal	12
Warranty	13
Contact Us	13

Please review these instructions thoroughly before using the product. Store these instructions in a secure location for future reference.

Safety Instructions

Caution

1. Do not use the product outdoors or in commercial and industrial environments.
2. Avoid storing this product in your car's boot or other vehicle departments to prevent exposure to extreme temperatures, which impacts the battery's life.
3. Do not operate the product at temperatures above 40°C, temperatures below 4°C, or in damp conditions.
4. The product should not be used by individuals with physical, mental, or sensory impairments, nor by children, without adult supervision.
5. Keep the product's rotating parts away from the reach of children and pets during operation to prevent injury.
6. Do not contact the product and the power adapter plug with wet hands.
7. The product is not designed to vacuum liquids (such as water or soft drinks), burning items (like cigarette butts), or hard and sharp objects (including decorative soil, glass, or nails).
8. Follow the provided instructions when using the product. The user is responsible for any damage resulting from improper use.
9. This product is suitable for use at altitudes of up to 3,000 meters.

Batteries and Charging

1. This product must only be charged using the specified "ZH015265050CNWH" power adapter. Do not use third-party batteries, power adapters, or charging stands.
2. Do not disassemble, repair, or modify the battery, power adapter, or charging stand on your own.

3. Avoid charging or positioning the charging stand near sources of heat or moisture, such as radiators or bathrooms.
4. Do not clean the power adapter or charging stand with a wet cloth or while your hands are wet.
5. The disposal of the battery should be handled by a professional recycling organization; do not discard it at will.
6. If the power cord is damaged, stop using the product immediately and reach out to customer service for help.
7. If the product will not be used for an extended period, disconnect the power adapter after the device is fully charged, and store the product in a cool, dry place. Recharge the battery at least once every three months to prevent over-discharging.

Shipping Instructions

1. When preparing for shipping, ensure the power adapter is unplugged after the battery is fully charged, and store the product in a cool, dry place.
2. Use the original packing to transport the product.

Maintenance


Ensure the filter is cleaned with tap water at least monthly; refer to the Maintenance and Care section for more details.

Note :

The company retains the authority to modify and interpret this manual. The contents of this manual may be updated at any time without prior notice.

Schematic View

1. Structure of Main Unit

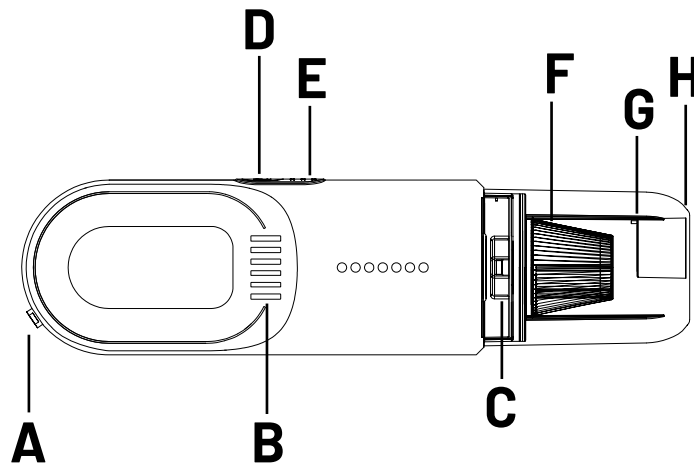

A: Charging Port

B: Air Outlet

C: Clasp

Rotate to separate the dust storage cylinder from the body of the device.

D: Power Button (ON/OFF button)

The Porodo Lifestyle Portable Vacuum Cleaner operates on two different speeds, namely, speed I and speed II.

1. First button: The device operates with speed I (slow speed).

2. Second button: Device operates with speed II.

3. Third button: press the third button to stop vacuuming.

E: Battery Indicator







F: Filter

G: Backflow Baffle

H: Dust Box

2. Accessories


The accessory items may vary depending on the type of packaging. Please refer to the information displayed on the website, or contact us.

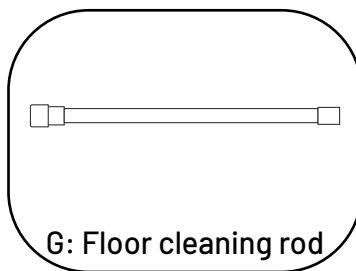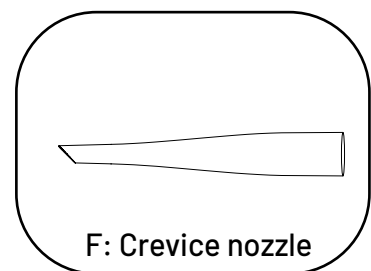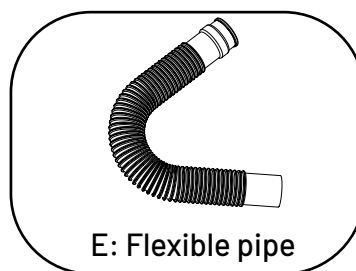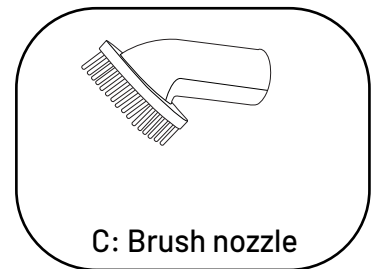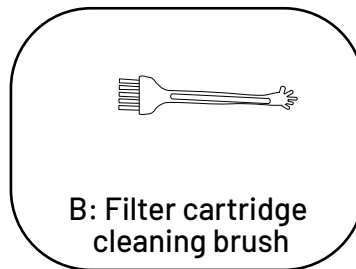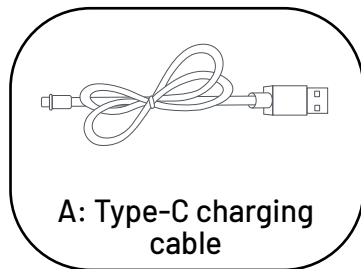

Installation Guide


Method 1:

Connect the main unit to the rod and then to the brush head.

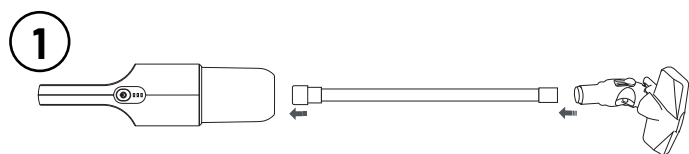

Method 2

Attach the main unit to the suction nozzle and then connect the brush.

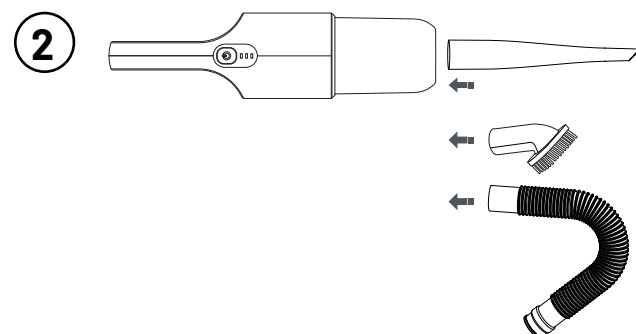

User Guide

1. Starting the Hoover

Turn ON the vacuum cleaner by holding the switch for 3 seconds.

2. Operating modes

After turning ON the device, proceed by pressing the "switch button" to choose from three different modes including "standard", "acceleration", and "shutdown".

Note:

The device will return to the default standard mode after charging or shutting down.

3. Stopping the Device


Upon starting the device in standard mode, single pressing the switch changes the gear to accelerate mode. Additionally, double pressing the switch shuts the device down.

Charging

The vacuum can be charged directly from the power adapter.

Please note the following items:

1. The device does not operate while charging.
2. Operating the device in acceleration mode for long duration results in a rise in the temperature of the battery. In this case, recharging the device might be prolonged.

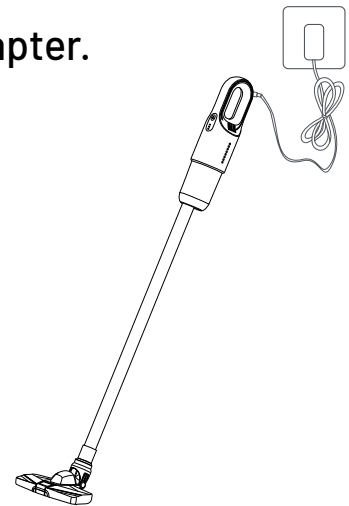

Precautions in Use

1. When using a handheld hoover with a floor or bed brush attachment, certain fabrics may become entangled or difficult to push. If this occurs, use a brush or crevice nozzle instead.
2. Before vacuuming highly polished floors, check that the fiber brush is free from objects that could scratch the floor.

3. Before using the handheld Hoover, make sure the dust box, internal cyclone assembly, pre-filter, and HEPA filter are all in place.
4. Do not block the exhaust port while vacuuming.
5. For fine dust such as flour and decorative dust, use the Hoover.
6. Avoid using the Hoover to pick up sharp and hard objects, small toys, pins, paper clips, etc., to prevent damage to the Hoover and the floor.
7. Pay special attention to personal safety when using the product to clean dangerous areas such as stair edges and windows.
8. Do not place the product on high places such as tables, chairs, or lean on other objects to avoid damage caused by slipping or tipping.
9. The movement of the Hoover brush may cause an uneven surface gloss on waxed floors, so wipe the floor with a damp cloth and polish with floor wax.

Cleaning the Drum

1. If the brush head becomes clogged with a large object or an excessive amount of hair, the drum will have trouble moving and will require prompt cleaning.
2. Ensure the brush head is detached from the main unit prior to removing any tangled debris. This precaution helps to prevent accidental activation of the machine, which could lead to personal injury.
3. Exercise caution when extracting foreign objects from the drum, particularly when using sharp instruments.

Guide for Using Accessories

1. **Crevice Suction Head:** Ideal for cleaning small spaces such as doorframes, windows, and staircases.
2. **Brushes:** Perfect for cleaning upholstered furniture like sofas and seats.

Tip:

The brush can also be used alone to dust off the main unit, including the electric brush head.

3. Flexible Pipe: Designed to remove dust from hard-to-reach corners and crevices that standard suction nozzles can't reach.

4. Filter Element Cleaning Brush: Used for removing dust from the vacuum cleaner's filter screen.

5. Floor Brush: Effective for cleaning various floor surfaces including tiles and hardwood.

Precautions

1. Utilize the high-speed setting when employing the floor brush for optimal results.
2. Exercise caution when using floor brushes on surfaces prone to wear, such as delicate hardwood or soft stone floors.

Maintenance

1. Ensure you utilize original parts for your device to maintain eligibility for warranty services.
2. If the filter or suction head becomes clogged and the fan ceases to operate effectively, promptly clean both the filter and the suction head.
3. For periods when the product is not in use:
 - 3.1 Disconnect the power adapter after charging the device fully.
 - 3.2 Store the device in a location that is cool and dry, away from direct sunlight and humidity.
 - 3.3 Recharge the battery every three months to prevent it from over-discharging.

1. Cleaning the Main Unit

Clean the main unit using a soft dry cloth. do not expose the unit to liquids or wash.

2. Cleaning the Dust box

- 2.1 Ensure the power adapter is unplugged and the handheld Hoover is turned off before cleaning the dust box.
- 2.2 Empty the dust box when it reaches the "MAX" fill line to maintain optimal vacuum performance
- 2.3 To empty the dustbin, check the latch, rotate the dust collection bucket to open it, and then pull it outward to remove.
- 2.4 Take out the filter element before removing the dust bucket.
- 2.5 Rinse the dust container with clean water.
- 2.6 It is recommended to clean it at least once a month.

Note:

If the conductive parts are dirty, wipe them with a soft dry cloth, and do not use water.

Caution

- 1. Do not use detergents, polishes, or air fresheners to clean the dust container.
- 2. Do not place the dust container in a dishwasher or similar appliances for cleaning.

3. Cleaning the Filter

We recommend cleaning the filter at least once a month.

- 3.1 Before cleaning, make sure the product is unplugged which prevents the device from being turned on while being cleaned.
- 3.2 Regularly inspect and clean the pre-filter and cyclone assembly to maintain optimal performance.
- 3.3 The filter may require more frequent cleaning when cleaning fine dust or in case the dust box has reached the maximum capacity.
- 3.4 Steps to clean the filter:
 - 3.4.1 Detach the dust collector from the unit.
 - 3.4.2 Remove the bulk of the debris.

3.4.3 rinse the filter and cyclone assembly with cold water.

3.4.4 After rinsing, allow the filter and cyclone assembly to air dry completely for at least 24 hours.

3.4.5 Once the filter is completely dry, install it in the main unit.

Caution

1. Do not clean the filter in a dishwasher or washing machine.

2. Do not dry the filter using a tumble dryer, microwave, or any direct heat sources.

4. Installing the Pre-filter

4.1 Position the filter screen facing upwards.

4.2 Insert the filter screen into the dust collector.

4.3 Slide the filter element into the dust box, ensuring it sits evenly.

4.4 Gently move the dust collector box, then slide it towards yourself.

4.5 Check the position of dust box and rotate until a 'click' sound is heard, meaning the box is now securely in place.

5. Cleaning the Rolling Brush

5.1 Regular inspection and cleaning of the rolling brush are essential for maintaining its performance.

5.2 Always detach the brush head from the main unit to prevent accidental activation, which could result in injury.

Caution

The rolling part of the bed brush requires separate removal and cleaning. Avoid using water on the electrical components in the bed and floor brushes, as well as on the bearings within the rollers.

1. Turn the brush head upside down and slide the latch down on the side to release it.

2. Rotate the end cap to an open position, then, gently remove the roller from the vacuum.

3. Detangle and remove hairs from the roller and clean the end cap separately.

4. After cleaning, reattach the end caps to the roller.

5. Once the end caps are secured, pull the roller into position and slide the latch upwards to lock the brush head in place.

Specifications

Product Name					Porodo Lifestyle Portable Vacuum Cleaner 12-11Kpa			
Product SKU					PD-LSPVC			
Power at High Gear					11 to 12KPa			
Working Time (In high gear)					~10 min			
Power at Low Gear					6.5 to 7.5KPa			
Working Time (In low gear)					~25 min			
Rated Power					~100 W			
Battery Voltage					11.1V			
Charging Time					5 to 6 hr			
Dust Box Capacity					~ 0.4 L			
Battery					2000 or 2500 mAh (Lithium battery)			
Noise					65 to 75 dB			
Filter					HEPA			
Material					ABS			
Fan Blade Material					Aluminum			
Retail Packing Net. Weight					1.1 kg			
Retail Packing Gross Weight					1.3 kg			
Carton Net. Weight					7.8 kg			
Carton Gross Weight					8.8 kg			
Carton Unit Weight					6 kg			
Dimensions								
Retail Packing					0.013832775 m3			
Carton					0.094488 m3			
					Height (cm)	Width (cm)		Depth (cm)
Product					98	22.5		12.5
Package					99	62.1		22.5
Carton					32	63.5		46.5
Certifications								
EMC	FCC	RoHS	From E	LVD	R & TTE	REACH	LFGB	

Troubleshooting

Problem	Solution
Unable to start	<ol style="list-style-type: none">1. The switch button was not pressed long enough. Press and hold the switch for at least 3 seconds to start the device.2. The battery level is low or the battery is out of charge. Charge the device before starting to use it.3. The charging cable is not unplugged. The device does not start while being plugged into a power source, that is when charging.
Unable to charge	<ol style="list-style-type: none">1. The device is overheated and the temperature of the battery is high. Place the device in a cool place and wait for the product to cool down before charging.2. The charging cable is not plugged into the socket properly.3. The charging cable or the adapter are damaged and need to be replaced.
Reduced suction	<ol style="list-style-type: none">1. The battery level is low. Recharge before using the device.2. The filter was exposed to moisture. Check the filter to be completely dry.3. The dust box is full or the filter screen needs cleaning.4. The brush head is clogged. Check and clean the brush, nozzle, or cleaning rod.5. The filter is old and should be replaced. A low ventilation rate affects the function of the device.

Instructions for Battery Disposal

The lithium-ion batteries in this product contain substances that could be harmful to the environment and must be taken to a professional battery recycling facility for disposal. The instructions below are solely for battery disposal and are not for routine maintenance.

Removing the Battery

1. Empty the dust box and remove the three screws from the interior of the main unit where the batteries are located.
2. Detach the gear cutter button and unscrew the screws beneath it.

3. Lift off the handle cover and the screws at the base.
4. Disconnect the three connectors on the battery to remove it.

Caution

1. Ensure the battery is fully charged and the adapter is unplugged before removal.
2. When disconnecting, be cautious to prevent the positive and negative terminals from touching, as this could cause a short circuit.
3. Avoid damaging the battery casing as it could lead to short circuits or leakage of harmful substances.
4. If battery fluid makes contact with skin, rinse thoroughly with water and seek medical advice immediately.

Warranty

Products that you buy directly from our Porodo website or shop come with a 24-month warranty.

When you buy Porodo products from any of our approved sellers, you only get a 12-month warranty. If you want to extend this warranty, go to our website at **<https://porodo.net/warranty>** and fill out the form with your information. Don't forget to upload a picture of the product too. After we've checked and accepted your request, we'll send you an email to confirm that your product's warranty has been extended.

For more info, please check:

porodo.net/warranty

Contact Us

If you have any questions about this Privacy Policy, please contact us at:

info@porodo.net

Website: **porodo.net**

Service Support: **support@porodo.net**

Instagram: **[porodo](https://www.instagram.com/porodo)**