

porodo



Porodo

LifeStyle Rechargeable LED display

Hair Clipper With Two Cutting Modes 1200mAh

SKU: PD-LSRDHC

Table of Contents

Specifications.....	2
Features.....	2
Powering The Device.....	3
Installation Instructions.....	3
A. Disassembly of the Shaving Head	3
B. Assembly of the Shaving Head.....	3
Cleaning and Maintenance.....	3
1. Cleaning.....	3
2. Lubrication of Cutter Head.....	4
Guide Comb.....	5
Charging Instructions.....	6
Safety Precautions.....	6
Warning.....	7
Recycling Guidelines.....	8
Warranty.....	9
Contact Us.....	9

Before installing and using the product, please carefully read this User Manual to guarantee correct usage and keep it secure for future reference.

Specifications

Product Name	Rechargeable LED display Hair Clipper
SKU	PD-LSRDHC
Battery Type	Rechargeable Lithium Battery, 1200mAh
Input AC	220V (50Hz)
Input	5V=1A
Charging Time	About 2h
Working Time	About 60min
Blade Material	Stainless Steel
Motor Speed	7000rpm
Product Size	178.7x45.4x41.2mm
Weight	172gr
Guide Combs	2 guide combs: 3~11mm & 17~25mm

Features

- The specialized cutting head features an R-shaped rounded corner to prevent skin scratches.
- Engineered for low vibration and an ultra-quiet operation.
- Equipped with high-performance rechargeable batteries that are environmentally friendly.
- Supports universal worldwide voltage and includes short-circuit protection.
- Cutting heads are detachable for ease of cleaning.
- Equipped with a variety of guide combs to trim hair to different lengths.
- The trimmer body is IPX7 rated for waterproofing.


Powering The Device

To activate the device, press the power button [ON/OFF button], which initiates the oscillation of the cutting blade from side to side. To deactivate the device, press the power button once more, causing the blade to cease its oscillation.


Installation Instructions

A. Disassembly of the Shaving Head

Turn off the clipper and place your thumb against the cutter teeth. Then, push outward in the direction of the arrow as shown in the image to remove the blade. When disassembling, ensure to hold the blade securely to prevent it from falling.

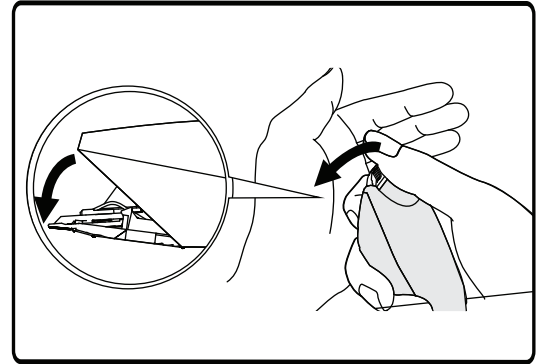

B. Assembly of the Shaving Head

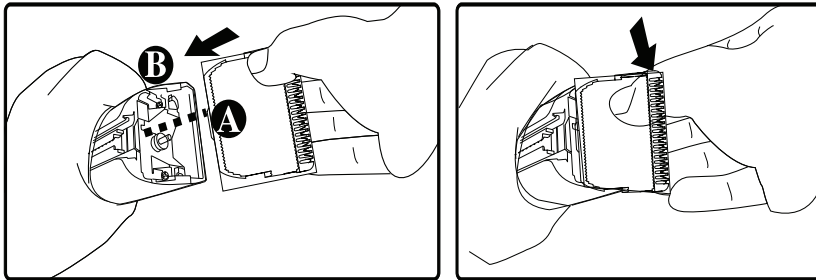

1. Align the cutter connector (A) with the slot on the machine (B).
2. Firmly press the cutter back until you hear a click, indicating it is securely attached.



Cautions and Care

1. Please be aware that the white ceramic blade is fragile; handle it with care during the process.
2. A damaged ceramic blade can cause hair to become stuck and prevent the blade from operating correctly.
3. It is important to replace the cutter head promptly when needed.
4. Regular sterilization of the blade is recommended to maintain hygiene.

Cleaning and Maintenance

1. Cleaning

1.1 Utilize the cleaning brush to remove hairs that adhere to the cutter head. Follow the direction of the arrow depicted in the image to brush away any hairs trapped between the upper and lower blades.

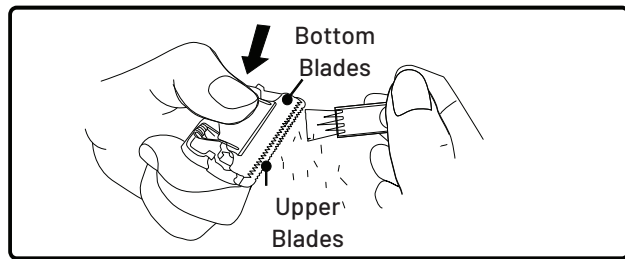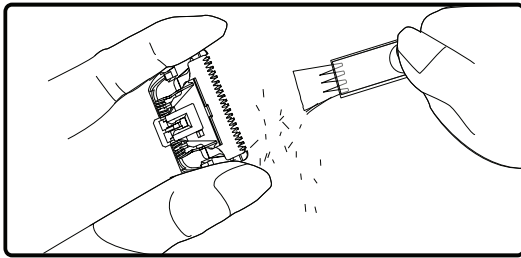

Note: Avoid disassembling the springs of the cutter head, as this may prevent the device from functioning properly when reassembled.

1.2 After each use, it's important to detach the cutter head and cleanse both its surface and the areas between the upper and bottom blades. This helps to preserve the blades' sharpness.





1.3 Ensure the cutter head is dried to prevent any rust on the springs.

1.4 For maintenance, apply lubricating oil to the cutter head following every cleaning session.

1.5 Follow these instructions to remove hair debris:

1. Use the cleaning brush to remove hair remnants from the cutting head's installation slot. The model is waterproof and it can be rinsed with water.

2. Clean the body of the device and thoroughly dry it with a cloth. Reattach the cutting head for storage, ensuring it's ready for next use.

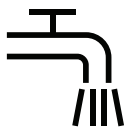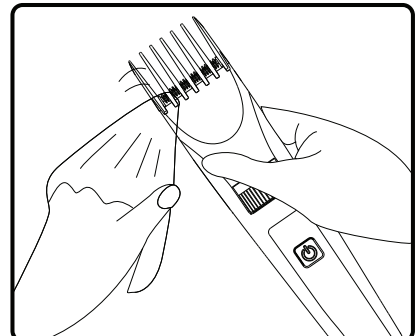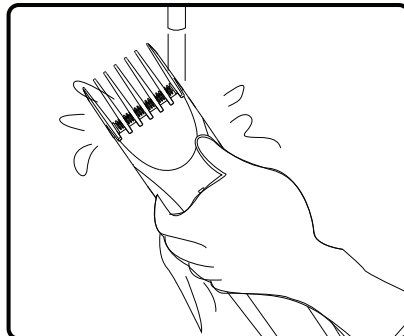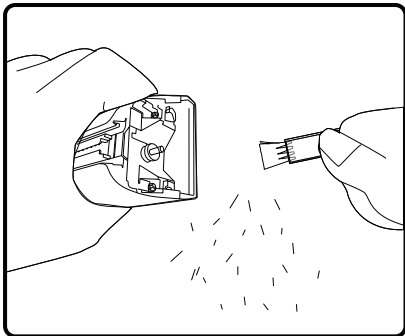


Note: This device is suitable for cleaning under running water.


Warning: Only wash the handheld part with water after detaching it from the power cord.

2. Lubrication of Cutter Head

Apply oil to the designated circular positions where the upper and lower blades meet and generate friction. Then maneuver the moving blade from side to side to ensure even distribution of the lubricant.

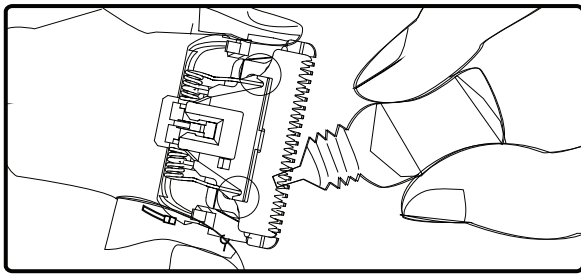

Front View

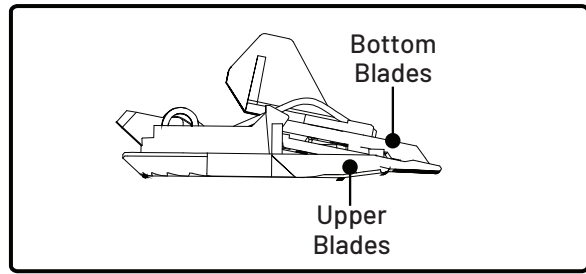

Left View

Attention

1. The longevity of the cutter head is contingent upon the frequency of use, hair thickness, and maintenance practices.
2. Replacing worn blades can prevent gripping of hairs.
3. For replacement parts, consult our authorized agents and service centers.
4. Refrain from using blades from alternative manufacturers.
5. It is normal for the blades to become slightly warm during use; this will not

Guide Comb

1. Description of Guide Comb

The guide comb is designed for trimming hair to a specific, uniform length.

2. Guide Comb Usage Guidelines

2.1 Installation Method




Align the guide comb with the clamping groove at the edge of the cutter head. Press and hold point **A**, then slide down until a "click" is heard, indicating secure attachment.

2.2 Removal Method

Press and hold point **A**, then slide the comb sleeve upward to remove it from the card slot.

2.3 Guide Comb Adjustment



Press and hold point **A**, slide the comb up and down to adjust, and then release point **A** to lock it in place automatically.

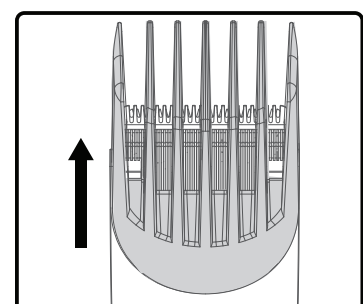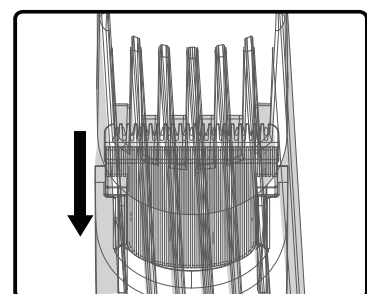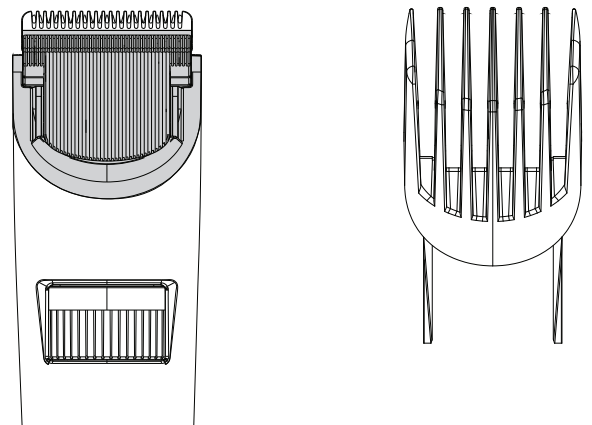

Utilizing the guide comb can prevent mistakes that lead to excessively thinned hair and allows for precise control of hair thickness. For optimal results, wash and blow-dry the hair before use, and comb through to straighten. If moisture is present, dry the hair thoroughly before use.

Note: Dirt or debris in the hair can diminish the blade's effectiveness and lifespan.

Charging Instructions

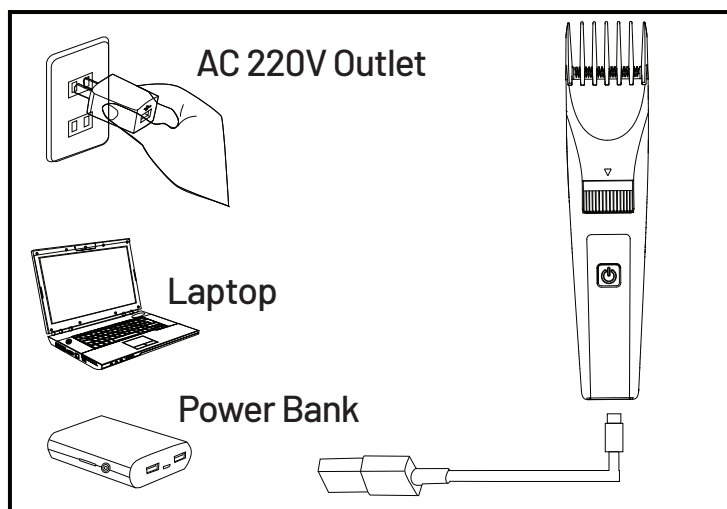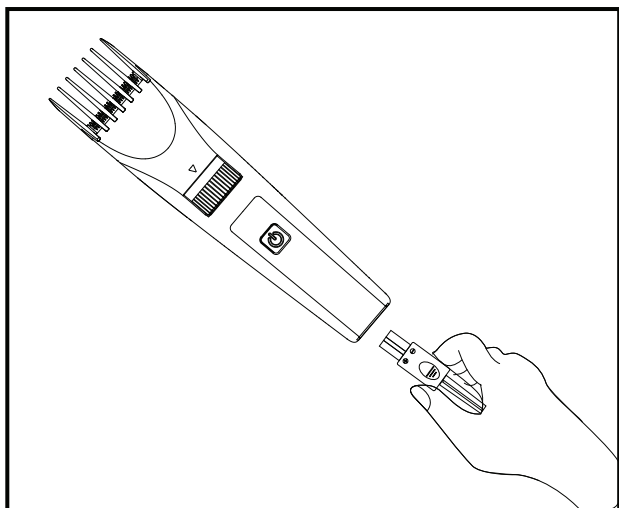

Connect the USB cable to the clipper.


Helpful Hint: It is advisable to fully charge the device before first use.

Ensure that the device is turned off, then insert the USB cable into the USB socket; the indicator lamp should illuminate to indicate connectivity. The USB cable may be connected to any standard socket, including cell phone adapters, desktop computers, laptops, and portable power banks.

Safety Precautions

1. Routine cleaning and maintenance are critical for optimal performance and to prolong the lifespan of the device.
2. Avoid exposing the machine to high temperatures or direct sunlight.
3. Ensure that the device is not used in close proximity to animals or humans.
4. Refrain from self-repair, including modifying, disassembling, or servicing the product on your own.

5. Utilize only original replacement parts when the cutter head is worn and requires replacement.
6. Prevent damage to the charging cord by not placing heavy objects on it or using objects to press against it, which could cause damage or change its shape.
7. It is normal for the pet clipper to feel warm during operation and while charging; it remains safe for use.
8. Always inspect the cutter head for damage or deformations before use.
9. Charge this product solely with the provided USB charging cable.
10. Should the USB cable sustain damage, replace it only with a designated USB charging cable supplied by our company or through our authorized repair service.
11. Avoid applying excessive pressure with the blade head against the skin.
12. This product is not suitable for individuals with physical, sensory, or intellectual impairments and those (including children) lacking sufficient experience or judgment.
13. Should you encounter any abnormalities or malfunctions with this product, stop using the product immediately, assess the issue, and contact our service department for repair guidance.
14. For optimal performance, use the charger at room temperatures between 5°C and 40°C. The battery will be fully charged in approximately 5 hours. Achieving the best battery performance requires 3 to 4 complete charge and discharge cycles.

 **Note:** In the event of battery leakage, clean the appliance with a cloth, seal the compromised battery in a plastic bag, and dispose of it at a certified recycling facility. If the substance from the battery contacts skin, wash the area with water and seek medical attention.

Warning

1. The use of non-rechargeable batteries in this device is strictly prohibited.
2. Ensure that the battery has a residual charge before recharging, and connect to power sources or USB ports that supports a DC 5V/1A output.
3. Operate this appliance exclusively for its intended use as outlined in the accompanying instructions.

Recycling Guidelines

Instructions For Battery Removal

1. Disconnect the hair clipper from the power supply.
2. Allow the clipper to run until the battery is fully depleted.
3. Unscrew all fasteners on the clipper's casing to access and remove the rechargeable batteries.

Instructions For Battery Disposal

1. Batteries in electric hair clippers may contain environmentally hazardous substances.
2. Remove the batteries from the device before disposal.
3. Ensure that the electric hair clipper is detached from any electrical source before battery removal.
4. Batteries should be disposed of safely.

Safety Warnings

1. Never cause a short circuit in the batteries, as it could lead to combustion or fire.
2. Do not dispose of batteries by burning; doing so could trigger an explosive reaction and release toxic chemicals.

Warranty

Products that you buy directly from our **Porodo** website or shop come with a 24-month warranty.

When you buy **Porodo** products from any of our approved sellers, you only get a 12-month warranty. If you want to extend this warranty, go to our website at **<https://porodo.net/warranty>** and fill out the form with your information. Don't forget to upload a picture of the product too. After we've checked and accepted your request, we'll send you an email to confirm that your product's warranty has been extended.

For more info, please check:

<https://www.porodo.net/warranty>

Contact Us

If you have any questions about this Privacy Policy, please contact us at:

info@porodo.net

Website: **porodo.net**

Service Support: **support@porodo.net**

Instagram: **[porodo](https://www.instagram.com/porodo)**