

**porodo**



## **Porodo Soundtec 14W Speaker** with Wireless Microphone

SKU: PD-ST14WSM

Before using the product, please carefully read this User Manual to guarantee correct usage and keep it securely for future reference.

## Features

1. Equipped with USB support for convenient audio file access.
2. Enhanced with RGB lighting
3. Offers a karaoke function with a single input compatible with one wireless microphone.
4. Features a built-in lithium rechargeable battery with a capacity of 3600mAh.
5. 2.0CH portable Bluetooth speaker for versatile audio playback.
6. Supports A2DP Bluetooth for seamless wireless streaming from any Bluetooth-enabled device.
7. Includes an FM radio function for listening to live broadcasts.
8. Designed with a strong carry handle, ensuring it is easy to transport.

## Specifications


Bluetooth version	V5.3
Speaker Size	2.5" ( x2)
RMS power output	6W*2 = 12 W, 4Ω
Peak power output	12W*2 = 24W, 3Ω
Battery Capacity	3.7V, 3600mAh
Frequency Response	80HZ-16KHZ
Bluetooth connecting range	10 m
Product size	129×99×305 mm

## Package Contents


1. One Portable Bluetooth Speaker
2. One Type-C Charging cable
3. One Wireless Microphone
4. One User manual

## Schematic View of Device


1. Power Button
2. Light Button
3. Mode Button
4. Play/Pause Button
5. Forward/Volume Up
6. Backward /Volume Down
7. USB port
8. Reset Port
9. Type-C Charging Jack

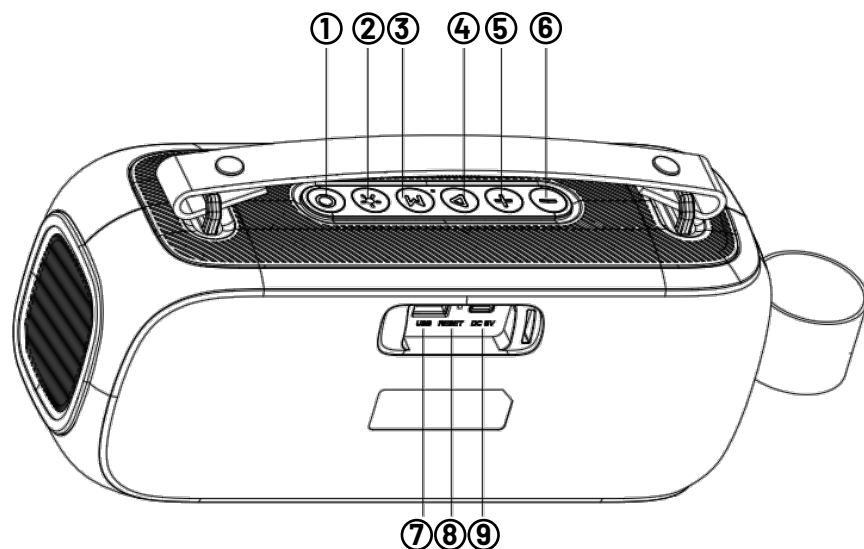


## Bluetooth Mode


**Power Button**  : Long-press to switch the device ON/OFF.  
Enable Bluetooth connection on your smartphone and search for Bluetooth name "Gala". Tap on the device name to pair.

**Mode Button**  : Short-press to switch between different playing modes.

**Play/Pause Button**  : Short-press to play/pause. Long-press to connect/disconnect to Bluetooth device.

**Backward /Volume Down**  : Short-press to turn the volume down. Long-press to play the last song.


**Forward/Volume Up**  : Short-press to turn the volume up. Long-press to play the next song.

**Light Button**  : Short-press to between different lighting modes. Long-press to turn the lights ON/OFF.


## FM Mode

**Power Button**  : Long-press to switch ON/OFF

**Mode Button**  : Short-press to switch between playing modes.

**Play/Pause Button**  : Short-press to mute. Long-press to activate auto-search the FM channel.


**Backward /Volume Down**  : Short-press to turn the volume down. Long-press to play from the last channel.

 
**Forward/Volume Up**  : Short-press to turn the volume up. Long-press to play from the next channel.


## USB Mode


**Power Button**  : Long-press to switch ON/OFF.

**Mode Button**  : Short-press to switch between playing modes.

**Play/Pause Button**  : Short-press to play/pause.

**Backward /Volume Down**  : Short-press to turn the volume down. Long-press to play the last song.

**Forward/Volume Up**  : Short-press to turn the volume up. Long-press to play the next song.

**Light Button**  : Short-press to switch between light modes. Long-press to switch the lights ON/OFF.

### Notes:

When the speaker is in any playing mode, inserting a USB disk will automatically switch playback to the USB disk.


## Using a Wireless Microphone

When the speaker is in Bluetooth mode, the wireless microphone, if turned ON and within range, will automatically connect. The wireless microphone's "blue light" will remain ON once connected.



## Reset

If the speaker fails to turn OFF or does not respond, you can briefly press the RESET button located in the RESET Port using a small, round pin to power OFF the device.

To reset the speaker to factory settings, press and hold the Volume Down button  for 5 seconds. The device will power OFF, clear all Bluetooth connection memory, and restore to factory settings.

## Charging the Device

### Notes:

The adapter is not included in the packaging.

1. Please use a 5V/1A charger or connect the speaker to a PC for charging.
2. The recommended charging time is approximately 5 hours.
3. This unit does not possess a power bank function; it is prohibited to charge other devices with this speaker by connecting another device to its USB port.
4. To preserve battery integrity, avoid using the speaker while it is charging.

## Warning

1. Store and operate this product within the standard temperature range.
2. Do not expose the speaker to rain or high-moisture environments.
3. Unauthorized disassembly, repairs, or modifications of this product are strictly prohibited.
4. Clean this product with a soft cloth; if necessary, a small amount of water may be used to slightly wet the cloth. Avoid using chemical cleaners.
5. To prolong product life and safeguard your hearing, refrain from listening at maximum volume for extended periods.
6. The speaker contains a built-in lithium battery. To prevent hazards, do not dispose of it in the fire.

## Warranty

Products that you buy directly from our Porodo website or shop come with a 24-month warranty.

When you buy Porodo products from any of our approved sellers, you only get a 12-month warranty. If you want to extend this warranty, go to our website at **<https://porodo.net/warranty>** and fill out the form with your information. Don't forget to upload a picture of the product too. After we've checked and accepted your request, we'll send you an email to confirm that your product's warranty has been extended.

For more info, please check:

**[porodo.net/warranty](https://porodo.net/warranty)**

## Contact Us

If you have any questions about this Privacy Policy, please contact us at:  
**[info@porodo.net](mailto:info@porodo.net)**

Website: **[porodo.net](https://porodo.net)**

Service Support: **[support@porodo.net](mailto:support@porodo.net)**

Instagram: **[porodo](https://www.instagram.com/porodo)**