

porodo



75"-32" TV Floor Stand

———— **With Wheels** ————

———— SKU: PD-TVFSW ————

Thank you for purchasing our product. Before installing and using the product, please carefully read this User Manual to guarantee correct usage and keep it secure for future reference. Should you have any inquiries, please contact us.

Warning

1. Ensure all equipment is removed before attempting to move this piece of furniture.
2. To prevent the risk of injury or death, do not allow children to climb on furniture that is designed to hold audio or video equipment.
3. Placing remote controls or toys on such furniture could tempt a child to climb it, potentially causing the furniture to tip over onto the child.
4. For any additional guidance, please reach out to us with the contact details provided.

WARNING: Do not use parts in case they are missing or damaged.


Features









1. Mobile
2. Incorporating 4 lockable wheels for quiet motion on the floor
3. Adjustable height
4. Allows the TV to be adjusted in pivot and tilt angle direction

Specification

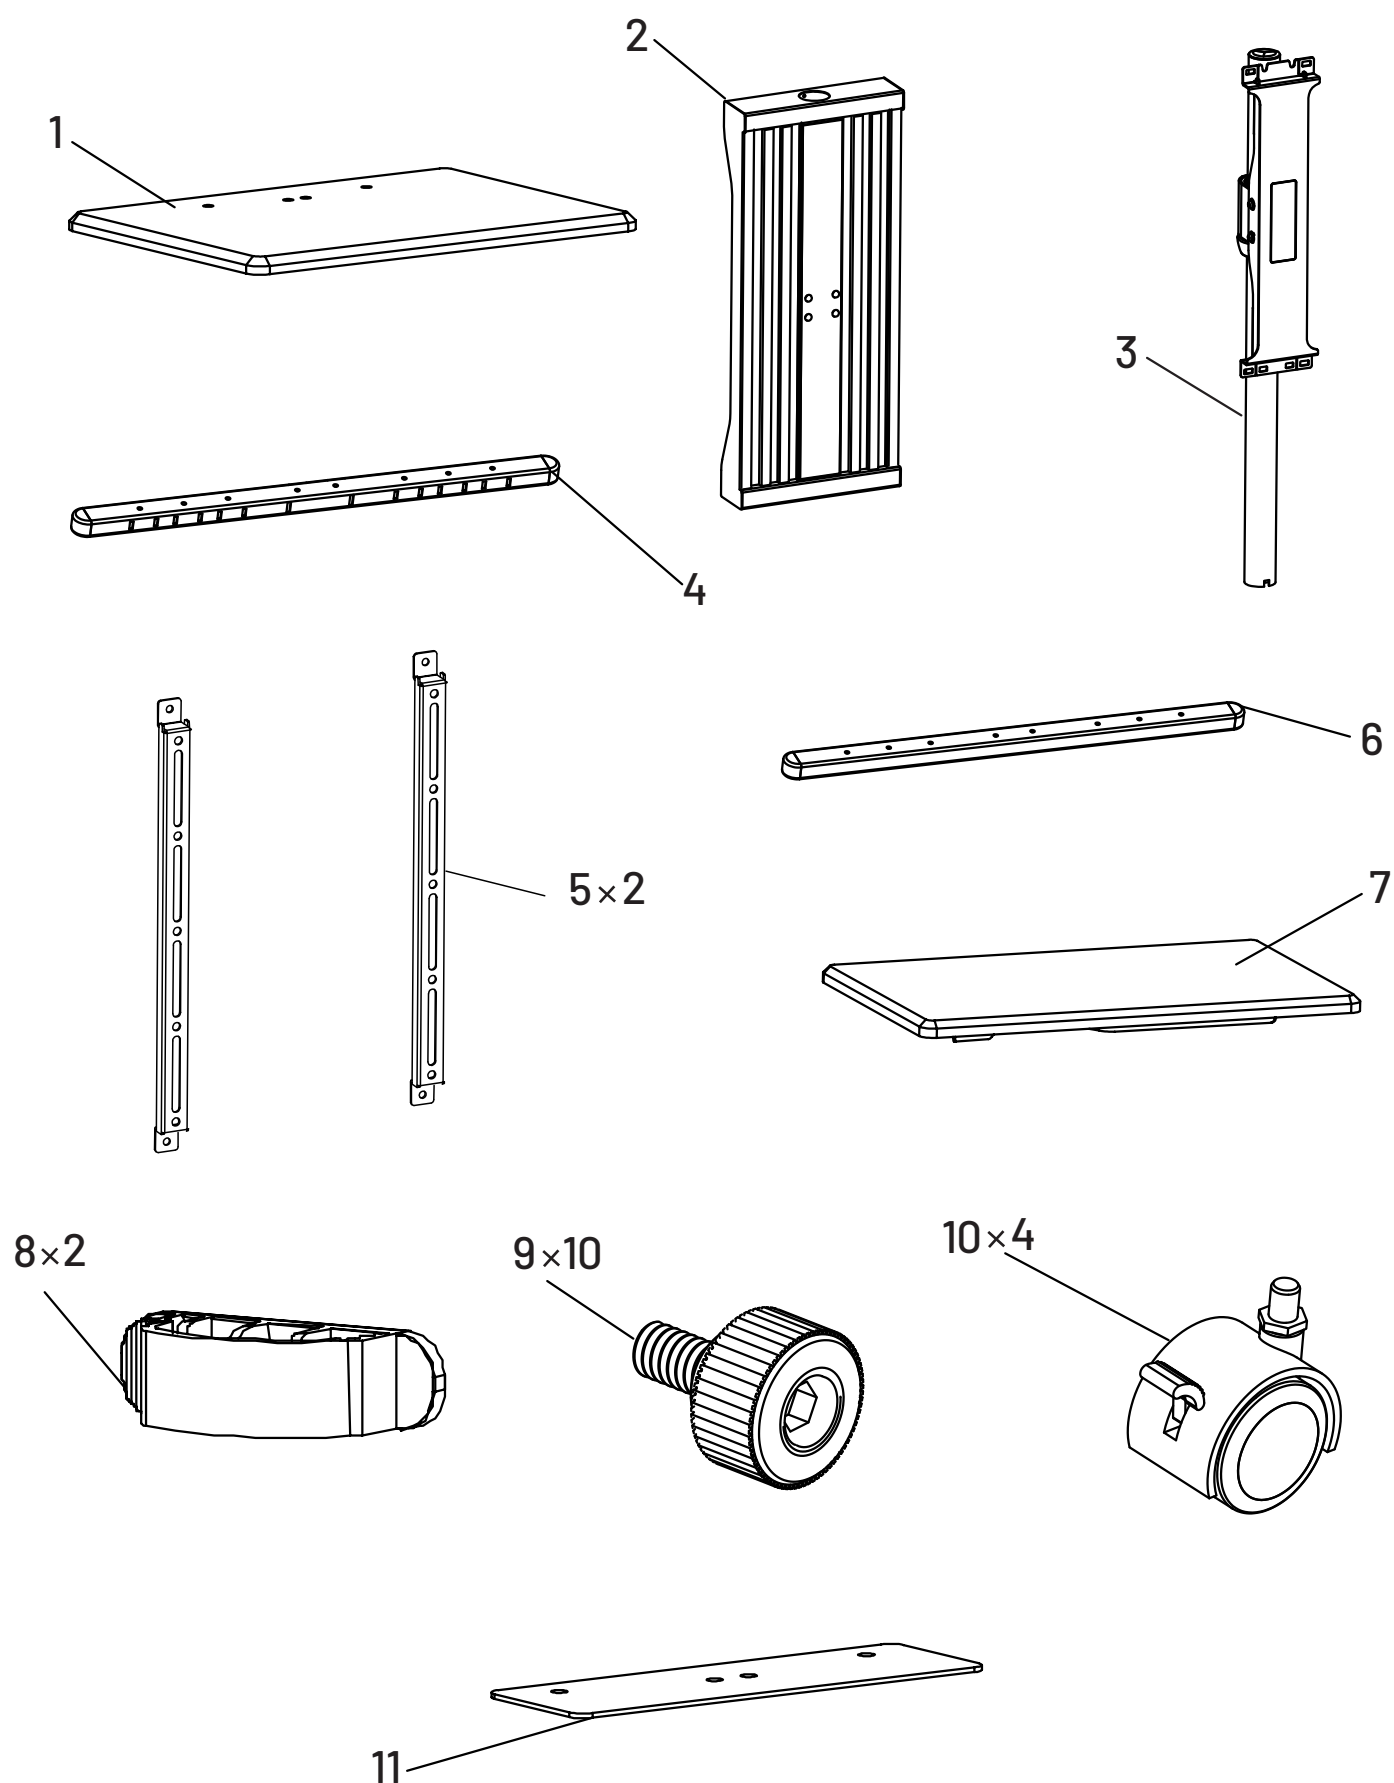



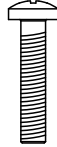


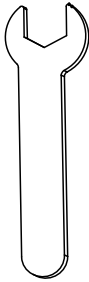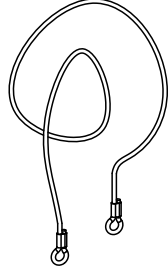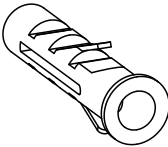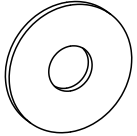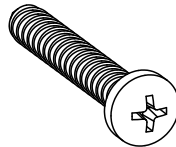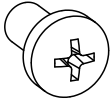






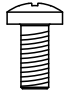

Compatible Screen Size	32" to 75"
Max Weight Capacity	35 kg (77 lbs)
Product Size	1465×400×750 mm (57.6"×15.7"×29.5")
DVD/AV Tray Size	220×345 mm
VESA compatible Size	200×200 to 400×600 mm
Height Adjustment Range	1150 to 1360 mm (45.3" to 53.5")
TV Adjustable Pivot Angle	±20°
TV Adjustable Tilt Angle	~ - 5° to +3°
Material	Q235 Steel, Plastic, MDF

Components

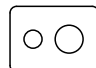


A x1 	B x1 	C x1 	D x2 
E x1  ST4.8 x 38	F x1  M5 x 10	G x1  4 mm	H x1  5 mm


Use the following items to install on concrete or solid rock.

M-A x 4   M5 x 14	M-B x 4   M6 x 14	M-C x 4   M6 x 30	M-D x 4   M8 x 30
M-E x 4   M8 x 50	M-F x 4  	M-G x 8   5 mm	M-H x 8   15 mm


Tx4

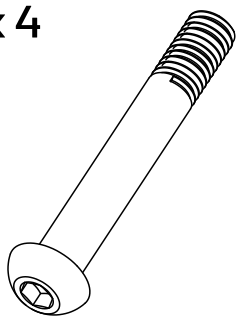


Ux4

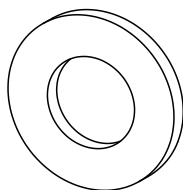


Vx4

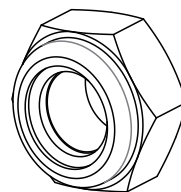 


Wx4

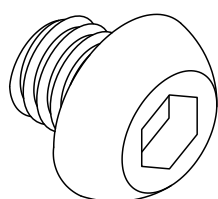 

Xx2

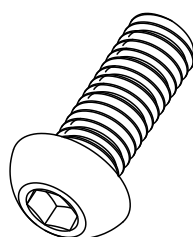 


Yx2

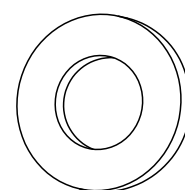 


Steps to Install the TV Floor Stand

 
1

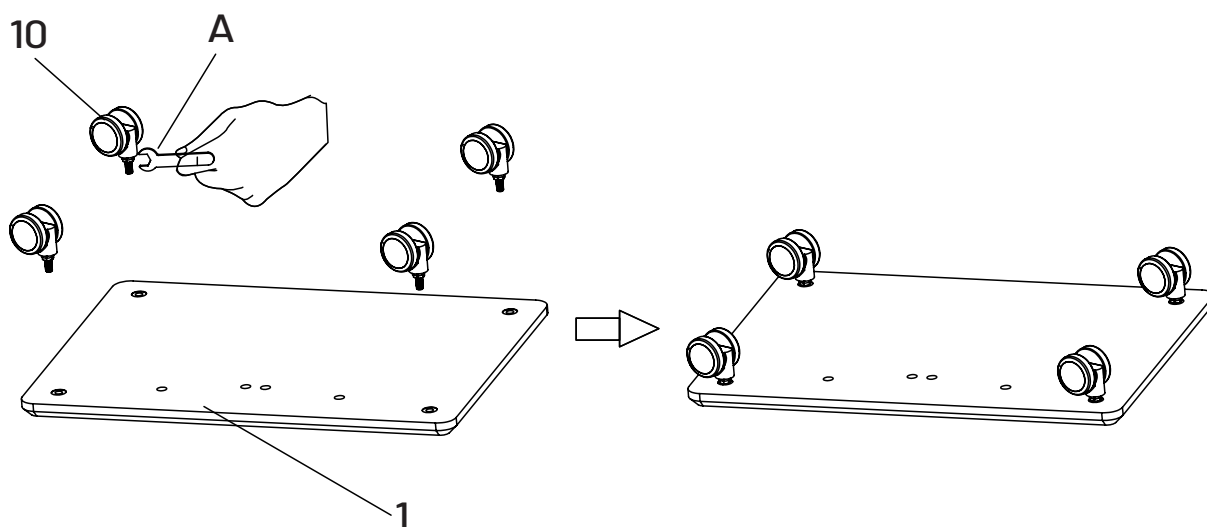


2

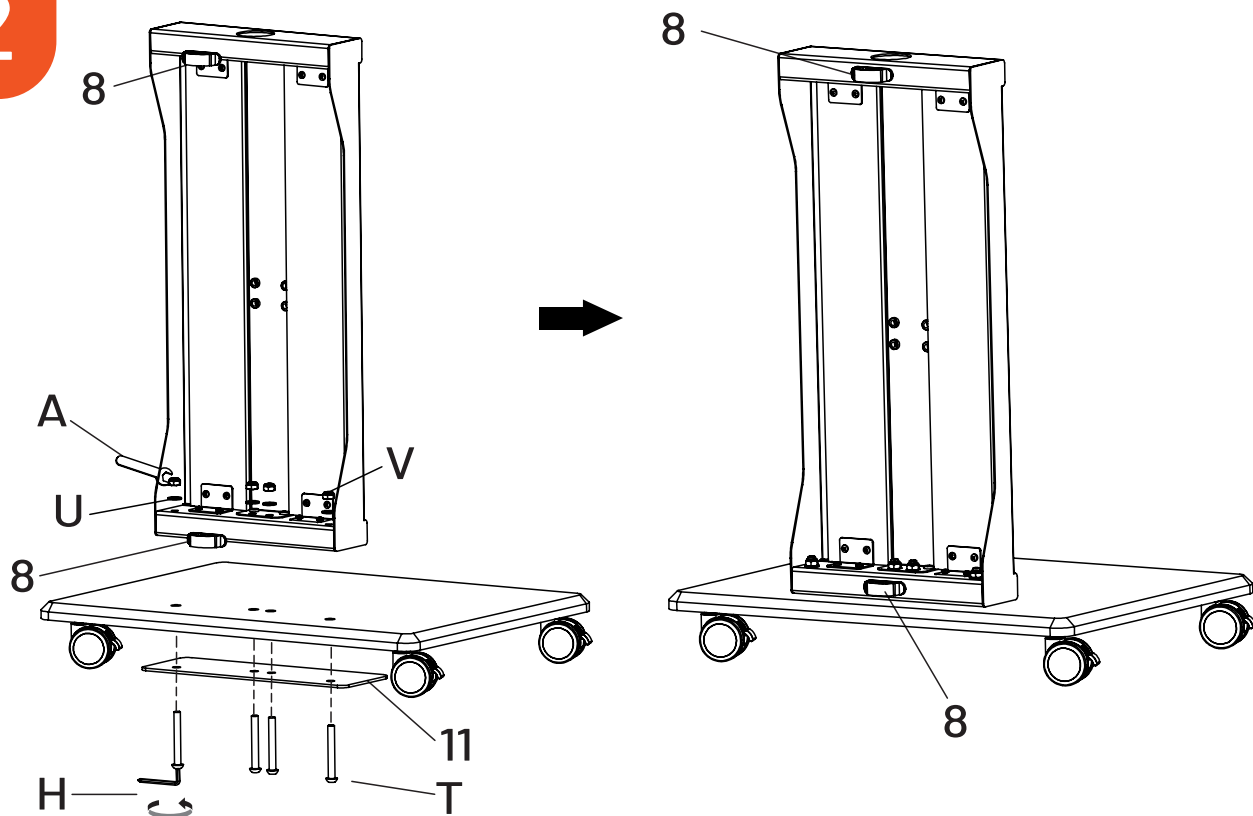 


3

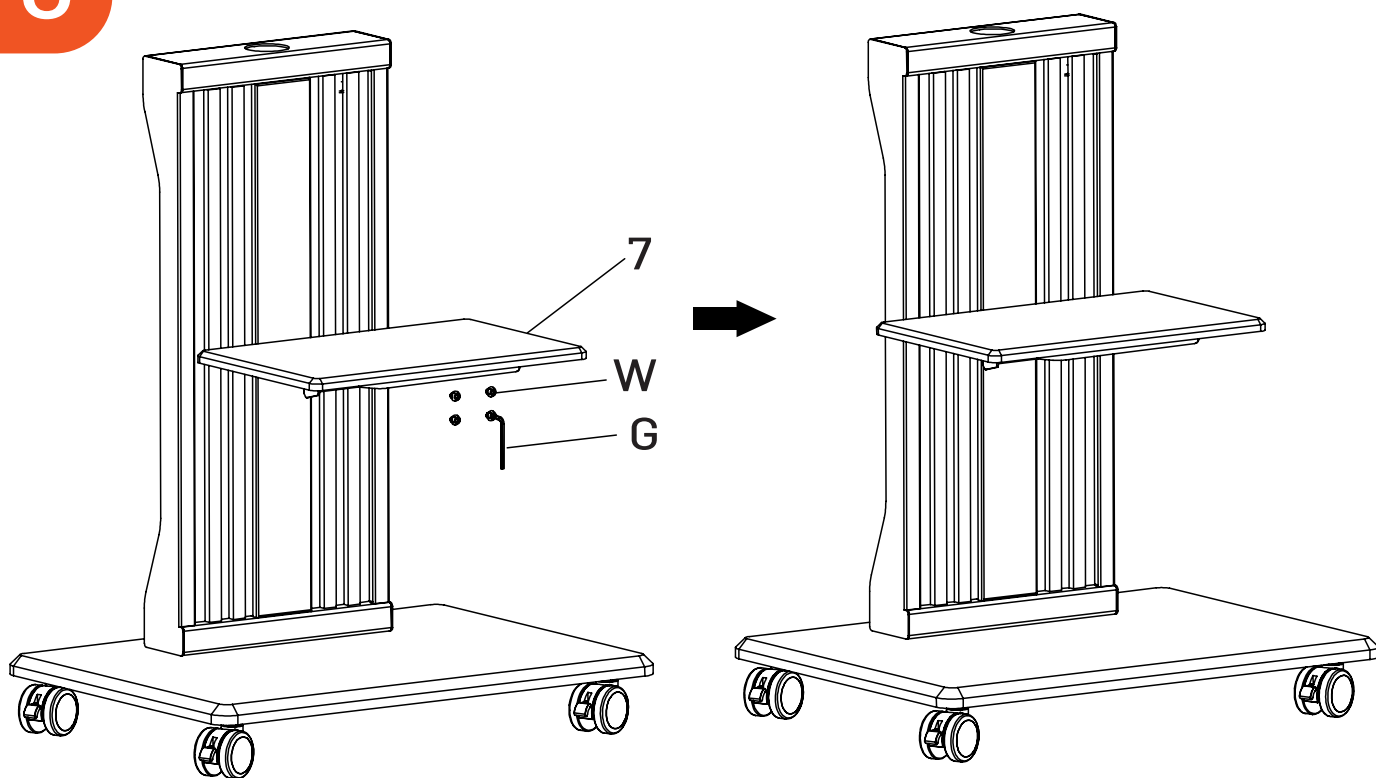

4

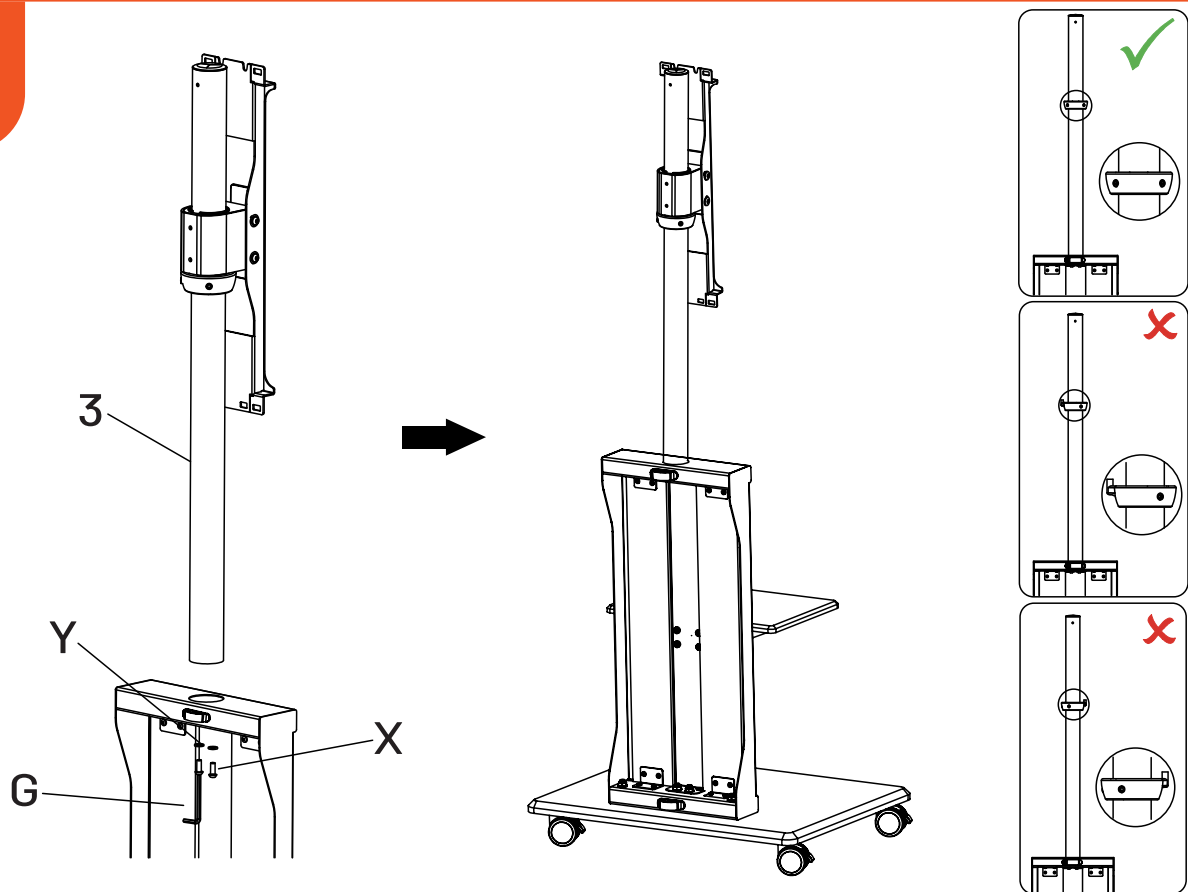

5

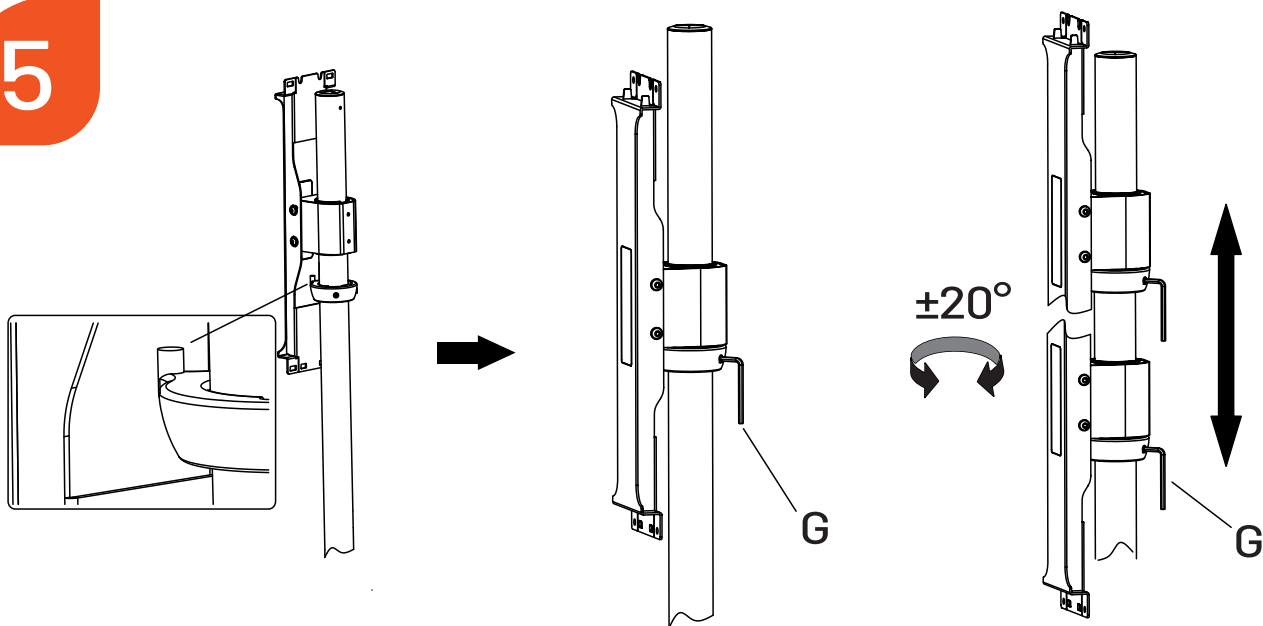


Adjust the limit ring on the front side of the column.

Install the TV panel on the column at a desired height. Lock the limit ring using the G wrench.

Use the G wrench to re-adjust the height of the panel. This assembly allows for $\pm 20^\circ$ changes in the pivot angle of the TV.

6






Guide For Choosing the Correct Screw

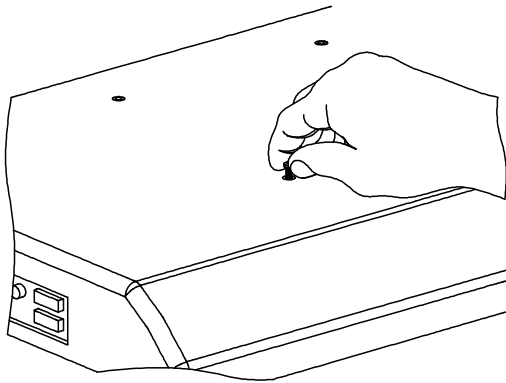

M5


M6

M8

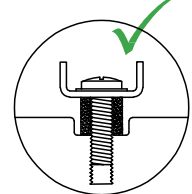
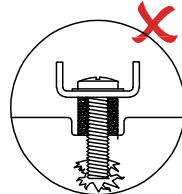
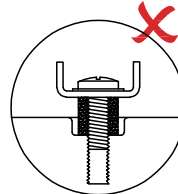
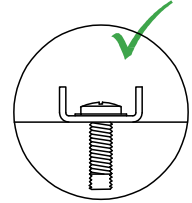
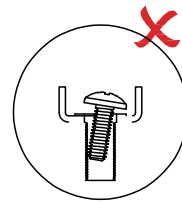


Choose the screw with the appropriate length.




(a) For flat-backed TV

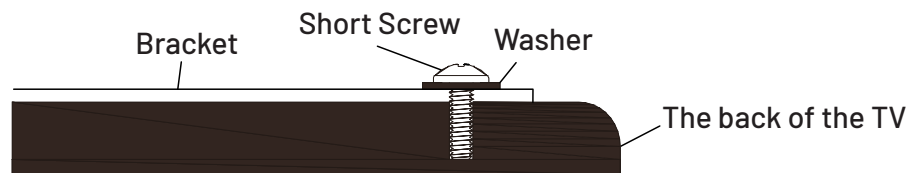

(b) For TV with irregularly shaped back (For instance, curve-backed)

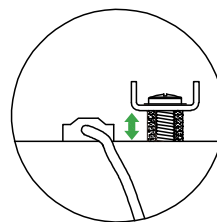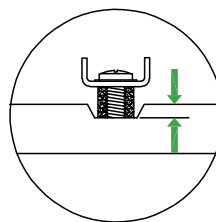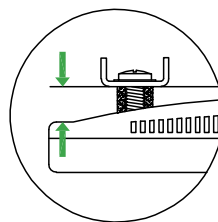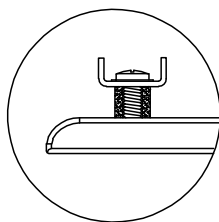
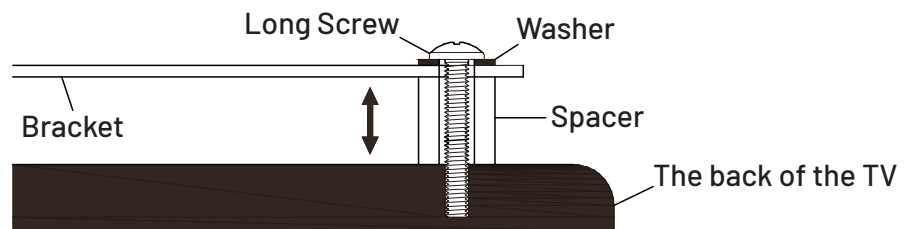


(a1) For Flat Screen TV

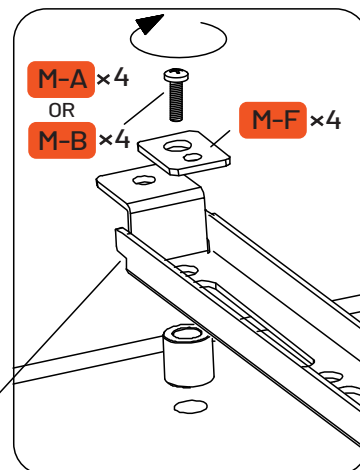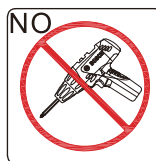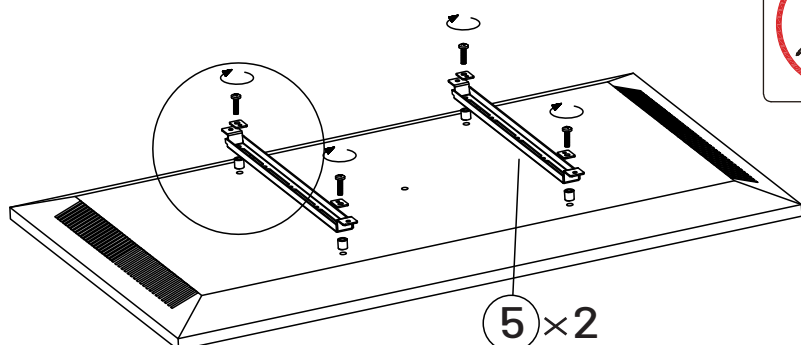


! Note: The protrusions of the two longitudinal rods should be positioned directly above the TV set for proper installation. Additionally, ensure that both longitudinal rods are oriented in the same direction for consistency and stability.

(a2) For Curved Screen TV


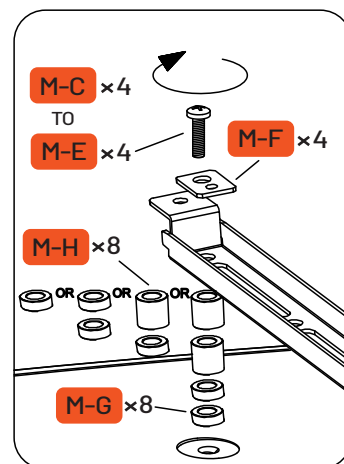
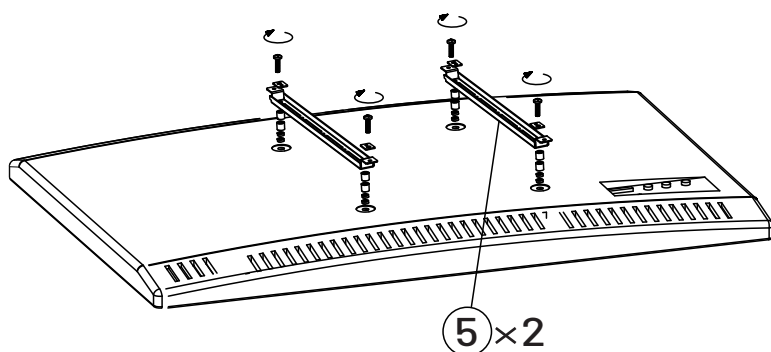


! Note: The protrusions of the two longitudinal rods should be positioned directly above the TV set for proper installation. Additionally, ensure that both longitudinal rods are oriented in the same direction for consistency and stability.


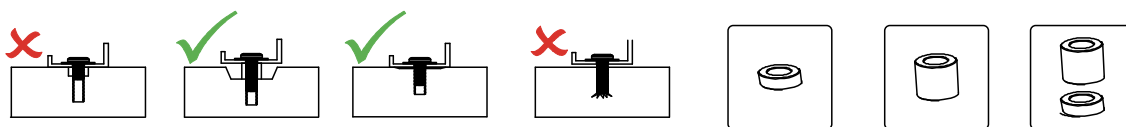


(a3) For Uneven Surface

! Note: The protrusions of the two longitudinal rods should be positioned directly above the TV set for proper installation. Additionally, ensure that both longitudinal rods are oriented in the same direction for consistency and stability. Install the unraised side directly under the TV set.

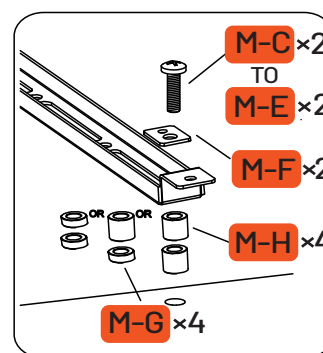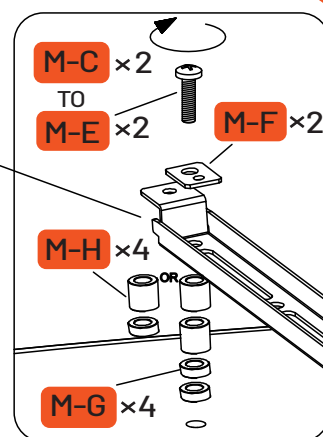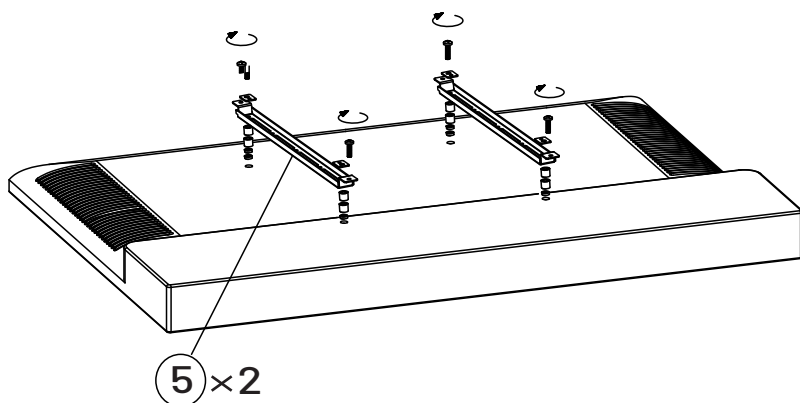


(a4) For TV with Wires In the Middle

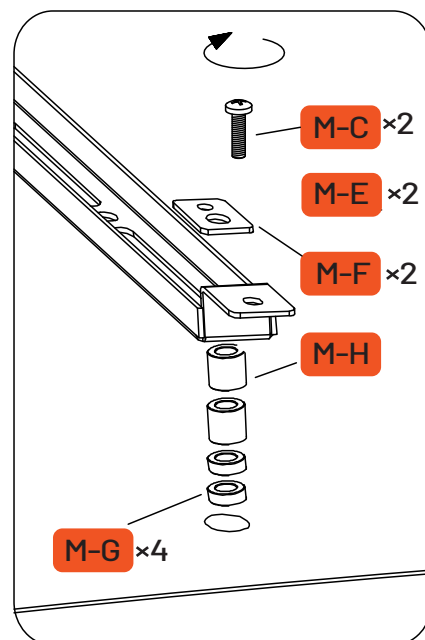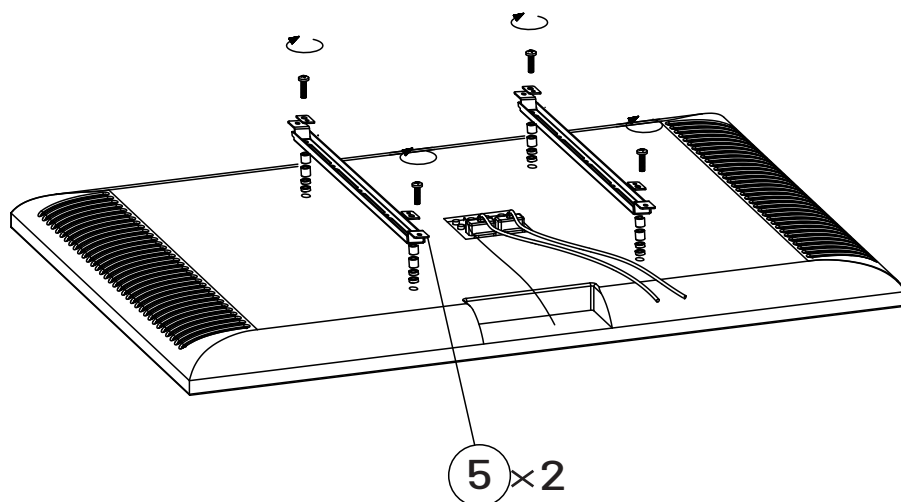

! Note: The protrusions of the two longitudinal rods should be positioned directly above the TV set for proper installation. Additionally, ensure that both longitudinal rods are oriented in the same direction for consistency and stability.


7

During installation, please ensure that component number 4 is placed at the top of the TV set. Subsequently, rotate the knob to engage the threads until the knob is tightened to approximately half ($1/2$) the length of knob.

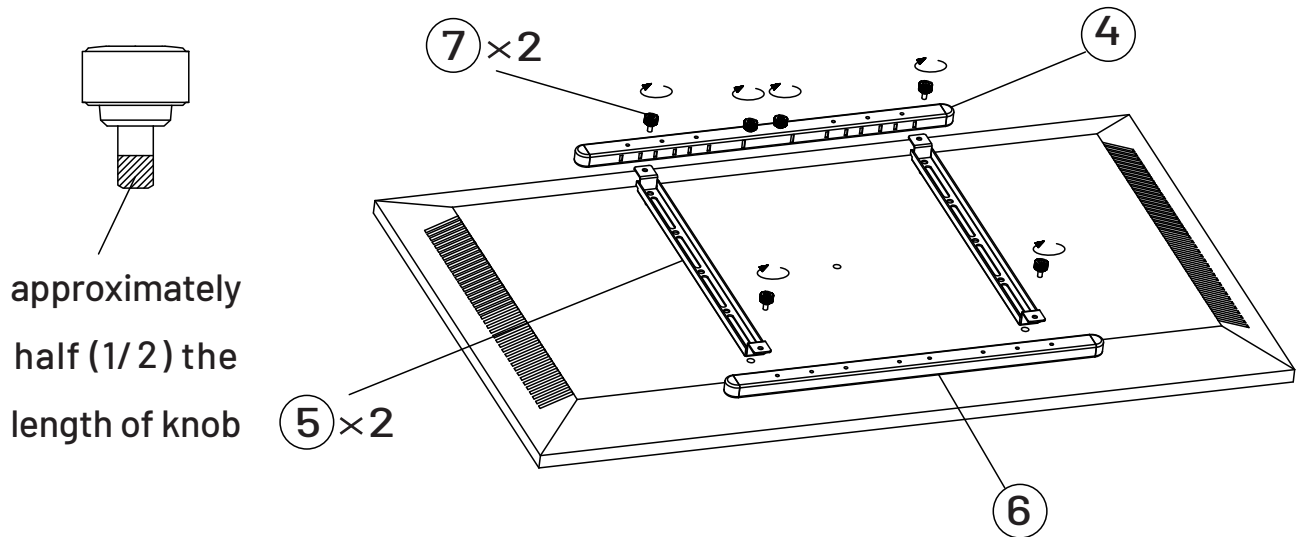



8

Move the knob into the supporting panel slot after the TV is installed, as shown in the picture.

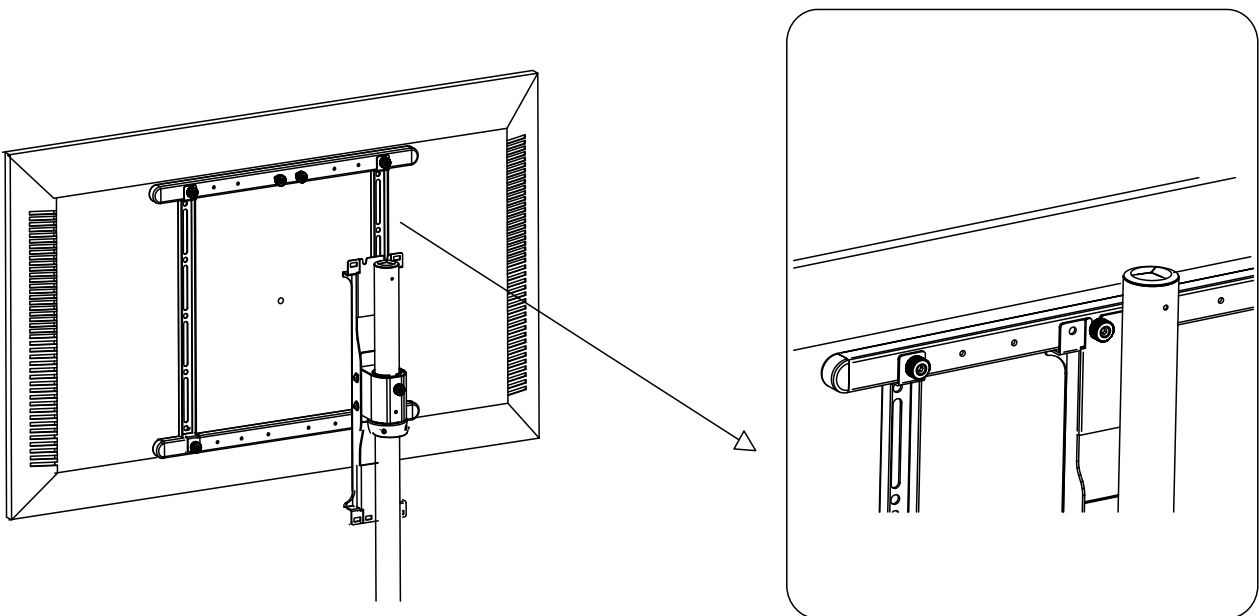

9

Use the **H** wrench to turn the knob until the thread is screwed to approximately its half ($1/2$) length.


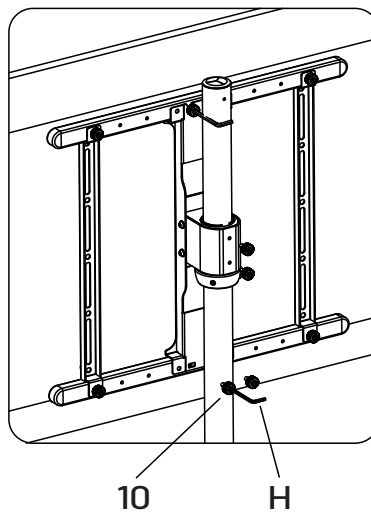
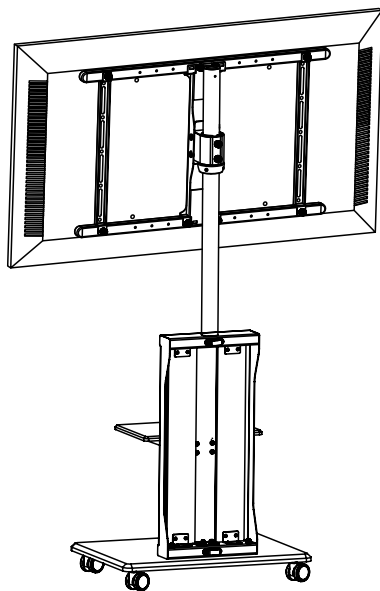


10

H



10

After the TV is installed, use the **H** wrench to turn the knob until all threads are completely screwed and properly fastened.

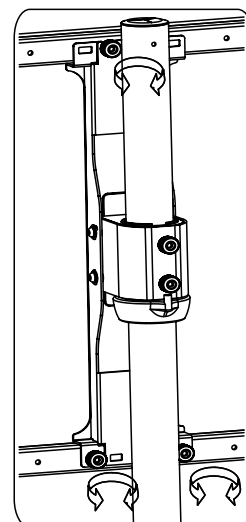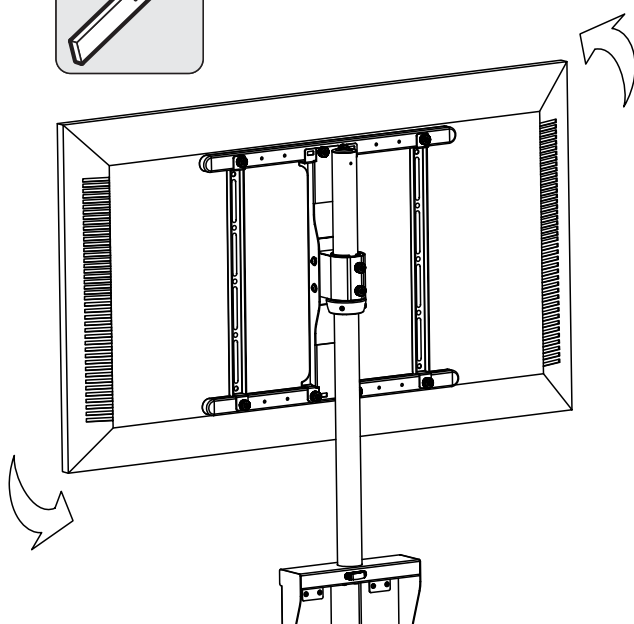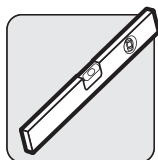


11

Use the **G** wrench to adjust the screw and set the desired tilt angle of the TV. The range of tilt angle is -5° to $+3^{\circ}$.

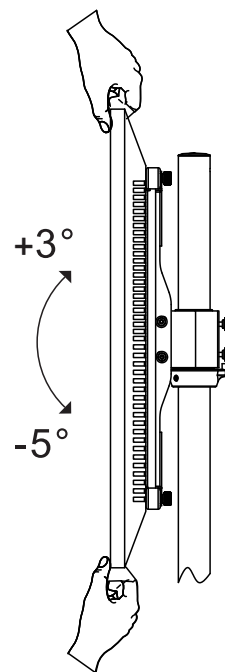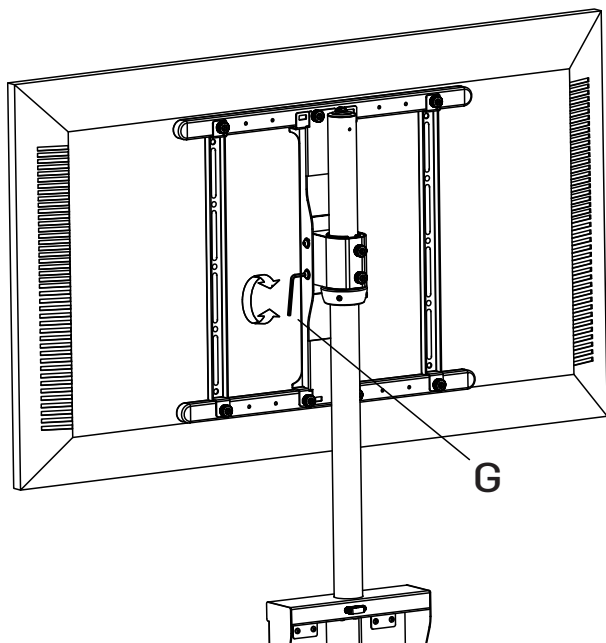

12

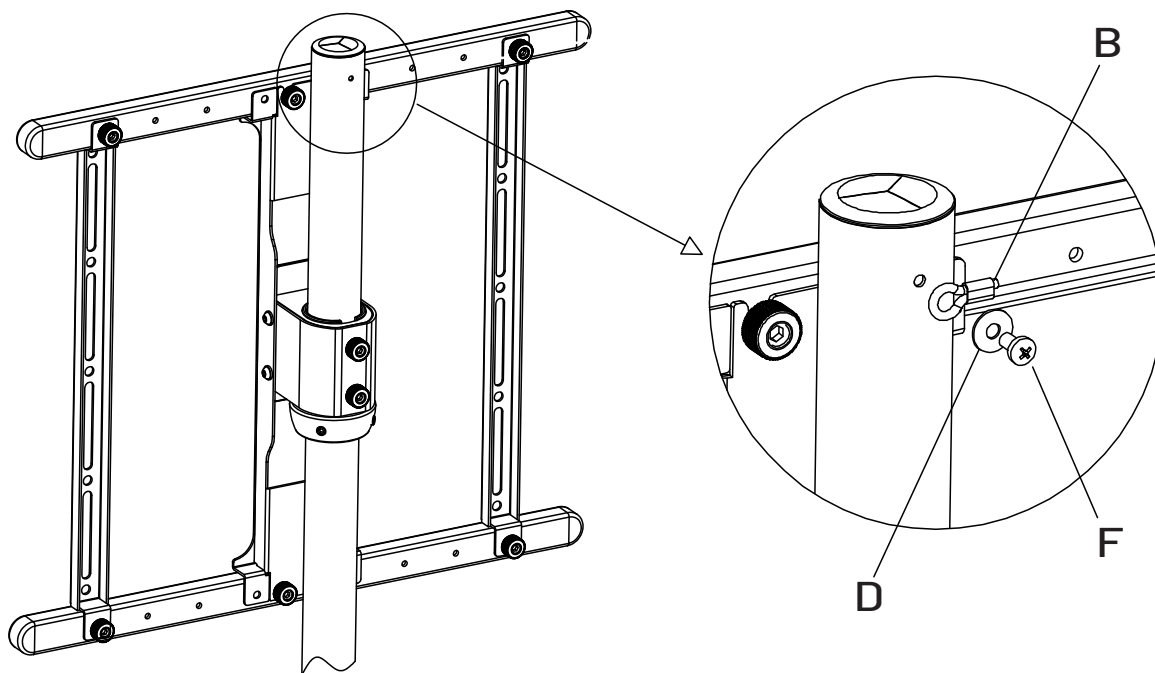


13 Tools required for mounting on brick and concrete


Note: Essential tools that are not included in the package of this product.



Pencil

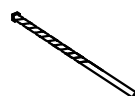




Wood Drill(\varnothing 8 mm(0.31"))

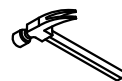


Hammer





Screw Driver

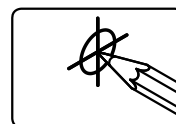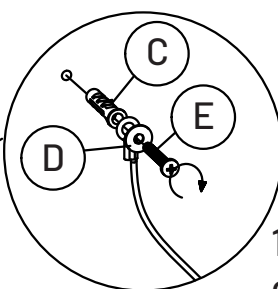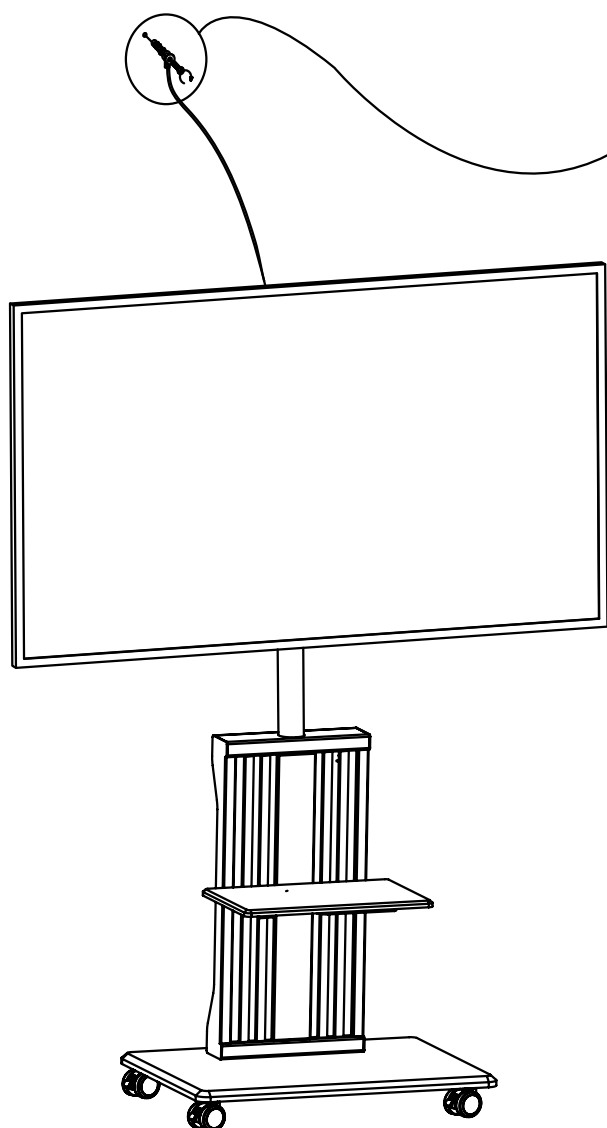

1. Mark the exact location of surface you want to drill.

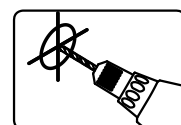

2. Drill pilot holes.

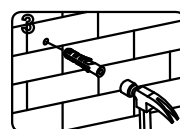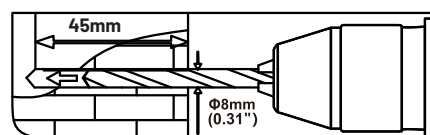

3. Secure wall anchors into drilled holes.

 
 
Warning

Installers must verify that the surface will safely support the weight of the equipment and all other hardware components.


14

Tools required for mounting on wood stud wall


Note: Essential tools that are not included in the package of this product.

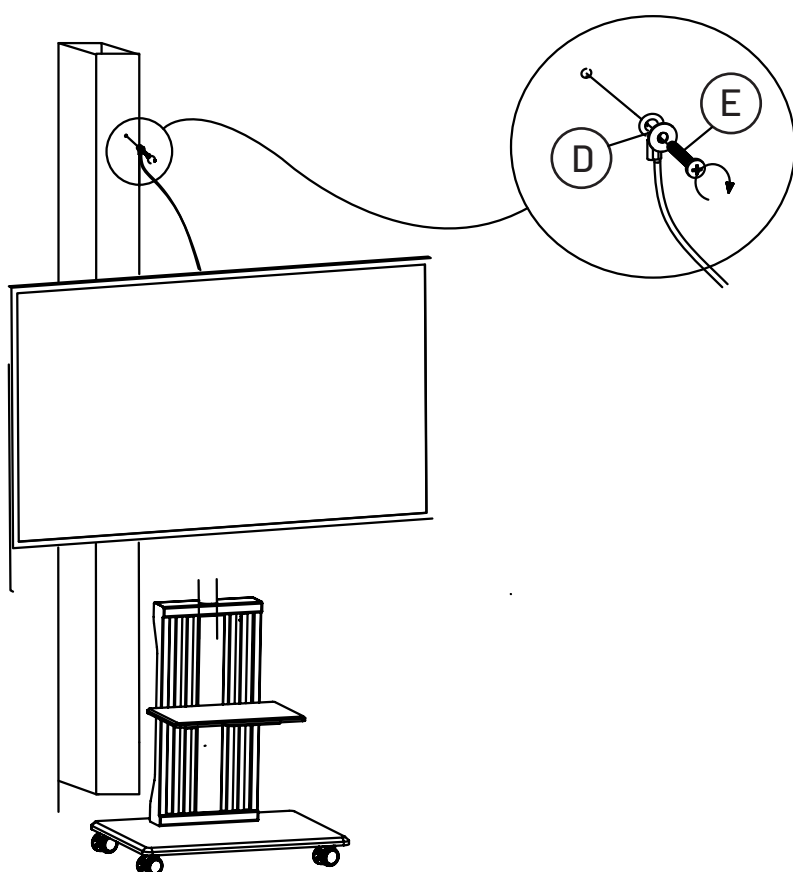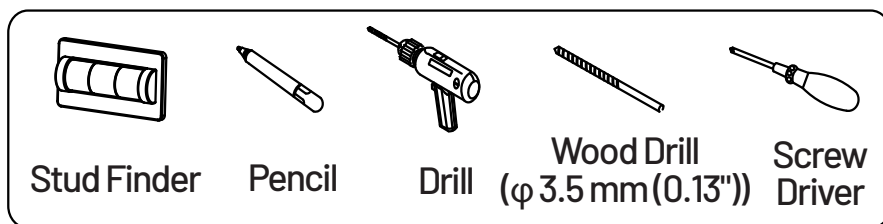

 
1. Find the exact location to drill the mounting holes using the stud finder.

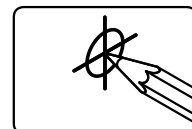

 2. Mark the exact location to drill the mounting holes.

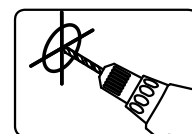

 3. Drill pilot holes.

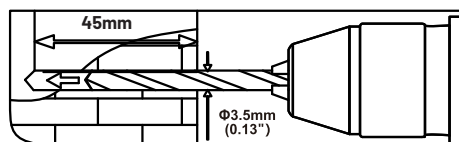

! Warning

1. Ensure the mounting screws are placed in the center of the studs. Use the stud finder for this purpose.
2. The installers are responsible for providing all necessary equipment for different mounting situations.
3. Installers must verify that the surface will safely support the weight of the equipment and all other hardware components.

Warranty

Products that you buy directly from our **Porodo** website or shop come with a 24-month warranty.

When you buy **Porodo** products from any of our approved sellers, you only get a 12-month warranty. If you want to extend this warranty, go to our website at **<https://porodo.net/warranty>** and fill out the form with your information.

Don't forget to upload a picture of the product too. After we've checked and accepted your request, we'll send you an email to confirm that your product's warranty has been extended.

For more info, please check:

porodo.net/warranty

Contact Us

If you have any questions about this Privacy Policy, please contact us at:

info@porodo.net

Website: **porodo.net**

Service Support: **support@porodo.net**

Instagram: **[porodo](https://www.instagram.com/porodo)**