

porodo



## Porodo Lifestyle

**Fully Waterproof 4K UHD Action Camera  
with Dual Display and Video Stabilisation**

SKU: PD-5KACAM-BK

Warning.....	2
Features.....	2
Product Diagram.....	3
Accessories.....	4
Instructions for Use.....	4
Settings.....	5
Inserting a Micro SD Card.....	8
Battery Charging.....	8
Indicator Lights.....	8
Photo/Video Mode Instructions.....	8
Back/Front Screen Switching.....	9
Connection Methods.....	9
App/WIFI Connection.....	9
Specifications.....	10
Warranty.....	11
Contact Us.....	11

Thank you for purchasing this product. Before installing and using the product, please carefully read this User Manual to guarantee correct usage and keep it secure for future reference.

## **Warning**

1. Secure the camera properly to prevent any accidental drops or falls.
2. Distance the camera from objects that emit strong magnetic fields, such as large electrical appliances, to avoid potential harm to the device and interference with sound or image quality due to electromagnetic radiation.
3. Do not expose the camera to extreme temperatures or direct sunlight for prolonged periods.
4. Use a high-quality Micro SD Card, specifically Class 10, for optimal performance.
5. To prevent data corruption, keep your Micro SD card away from strong magnetic fields.
6. Should the device overheat, produce smoke, or emit a strong odor, promptly disconnect it from the power source to mitigate the risk of fire.
7. While the camera is charging, make sure it is placed beyond the reach of children.
8. Store the camera in an environment that is cool, dry, and free from dust.

## **Features**

- This device enables filming up to a depth of 21 meters underwater.
- Features a 2.0" Touch IPS and a secondary 1.3" IPS screen for user-friendly video playback and image viewing.
- Capable of recording videos while the device is charging.
- Offers high-definition 4K video recording capability.
- Delivers a high photo resolution of 24 megapixels.
- Includes WiFi support for wireless connectivity.
- Allows for expanded storage with a Micro SD card, up to a maximum of 128GB.
- Compatible with various video recording resolutions, including 4K, 2.7K, 1080P, and 720P.
- Supports the MP4 video recording format.
- Provides a range of photo shooting modes, such as Photo, Auto, Burst, and Timer.
- Features several video shooting modes, including standard Video, Slow motion,

Loop recording, and Time-lapse.

- Waterproof feature:

**Note:** It is imperative to securely fasten the cover on the camera before submerging it in water. Failure to do so may cause leaks that could potentially harm or render your camera inoperable. Please be advised that any water damage resulting from user error is not covered under warranty.

## Product Diagram



## Accessories



Bike Mount



Helmet Mount x 2



3M Adhesives x2



Mount 1



Mount 2



Mount 3



Mount 4



Mount 5



Mount 6



Cleaning Cloth



USB Cable

## Instructions for Use

### 1. Getting Started

**Power On:** Press and hold the Power/Mode Button for 3 seconds.

**Power Off:** Press and hold the Power/Mode Button again for 3 seconds. Or slide from up to down and touch the Power Off icon.



### 2. Overview

Turn the camera ON and repeatedly press the Power/Mode Button to cycle through camera modes and settings. The modes will appear in the following order:



Video Recording



Slowly Recording



Loop Recording



Lapse Recording



Photo



Auto



Burst




Timer

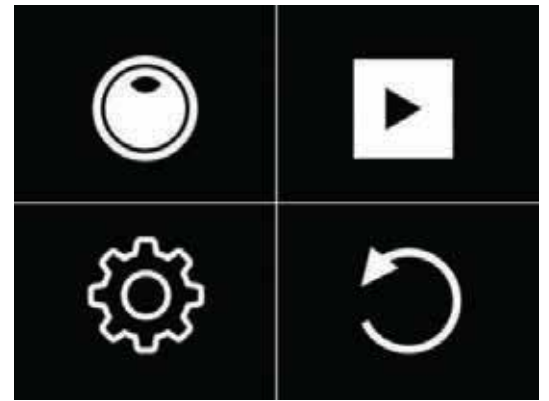


## Settings

Press and hold the OK Button to enter the settings menu. Repeatedly press the Up /Down Button to cycle through options and press the OK Button to select the desired option.



### 1. Mode Setting

- Choose  to enter mode setting and press Up/Down Button to cycle through Video/Photo Mode.
- Or click the bottom of the screen in the Video/Photo Mode, then mode setting will display for your choosing.
- Video Mode: Video/Slowly/Loop/Lapse.
- Photo Mode: Photo/Auto/Burst/Timer.





### 2. Playback

Playing back videos and photos:

- (1) Verify the camera is in Playback menu .
  - (2) Press Up/Down Button to select files, press OK Button to playback video or photo.
- Or Click  on the bottom of the screen in the Video/Photo Mode to enter, then touch the left/right arrow to select files.

### 3. System Settings

To configure the Video/Photo settings, ensure you're in the correct Video/Photo interface. To access the settings, long-press the OK Button and select  to enter the settings interface. Once the Settings menu is displayed, use the Up/Down Button to navigate through the main options, and press the OK button to choose your desired setting. To switch between Video/Photo setting mode, System setting mode, or to exit, press the Mode Button.

Alternatively, you can tap  at the bottom of the screen while in Video/Photo Mode to enter the settings interface. Swipe to browse the main options, and tap your preferred setting to select it.

## 4. Video Settings

Video Resolution	4K60FPS, 4K30FPS, 2.7K30FPS, 1080P120/60/30FPS, 720P120/60/30FPS
Slowly Rec Resolution	1080P4X, 1080P 2X, 720P 8X, 720P 4X
Loop Video Length	2min, 3min, 5min
Time-lapse Rec Interval	0.5s/1s/2s/5s/10s/30s/60s
EIS	On/Off (4K30FPS, 2.7K30FPS, 1080P60FPS, 1080P30FPS supported)
Distortion Correction	On/Off (4K30FPS, 2.7K30FPS, 1080P60FPS, 1080P30FPS, 720P60FPS, 720P30FPS supported)
White Balance	Auto/Sunny/Cloudy/Incandescent/Fluorescence
Exposure Setting	-3, -2, -1, 0, 1, 2, 3
Video Quality	High/Middle/Low
ISO	Auto/6400/3200/1600/800/400/200/100
Time Watermark	On/Off
Rec Audio	On/Off

## 5. Photo Settings


Pixel Inset	24/20/16/12/10M
Auto Photo Interval	3s/10s/15s/20s/30s
Burst Photo Frequency	3P/S, 5P/S, 10P/S
Timer Countdown	3S/ 5S/ 10S/ 20S
White Balance	Auto/Sunny/Cloudy/Incandescent/Fluorescence
Exposure Setting	-3, -2, -1, 0, 1, 2, 3
ISO	Auto/6400/3200/1600/800/400/200/100
Time Watermark	On/Off

## 6. System Settings

Image Rotation	On/Off
WIFI	On/Off
WIFI Information	WIFI ID and WIFI Password
Reset WIFI	Confirm/Cancel
Light Source Frequency	Auto/ 50Hz/ 60Hz
LED Indicator	On/Off
Auto Screen Saver	Off/30S/1 Minute/2 Minutes
Auto Power Off	Off/3 Minutes/ 5 Minutes/ 10 Minutes
Button Prompt	High/Middle/Low/Off
Driving Mode	On/Off
Language	English/German/French/Spanish/Italian/Traditional Chinese/SimplifiedChinese / Japanese / Russian / Korean / Polish/Portuguese/Thai
Time Format	YYYY/MM/DD, MM/DD/YYYY, DD-MM-YYYY
Time Set	Hour/Minute/Second
Date Set	Year/Month/Day
Format	Format/ Cancel
Device Info	Product Model/Software Version/ Update Time
Factory Reset	Confirm/ Cancel



### Note:

To exit the Settings Menu, press the Mode Button to navigate to the final option  and confirm your selection by pressing the OK Button.

## Inserting a Micro SD Card

Please use a Class 10 Micro SD card with a maximum capacity of 128GB, pre-formatted on your computer, then insert it into the Micro SD card slot.

## Battery Charging


1. Connect to a computer or a power adapter to charge.
2. Connect to a car charger for charging in a vehicle.
3. The device can be charged while in video mode.

## Indicator Lights


1. The working LED emits a blue light.
2. The charging LED shows a red light, which remains constant while charging and turns off when fully charged.

## Photo/Video Mode Instructions

### A. Video Mode

1. Ensure the camera is set to Video mode before attempting to record.
2. If the video icon  resembling a camcorder, is visible on the screen, initiate recording by pressing the OK Button. The blue light will flash to indicate recording is in progress.
3. Press the OK Button once more to cease recording. The blue light will stop flashing and a beep will sound to confirm the action.

### B. Photo Mode

1. Confirm the camera is in Photo Mode when you wish to take a photograph.
2. If the photo icon , symbolized by a camera, appears on the screen, capture the photo by pressing the OK Button.

## Back/Front Screen Switching

Hold the Down Button to toggle between the Back and Front screens. When switching to the video and photo modes, the currently inactive screen will power down; the Back screen turns off when the Front screen is activated, and vice versa.

## Connection Methods

### Connect PC

When connecting the camera to a computer, power on the camera, and the screen will present three modes: USB Mode, PC Camera, and Charging Mode. Use the up and down buttons to navigate and select the desired mode.

**USB Mode:** Press the OK Button to enter this mode for video playback and photo access.

**PC Camera:** Press the OK Button to enable the camera to function as a webcam.

**Charging Mode:** Press the OK Button to charge the camera.

## App/WIFI Connection

Prior to utilizing the WIFI function, kindly ensure the installation of the “XDV PRO” application on your smartphone:

1. Scan the QR code below for downloading the app or search for “XDV PRO”.
2. Android users can acquire it from Google Play Store, while iOS users can find it on the App Store.
3. Note that the device’s name is “Por-Action4K”.
4. Upon powering on the camera, press and hold the Up Button to access WIFI information.
5. Locate the WIFI name and input the password on your smartphone or tablet for connection.



**6.** Launch the “**XDV PRO**” app on your device, enabling you to preview the shooting screen, remotely access videos and photos, and manage files by playing back, downloading, deleting, or sharing.

**7.** Ensure your phone system meets the requirements for APP installation: Android 4.1 and above, or iOS 7 or later.

## Specifications

LCD	2.0” Touch IPS +1.3” IPS Screen
LENS	150° Wide Angle Lens
Memory	Micro SD up to 128GB
WIFI	Support
Light source frequency	Auto/50HZ/60HZ
USB	USB 2.0
Power	5V/1A
Battery	1000mAh
Video time	80 mins
Charge time	About 2.5 hours
System	Windows XP/Vista/WIN7/Mac OS
Size	66×35×46.3mm
Video mode	Video/ Slowly/ Loop / Lapse
Picture mode	Photo/ Auto / Burst/ Timer
Video	4K60FPS, 4K30FPS, 2.7K30FPS, 1080P120/60/30FPS, 720P120/60/30FPS
Photo	24/20/16/12/10M
Compression format	H.264
Video format	MP4
Language	English / German / French /Spanish /Italian / Traditional Chinese / Simplified Chinese / Japanese / Russian / Korean / Polish / Portuguese / Thai

## Warranty

Products that you buy directly from our **Porodo** website or shop come with a 24-month warranty.

When you buy **Porodo** products from any of our approved sellers, you only get a 12-month warranty. If you want to extend this warranty, go to our website at **<https://porodo.net/warranty>** and fill out the form with your information. Don't forget to upload a picture of the product too. After we've checked and accepted your request, we'll send you an email to confirm that your product's warranty has been extended.

For more info, please check:

**<https://www.porodo.net/warranty>**

## Contact Us

If you have any questions about this Privacy Policy, please contact us at:

**[info@porodo.net](mailto:info@porodo.net)**

Website: **[porodo.net](https://porodo.net)**

Service Support: **[support@porodo.net](mailto:support@porodo.net)**

Instagram: **[porodo](https://www.instagram.com/porodo)**