

porodo



Porodo Gaming Speakers Wired 1.1m RGB

SKU: PDX543

Table of Contents

Features	2
Specifications	2
Warning	3
Operation Instructions	3
Troubleshooting	3
Warranty	4
Contact Us	4

Before installing and using the product, please carefully read this User Manual to guarantee correct usage and keep it secure for future reference.

Features

- 1. USB plug for power:** Provides power to the device through a standard USB connection.
- 2. 3.5mm audio plug for sound source:** Allows audio input via a 3.5mm jack from external devices.
- 3. Volume control knob:** Enables user to adjust the audio output level through a physical knob.
- 4. 7-color lighting with rainbow effects:** Features lighting that cycles through seven colors, creating dynamic rainbow effects.

Specifications

Power	3W ×2
Impedance	4Ω
Material	Plastic
Frequency Range	150Hz - 20KHz
Input Sensitivity	700±50mV
Power Supply	DC 5V/1A
Serial Number (S/N)	≥85dB
Driver Size	2 inches ×2
Interface	3.5mm Aux audio, USB (power)
RGB Light	7-color lighting with rainbow effects
USB and Audio Cable	Approx. 1.1m
Net Weight	380gr
Product Size	72×75×120mm

Warnings

- 1.** Do not disassemble or replace any components unless specifically instructed in the User Manual.
- 2.** Avoid immersing the product in water or any other liquids as it is not waterproof.
- 3.** Disconnect the product from other devices and dry any liquid splashes immediately to prevent fire or electric shock.
- 4.** Ensure your hands are dry when installing or disassembling the product to avoid electric shock.
- 5.** Do not expose the product to direct heat sources or open flames.
- 6.** Avoid placing the product near strong magnetic fields as it may cause malfunctions.

Operation Instructions

- 1.** Ensure correct connection of the speaker's 3.5mm jack and USB to the PC.
- 2.** Verify if the PC recognizes the speaker.
- 3.** Follow the instructions outlined in the User Manual.
- 4.** Avoid using the product in extreme environmental conditions.

Troubleshooting

In case of abnormal or ceases functionality, follow these steps:

- 1.** inspect the condition of the computer and speaker's 3.5mm jack and USB for any damage.
- 2.** Ensure proper insertion of the speaker's 3.5mm jack and USB.
- 3.** Verify computer settings are accurate; try disconnecting and reconnecting.
- 4.** restart the computer.

Note: If the issues persist despite these steps, please contact an authorized service and repair technician

Warranty

Products that you buy directly from our **Porodo** website or shop come with a 24-month warranty.

When you buy **Porodo** products from any of our approved sellers, you only get a 12-month warranty. If you want to extend this warranty, go to our website at <https://porodo.net/warranty> and fill out the form with your information. Don't forget to upload a picture of the product too. After we've checked and accepted your request, we'll send you an email to confirm that your product's warranty has been extended.

For more info, please check:

<https://www.porodo.net/warranty>

Contact Us

If you have any questions about this Privacy Policy, please contact us at:

info@porodo.net

Website: porodo.net

Service Support: support@porodo.net

Instagram: [porodo](#)