



Green Lion

GRIND PRO Coffee Grinder


SKU: GNGRND45BK

Model No: GL-CG45


Table of Contents

Instructions for Use	2
Charging Guide	4
Refilling Instructions	5
Adjusting the Grind Level	5
Specifications	6
Troubleshooting	6
Disposal	7
Warranty	7
Contact Us	7


Instructions for Use

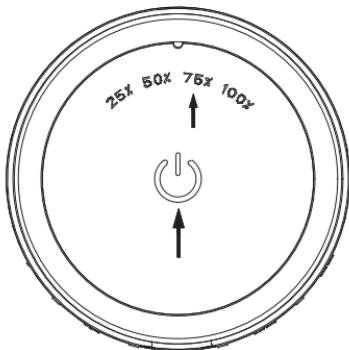


Press the button to start grinding. The power indicator will light up when the grinder is in operation.

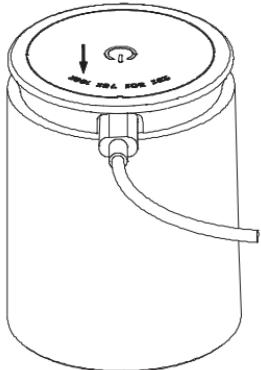

The power indicator flashes during charging. Once fully charged, the 100 % indicator will light up.

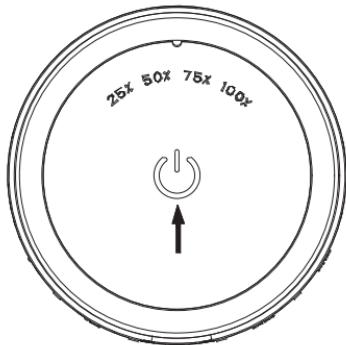


The grinder will automatically stop once all the coffee beans are ground. Grinding can also be stopped by pressing the button again.

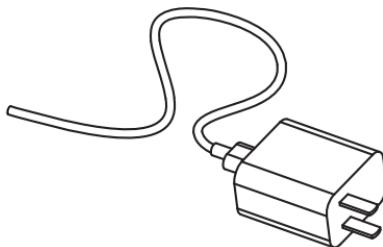


The grinder can be charged via a plug.

Charging Guide

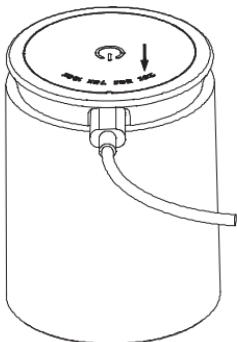


The opening on the top is the USB charging port, and the power indicator will flash while charging.

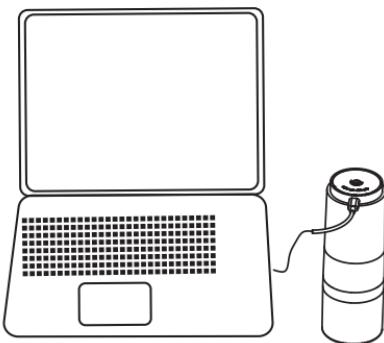

Alternatively, you can charge it using your computer.

Refilling Instructions

1. Rotate the top portion of the hopper clockwise to open the coffee bean compartment.
2. Add coffee beans to the center of the hopper.
3. For optimal grinding, we recommend filling approximately 80 % of the hopper with coffee beans.
4. Rotate the top portion of the hopper counterclockwise to close the coffee bean compartment.

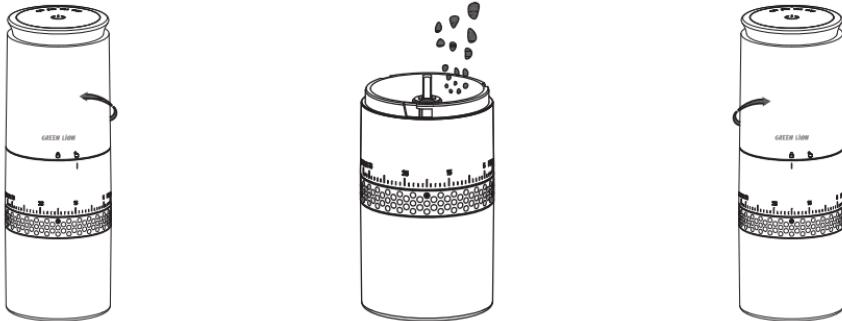


Adjusting the Grind Level

1. The grind level adjustment ring is located at the bottom of the machine.
2. To achieve a finer grind, turn the ring clockwise.
3. To achieve a coarser grind, turn the ring counterclockwise.

Notice:

 - a. Use a damp cloth to clean the exterior of the grinder.
- b. Avoid placing the top core in water.
- c. Store the product in a dry location.



Specifications

Model No.	GL-CG45
Material	ABS+Ceramic
Battery	1500mAh
Power	13W
Bean Holder	25 g
Powder Holder	110 ml
Grind Settings	0-38
RPM Range	12500 RPM
Charging Port	Type-C
Charging Time	2-2.5 Hrs
Single Grinding	2-3 min
Grinding Cycle	12-15 Times
Product Weight	420 g
Product Dimensions	72*72*200 mm

Troubleshooting

The device is unable to charge.	1. Check if the charging cable is properly connected. 2. Verify if the battery is damaged.
The motor is not functioning properly.	1. Check if the battery has power. 2. Ensure there is no foreign matter in the coffee bean hopper. 3. Confirm that the installation is correct.
The motor operates for a short duration.	The power is insufficient; please charge the device.

Disposal

This product must not be disposed of as unsorted household waste. It is important to separate such waste for proper treatment and recycling, in compliance with local waste management regulations.

Warranty

Products that you buy directly from our **Green Lion** website or shop come with a 24-month warranty.

When you buy **Green Lion** products from any of our approved sellers, you only get a 12-month warranty. If you want to extend this warranty, go to our website at <https://www.greenlion.net/warranty> and fill out the form with your information. Don't forget to upload a picture of the product too. After we've checked and accepted your request, we'll send you an email to confirm that your product's warranty has been extended.

For more info, please check:

<https://www.greenlion.net/warranty>

Contact Us

If you have any questions about this Privacy Policy, please contact us at:

Website: <https://www.greenlion.net/>

Sales: sales@greenlion.net

Service Support: Support@greenlion.net

Telegram: [@greenlion_global](https://t.me/greenlion_global)

Instagram: [@greenlion_global](https://www.instagram.com/greenlion_global)