



Porodo Soundtec

Wrist Sound Active

Wireless Speaker

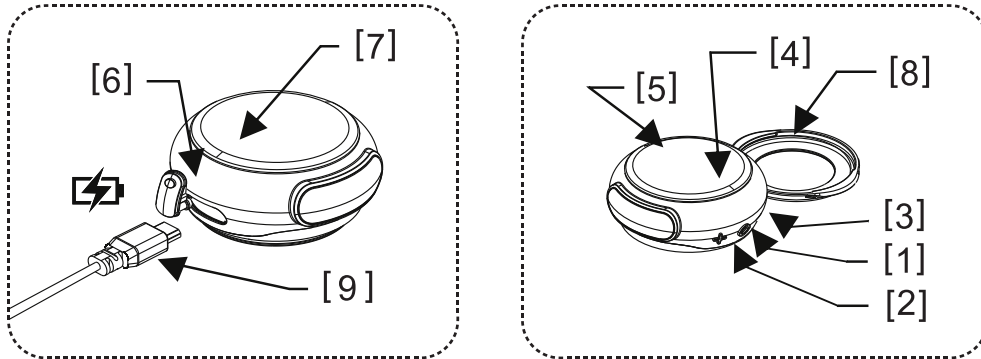
SKU: PD-STSWBS-BK




Table of Contents

Product Overview	2
Features	2
Charging	3
Usage Instructions	3
Pairing Instructions	4
A. Pairing Two Speakers	4
B. Reconnect Phone	4
C. Pair with a Different Phone	4
Disconnect the Speaker	5
Power OFF	5
Music Playback Guide	5
Call Management	6
Low Battery Alert	6
Troubleshooting	7
Specifications	7
Warranty	8
Contact Us	8

Before installing and using the product, please carefully read this User Manual to guarantee correct usage and keep it secure for future reference.

Product Overview




- [1]** Bluetooth/Play/Call  Button
- [2]** Volume + / Skip to Next Track  Button
- [3]** Volume - / Previous Track  Button
- [4]** Bluetooth LED Indicator
- [5]** Built-in Microphone for Speakerphone Functionality
- [6]** Charging Port: USB Type-C
- [7]** LED Charge Indicator
- [8]** Detachable Clip
- [9]** Charging Cable: USB Type-C

Features

- 1.** Versatile clipping options: Attach to T-shirts or pillowcases.
- 2.** Bluetooth wireless speaker mode.
- 3.** Sleeper mode featuring auto-play white noise with 17 built-in tracks.
- 4.** Quick-snap feature for easy detachment.
- 5.** IPX-6 rated waterproof.
- 6.** 3W speaker offering high clarity audio.
- 7.** Hands-free functionality for call answering.
- 8.** Equipped with Bluetooth v5.3 for reliable wireless connectivity.

Charging

1. Lift up the speaker's rubber cover and insert the Micro USB Type-C end of the recharge cord.
2. Connect the USB end of the recharge cord  to a USB power source.
3. The red LED will light up, indicating that charging is in progress.
4. When fully charged (approximately 1.5 hours), the LED will turn off.

Usage Instructions

A. Wearing the Speaker (Bluetooth Mode)


Caution: Before using, carefully test the clip's tightness to ensure it does not damage your T-shirt fabric.

1. Position the speaker on your T-shirt near your shoulder.
2. Place the clip under your T-shirt.
3. Orient the speaker with the buttons facing you for easier access.
4. Snap the speaker onto the holder ring, ensuring the T-shirt fabric is sandwiched between them.
5. Reverse this process when removing the speaker.

B. Sleeper Mode


Caution: Test the clip's tightness carefully to ensure it does not damage the pillowcase fabric.

1. Mount the speaker on your pillowcase near your head.
2. Place the clip underneath your pillowcase fabric.
3. Rotate the speaker so the buttons face you for easier access.
4. Attach the speaker to the holder ring, ensuring the pillowcase fabric is sandwiched between them.
5. Reverse this process to remove the speaker.

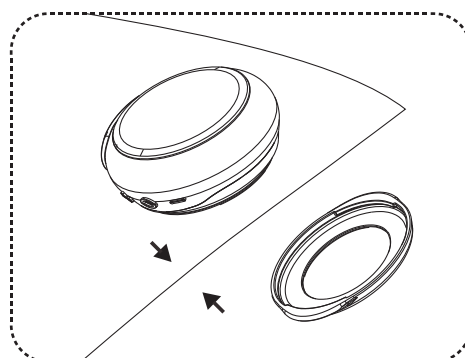

Pairing Instructions

Note: The default setting when powering on is set to 'Bluetooth Mode'.

1. Press and hold the Bluetooth/play/call button  for 3 seconds until you hear the sound 'dondooo...'.
2. Upon activation, the speakers' blue LED will begin flashing rapidly.
3. Enable Bluetooth on your phone, search for and select the device named "ST-WristSound".
4. Listen for the tone 'buloop'; the speaker's blue LED will then remain lit steadily.
5. Your speaker is now successfully paired with your phone.

A. Pairing Two Speakers

Should you acquire an extra speaker (optional) and wish to configure them as a pair of TWS stereo speakers, please follow these instructions:

1. Power both speakers on simultaneously.
2. Allow them to automatically pair with each other.
3. If only one speaker was previously paired with your phone, first delete all related records from your phone's Bluetooth list.
4. Turn your phone's Bluetooth off and then on again, and proceed to follow the pairing steps for both speakers.

B. Reconnect Phone

1. Ensure that the Bluetooth on your previously connected phone is active before turning on the speakers.
2. Press and hold the Bluetooth/play/call button on the speaker for 3 seconds until you hear the tone indicating "ready for connection."
3. Wait 5 seconds until you hear the confirmation tone, and the speaker's blue LED will remain steadily lit.
4. The pairing is now successfully re-established and the device named "ST-WristSound" can be found in the list of connected devices.


C. Pair with a Different Phone

1. Deactivate the Bluetooth function on your previously connected phone.
2. Activate the Bluetooth on the phone you wish to connect.
3. Follow the initial pairing steps as previously outlined and connect to the device named "ST-WristSound".

Disconnect the Speaker

1. Upon activation, the speaker will automatically set itself to 'Bluetooth mode'.
2. Short-press the **+** button twice. This action switches the speaker to 'Sleeper Mode' and initiates the playback of the first white noise track.
3. Press the **+** button twice again to revert to 'Bluetooth Mode'. The blue LED will begin to flash, signaling that the speaker is ready to pair or reconnect with a previously linked phone or device.

Power OFF

1. Turn off the Bluetooth function on your phone.
2. The blue LED on the main speaker will begin to flash rapidly.
3. Hold the Bluetooth/play/call button  for 6 seconds until you hear the 'dolululu' sound, indicating the speaker has been turned off. The pairing data will remain stored.

Music Playback Guide

A. Music Playback

1. Press the Bluetooth/Play/Call button  to play music (resumes from the last track position).
2. Press the Bluetooth/Play/Call button  again to pause the music.

B. Adjust Volume

1. Press the Volume+/Next button **+** to increase the volume during music playback or a call.
2. Press the Volume-/Previous button **—** to decrease the volume during music playback or a call.
3. You can press multiple times to adjust the volume to your desired level.

Note: Be careful not to click too quickly, as rapid clicks can activate 'Sleeper mode'.

C. Next-forward / Previous-backward

This feature is available during music playback.

1. Press and hold Volume+/Next button **+** to move to the next track.
2. Press and hold Volume-/Previous button **—** to move to the previous track.

D. White Noise Playback (at Sleeper Mode)

1. Press and hold Volume+/Next button **+** to move to the next white noise track.
2. Press and hold Volume-/Previous button **-** to move to the previous white noise track.

In Sleeper Mode, the white noise track will automatically play for 30 minutes until auto mute. At any time, click the Play/Call button **○** again to play the white noise track for another 30 minutes.

17 Tracks of White Noise:

- | | | |
|----------------------|-----------------------|--------------------------|
| 1. Water Stream | 6. Insects Buzzing | 12. Heavy Rain |
| 2. Beat Machine | 7. Thunderstorm | 13. Rain |
| 3. Forest Birdsong | 8. Running Water | 14. Morning Birds |
| 4. Frog Chirp | 9. Seagulls and Waves | 15. Birds Singing |
| 5. Crickets Chirp w/ | 10. Ocean Waves | 16. A Flock of Birds |
| | 11. Water Dripping | 17. Tibetan Singing Bowl |

Call Management

A. Incoming Call Handling

1. If music is playing, it will automatically pause.
2. You will hear the ringtone ("ring, ring, ring...").
3. To answer the call, press the Bluetooth/play/call button **○** once. Speak after the call connects.
4. To end the call, press the Bluetooth/play/call button **○** again. The music will resume playing.

B. To Reject a Call

Press and hold the Bluetooth/play/call button **○** for one second to reject an incoming call directly. Music playback will resume.

C. Redialing

When there is no incoming call, double-click the Bluetooth/play/call button **○** to redial the last number in your phone's call history.

Low Battery Alert

When the battery level is low, an alert beep will sound during playback to indicate it's time to recharge. Please follow the charging instructions provided in the "Charging" section.

Troubleshooting

A. Common Issues

1. Multiple entries of the same speaker pairing name appear on your phone.
2. Sudden loss of sound and inability to reconnect and play normally.

B. Steps to Resolve

1. Turn OFF the speaker.
2. Plug in and recharge the speaker until the Red LED turns off (indicating the speaker is fully charged).
3. Clear all previous speaker pairing names from your phone's Bluetooth list.
4. Turn OFF Bluetooth on your phone.

C. Re-pairing

After completing the above steps, you can turn on Bluetooth and the speaker to pair them again for use.

Specifications

Product Name	Porodo Soundtec Wrist Sound Active Wireless Speaker
SKU	PD-STSWBS-BK
Battery	3.7V Li-ion 250mAh
Output	3W
Recharge Time	1.5h
Play Time	8.5h (30 % Volume), 4.5h (50 % Volume)
Bluetooth Version	V5.3
Bluetooth Name	ST-WristSound
Bluetooth Range	<10m
Signal Noise Ratio	≥75dB
Weight	50g
Dimensions	55×56×27mm
Material	ABS, Silicone, Fabric
Accessories	Wristband, Detachable Clip with Hanger
Charging Port	USB Type-C

Warranty

Products that you buy directly from our **Porodo** website or shop come with a 24-month warranty.

When you buy **Porodo** products from any of our approved sellers, you only get a 12-month warranty. If you want to extend this warranty, go to our website at **<https://porodo.net/warranty>** and fill out the form with your information. Don't forget to upload a picture of the product too. After we've checked and accepted your request, we'll send you an email to confirm that your product's warranty has been extended.

For more info, please check:

<https://www.porodo.net/warranty>

Contact Us

If you have any questions about this Privacy Policy, please contact us at:

info@porodo.net

Website: **porodo.net**

Service Support: **support@porodo.net**

Instagram: **[porodo](https://www.instagram.com/porodo)**