

**PORODO**  
LIFESTYLE



**Porodo Lifestyle**


**NUTRIMIX Dual-Spin Blender**

SKU: PDBLNDR240

# Table of Contents

Overview	2
Specifications	3
Cautions	3
First Blend	4
Blending Tips	4
Check Battery Level	4
Instructions for Use	5
Troubleshooting	6
Notes	7
Disposal	7
Warranty	8
Contact Us	8

# Overview

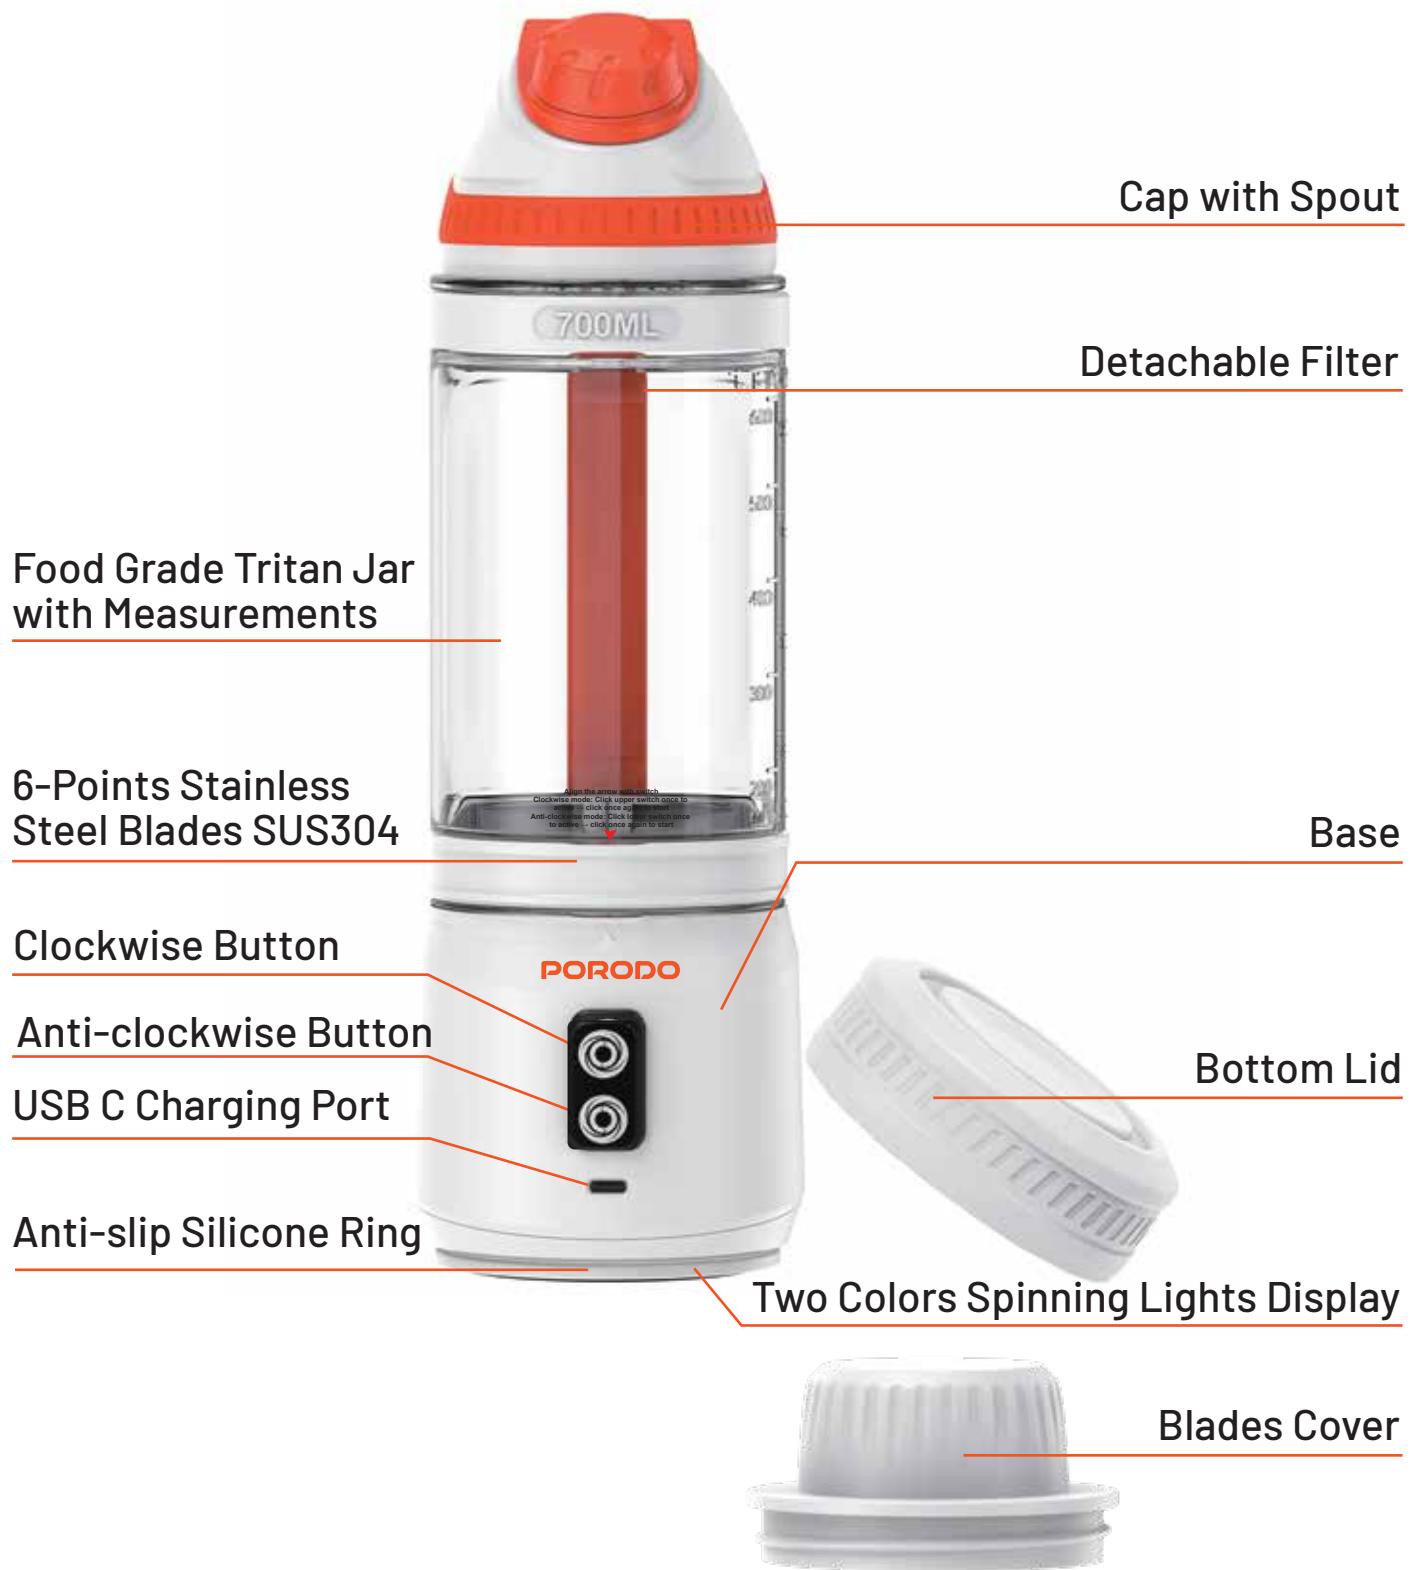

Made with imported, environmentally-friendly materials, this blender is constructed from Food Grade Tritan material. It is BPA-free and holds CE, ROHS, and FCC approvals for safety and quality.

# Specifications

Input	5V/2A
Jar Capacity	700mL
Jar Material	Tritan
Blade Material	304 Stainless Steel
Rated Power	240W
Battery Capacity	2000mAh×3
Motor Speed	18000RPM
Charging Time	3H
Single Working Time	30 Seconds Per Cycle
Model Number	PDBLNDR240

# Cautions

1. Do not remove the lid or add any rigid objects while the blender is in operation to ensure safety.
2. Do not submerge the base in water. To prevent internal component damage, ensure the blender is powered off before cleaning.
3. Avoid using the blender in microwaves or exposing it to water temperatures exceeding 80°C for sanitizing purposes.
4. Do not place the blender in the freezer.
5. Avoid using metallic spiral balls for cleaning, as they can scratch or damage the blender parts.
6. Do not place the blender in a dishwasher.
7. Do not charge the blender while it is wet to avoid potential damage.
8. Avoid attempting repairs or disassembly yourself, as it will void the warranty. In case of malfunction, please contact a service center for assistance.

## **First Blend**

1. Ensure the blender is fully charged by confirming that all indicator lights are green before starting your first blend.
2. Align the bottle arrow with the power button by tightening the body and base.
3. Clean the blender immediately after use to maintain its hygiene and performance.

## **Blending Tips**

### **1. Clockwise Blend Mode**

- 1.1 Press the upper button twice to start blending in a clockwise direction.
- 1.2 Press the button again to stop blending.
- 1.3 The bottom green lights will flash and spin clockwise. After use, the lights will turn off after 5 seconds.

### **2. Anti-Clockwise Blend Mode**

- 2.1 Press the lower button twice to start blending in an anti-clockwise direction.
- 2.2 Press the button again to stop blending.
- 2.3 The bottom multi-color lights will flash and spin in the opposite direction. After use, the lights will turn off after 5 seconds.

## **Check Battery Level**

1% -17 %: No lights

18 % -33 %: 2 green lights

34 % -50 %: 4 green lights

51 % -67 %: 6 green lights

68 % -83 %: 8 green lights

84 % -99 %: 10 green lights

Fully Charged: All 12 green lights on, red light off

# Instructions for Use

**Step 1:** Cut fruits into small pieces before adding them into the blender. Fill the jar up to approximately 60 % of its capacity.

**Step 2:** Add a drinkable liquid (water, juice, or milk) until the mixture reaches 80 % of the jar's capacity.

**Step 3:** Tighten the lid and tilt the blender to ensure the fruit pieces are not blocking the blades.

**Step 4:** Clockwise Mode: Press the upper button twice to blend clockwise.

**Anti-clockwise Mode:** Press the lower button twice to blend anti-clockwise. To stop blending at any time, press the button again.

**Intelligent Function:** The blender will automatically change the spinning direction if the blades get stuck, ensuring smoother blending.



Step 1



Step 2



Step 3



Step 4

## Usage Safety Notes



Install the bottom lid:  
Secure the bottom lid to ensure proper operation.



What's Included in the Box?  
The package includes Lid, Filter, Cup body, Base + Blade Cover, Bottom lid, and USB cable.



The USB port is waterproof. However, do not immerse the base in water or place it in the dishwasher to avoid damaging the battery and electrical components.



Avoid mixing hard-shelled fruits, nuts, and large frozen fruit pieces, as they may cause the blender's blades to jam or block. It is recommended to cut fruits or vegetables into 1-inch (2.5 cm) pieces to avoid this issue.

## Troubleshooting

### **1. Problem:** Blender doesn't work or red and yellow lights flash.

**Possible Cause:** The blender has run out of battery.

**Solution:** Charge the blender for 3 to 4 hours to ensure it is fully charged.

### **2. Problem:** Blender won't turn on, and red lights flash 8 times.

**Possible Cause:** The safety power button has been turned off.

**Solution:** Tighten the jar and base, ensuring the bottle arrow aligns with the power button.

### **3. Problem:** Blender stops working, all indicator lights flicker in red for 8 seconds.

**Possible Cause:** The ingredients are too thick or the volume is too large, triggering motor overload protection.

**Solution:** Add some liquid or cut ingredients into smaller pieces, then restart the blender.

### **4. Problem:** Blender is leaking.

**Possible Cause:** The seal is not placed properly, or the jar/cap is cross-threaded.

**Solution:** Check the seal and verify that the thread alignment is correct when screwing on the jar/cap.

## 5. Problem: Blender can't recharge fully after 4 hours.

Possible Cause: The recharging cable or adapter is not suitable.

Solution: Check the recharging adapter or cable and ensure it meets the 5V/2A requirement.

## Notes

1. The product is compatible with a USB C cable (5V/2A), and it is also suitable for charging via a 5V/2A power bank.
2. If not used for an extended period, charge the blender fully to maintain the battery in a high-voltage state, preventing potential damage.



Don't put it in the dishwasher



Keep away from fire



Non-microwavable



Fragile



Food contact compliance

## Disposal

This product must not be disposed of as unsorted household waste.

It is important to separate such waste for proper treatment and recycling, in compliance with local waste management regulations.

## **Warranty**

Products that you buy directly from our **Porodo** website or shop come with a 24-month warranty.

When you buy **Porodo** products from any of our approved sellers, you only get a 12-month warranty. If you want to extend this warranty, go to our website at [porodo.net/warranty](http://porodo.net/warranty) and fill out the form with your information. Don't forget to upload a picture of the product too. After we've checked and accepted your request, we'll send you an email to confirm that your product's warranty has been extended.

For more info, please check:  
[porodo.net/warranty](http://porodo.net/warranty)

## **Contact Us**

If you have any questions about this Privacy Policy, please contact us at:

**info@porodo.net**

Website: **porodo.net**

Service Support: **support@porodo.net**

Instagram: **porodo**