

**PORODO**  
LIFESTYLE



**Porodo Lifestyle**  
**FLURA Mini Cooling Fan**  
**Desktop & Wall Mount**

SKU: PDF83GY

# Table of Contents

Product Overview	2
Specifications	2
Schematic View	3
Package Contents	4
Usage Guide	4
LED Display	4
Fan Gear Discharging Time	5
Safety Precautions	6
Disposal	7
Warranty	7
Contact Us	7

## Product Overview

 
 
The Porodo LifeStyle FLURA Mini Cooling Fan is a versatile and efficient cooling solution, designed for both desktop and wall-mounted use. This compact fan features a digital LED display that clearly shows real-time power status and wind speed levels, allowing for easy control and feedback. With three adjustable speed modes, including a natural circulation option, the FLURA fan provides personalized comfort to suit any environment. Its powerful turbo airflow ensures effective cooling, while the fan operates silently, making it ideal for quiet spaces. The touch control panel offers a sleek and intuitive way to adjust settings without the need for physical buttons, enhancing the overall user experience. Whether used on a desk or mounted on the wall, the FLURA Mini Cooling Fan delivers a blend of performance and convenience, making it a perfect choice for cooling in various settings.

## Specifications


Input	5V/2A
Battery Capacity	3000mAh
Working Time	3H~ 9.5H
Charging Time	2.5H
Charging Interface	Type-C
Speed Modes	4 (Low, Medium, High, Circulating Air Mode)

Product Weight	370g
Product Size	69.5 x 143.7 x 146.3mm
Model Number	PDF83

## Schematic View

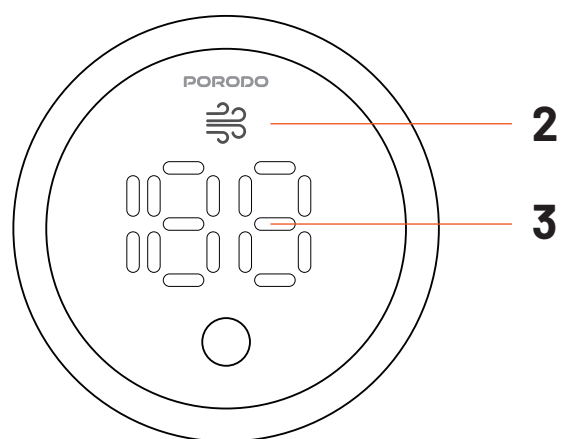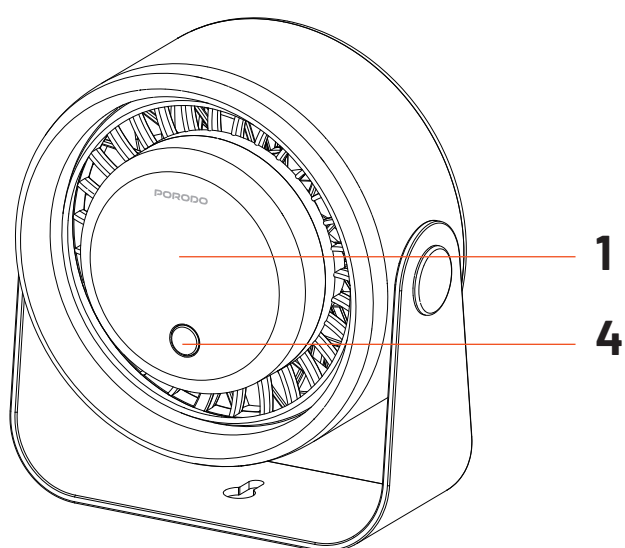

 - 1.** LED Display
- 2.** Fan Icon
- 3.** Speed/Power Display
- 4.** Power Button
- 5.** Type-C Charging Port
- 6.** Hook

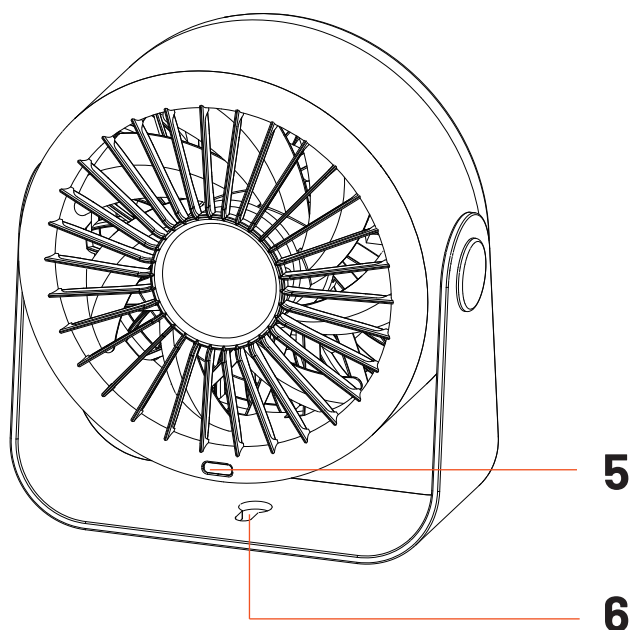

## Package Contents

- Fan
- Charging Cable
- Certificate of Authenticity

## Usage Guide

### **1. Fan Button Controls:**

**1.1** Turn On: Press the fan button once to activate the fan, which will start at the default setting of Gear 01.

**1.2** Adjust Speed: Press the button again to change the fan to Gear 02 (medium speed), and press a third time to set it to Gear 03 (high speed).

**1.3** Natural Wind Mode: Press the fan button for a fourth time to switch to the Natural Wind Mode, offering a gentle, fluctuating airflow.

**1.4** Turn Off: Press the button a fifth time to power off the fan.

### **2. Protection Function:**

If the fan is running and any abnormal behavior is detected (e.g., the fan motor fails to rotate, fan blades fall off, or the blades become obstructed), turn off the fan immediately to avoid potential damage or hazards.

### **3. Type-C Charging Port:**

The fan features a Type-C charging port on its body. This port allows for convenient recharging of the fan when the battery runs low.

## LED Display

### **1. Fan Speed Display:**

**a.** 1st Gear: The fan logo lights up in green, indicating low fan speed.

**b.** 2nd Gear: The fan logo lights up in green, showing medium fan speed.

- c.** 3rd Gear: The fan logo lights up in green, signaling high fan speed.
- d.** Natural Wind Mode: The fan logo lights up in green, indicating the fan is operating in a natural wind pattern, simulating a breeze.
- e.** Cycle Mode: The fan logo will blink in a breathing pattern when the fan is set to run in a continuous cycle mode.

## **2. Protection Display:**

If the fan encounters any issues or malfunctions, the current gear number will flash for 3 seconds to indicate an abnormal situation.

## **3. Low Battery Display:**

When the battery power falls below 10% (including exactly 10%), the power display will blink until the fan shuts off automatically. After turning off, the function indicator will blink "00" ten times before shutting down completely, signaling that the fan is no longer operational.

## **4. Discharge Display:**

While the fan is in use, the power display will gradually decrease from 100% to 00%, indicating the battery is depleting.

## **5. Charging Display:**

During charging, the unit digit of the battery level will gradually increase from 00 to 100% as the fan charges.

## **Notes:**

### **a.** When Charging or Working:

The battery level will be displayed first, and the current battery level will remain visible for 3 seconds after the fan begins operation.

### **b.** In Natural Wind Mode:

When operating in natural wind mode, the battery level is not displayed while the fan is either charging or in use.

## **Fan Gear Discharging Time**

- Fan Gear 1: Provides up to 9.5 hours of operation on a full charge.
- Fan Gear 2: Operates for approximately 4.5 hours after a full charge.
- Fan Gear 3: Runs for about 3 hours with a full charge.

## Safety Precautions

- 1.** When using this product for the first time, it is important to completely deplete the battery before fully charging it. This will help optimize the battery's performance and enhance its longevity.
- 2.** To prevent battery damage, it is recommended that you charge the product at least once every three months, even if not in use.
- 3.** If you plan to store the product for an extended period, ensure it is fully charged before storage. This will help maintain the battery's health and prevent any potential issues when you begin using it again.
- 4.** For safety reasons, do not allow children under 6 years of age or individuals with disabilities to operate this product without adult supervision.
- 5.** Do not use the product in bathrooms, swimming pools, or other areas where it could be exposed to excessive moisture. This may damage the product or pose a safety risk.
- 6.** To clean the product, avoid washing the fan blades and detachable hoods directly with water. Instead, use a dry cloth or a specialized cleaning method to prevent water damage.
- 7.** Do not insert sharp objects into the air inlet cover, as this could cause damage to the product or affect its performance.
- 8.** Ensure the air inlet is never covered or obstructed. Proper airflow is essential for the product's function, and blocking the air inlet may cause overheating or malfunction.
- 9.** Do not attempt to puncture, disassemble, or repair the product yourself. Unauthorized repairs or modifications may void the warranty and can result in permanent damage. If repairs are necessary, please contact an authorized service provider.

## Disposal

This product must not be disposed of as unsorted household waste. It is important to separate such waste for proper treatment and recycling, in compliance with local waste management regulations.

## Warranty

Products that you buy directly from our **Porodo** website or shop come with a 24-month warranty.

When you buy **Porodo** products from any of our approved sellers, you only get a 12-month warranty. If you want to extend this warranty, go to our website at **[porodo.net/warranty](https://porodo.net/warranty)** and fill out the form with your information. Don't forget to upload a picture of the product too. After we've checked and accepted your request, we'll send you an email to confirm that your product's warranty has been extended.

For more info, please check:  
**[porodo.net/warranty](https://porodo.net/warranty)**

## Contact Us

If you have any questions about this Privacy Policy, please contact us at:  
**[info@porodo.net](mailto:info@porodo.net)**

Website: **[porodo.net](https://porodo.net)**

Service Support: **[support@porodo.net](mailto:support@porodo.net)**

Instagram: **[porodo](https://www.instagram.com/porodo)**