



Porodo Soundtec

SOH0 Active Noise-Cancellation

SKU: PDST2227

Table of Contents


Specifications	2
Schematic View	2
Charging	3
Turn ON/OFF	3
Wireless Connection	3
Wireless Mode Functions	3
ANC Mode	4
Wired Connection	4
Safety Instructions	4
Disposal	5
Warranty	5
Contact Us	5

Thank you for purchasing the Porodo Soundtec SOHO Active Noise-Cancellation Headphone. Please read this manual thoroughly before using the device. Keep the manual for future reference.

Specifications

Model	PDST2227
Input	5V/1A
Battery Capacity	600mAh
Recharge Time	2H
Playtime	40H (ANC and Lights OFF), 9H (Lights ON), 8H (ANC ON)
Speaker Diameter	Φ40mm
Bluetooth	V5.4
Transmission Distance	<15M
Bluetooth Frequency	2402 - 2480 GHz
Speaker Frequency	20Hz-20KHz
Support format	Support format: MP3/WAV
Microphone sensitivity	-42 ±3 dB
ANC depth	20±2 dB
Working range	About 15 m

Schematic View

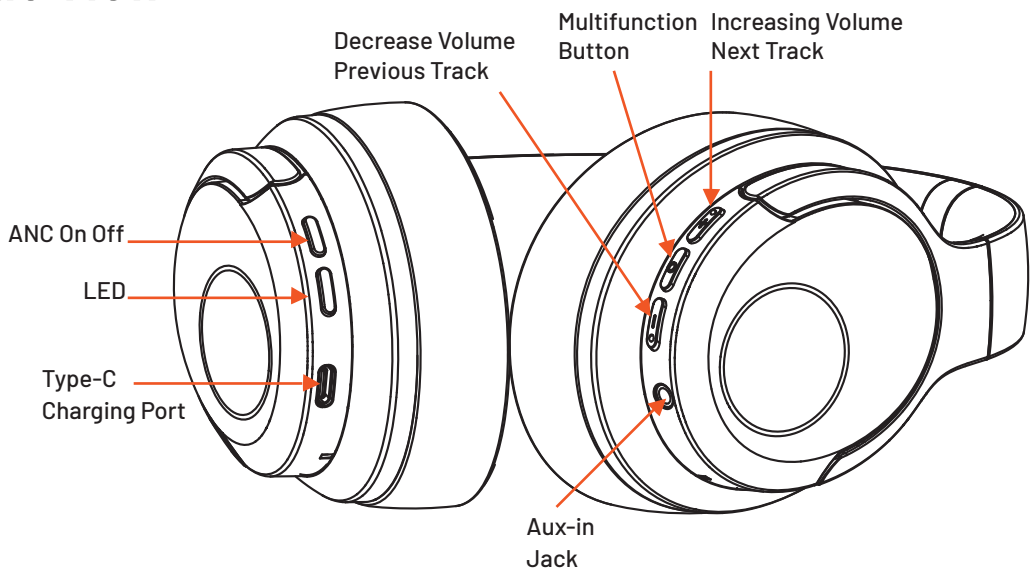

Charging

Fully charge the headphone battery before first use. To charge, insert the charging cable into the charging port and connect it to a power source. While charging, the indicator will turn red, and it will turn off once fully charged. Charging takes approximately 2 hours. When the battery is running low, an alarm sound will be heard. Please charge the battery immediately.

Turn ON/OFF

- 1. Turn ON:** Press and hold the Multi-function button for 3 seconds. The indicator will flash red and blue, indicating the device is ready to pair.
- 2. Turn OFF:** Press and hold the Multi-function button for 3 seconds. The indicator will turn off.

Wireless Connection

Wireless mode enables the functionality of a wireless music player.

- 1.** Turn on the headphones, and the indicator will flash blue and red.
- 2.** Enable the Bluetooth on your phone, search for the device "PD_SOHO" and select it to connect.
- 3.** Once paired successfully, you can play music and answer or make phone calls freely.

Safety Instructions

- 1. Answer a Call:** When the headphone is connected to your phone, press the Multi-function button once to answer the call. To end the call, press and hold the button for 2 seconds.
- 2. Make a Phone Call:** While the headphone is connected to your phone, double press the Multi-function button to redial the last called number. Press and hold the button for 2 seconds to stop redialing.

3. **Reject a Call:** Hold the Multi-function button for 2 seconds and release to reject an incoming call.
4. **Adjust Volume:** Short press the (+) or (-) button to adjust the volume.
5. **Change Track:** Long press the (+) or (-) button to skip to the next or previous track.

ANC Mode

1. Turn on the headphones first.
2. Press the ANC button to activate the ANC function. The indicator light will turn green.
3. Press the ANC button again to deactivate the ANC function.
4. The flashing colored lights will be turned off while the ANC function is activated.
5. When the headphones are turned on, the colored lights will be activated simultaneously. Press the LED button briefly to turn off the colored lights.

Wired Connection

1. To use as a wired headphone, plug the 3.5mm cable into the Aux port and connect the other end to a computer or other music device. The headphones will then work as a wired headphone.
2. While in this mode, you can only control the volume and track via the connected device.

Wired Connection

1. Dropping the device may result in damage.
2. Always store the device in a dry environment.
3. Avoid exposing the device to high temperatures, as this can cause damage or reduce its lifespan.
4. Do not expose the device to rain, water, moisture, or humid conditions.
5. Keep the device away from the kitchen or bathroom, particularly near taps or sources of water.
6. Do not attempt to open the device yourself.

Disposal

This product must not be disposed of as unsorted household waste. It is important to separate such waste for proper treatment and recycling, in compliance with local waste management regulations.

Warranty

Products that you buy directly from our **Porodo** website or shop come with a 24-month warranty.

When you buy **Porodo** products from any of our approved sellers, you only get a 12-month warranty. If you want to extend this warranty, go to our website at **porodo.net/warranty** and fill out the form with your information. Don't forget to upload a picture of the product too. After we've checked and accepted your request, we'll send you an email to confirm that your product's warranty has been extended.

For more info, please check:

porodo.net/warranty

Contact Us

If you have any questions about this Privacy Policy, please contact us at:

info@porodo.net

Website: **porodo.net**

Service Support: **support@porodo.net**

Instagram: **[porodo](https://www.instagram.com/porodo)**