



**Porodo Soundtec**  
**True Flex Earbuds Pro with**  
**Music and Gaming Mode**

 
SKU:PDST2242

# Table of Contents

Schematic View	2
Functional Operation	2
Charging Instructions	3
Bluetooth Pairing	3
Voice Prompts	4
Precautions	4
Specifications	4
FAQ	5
Disposal	5
Warranty	6
Contact Us	6

## Schematic View

1. Multifunctional Buttons
2. Earphone Charging Contact
3. Microphone
4. Charging Case Indicator Light
5. Type-C Charging Port

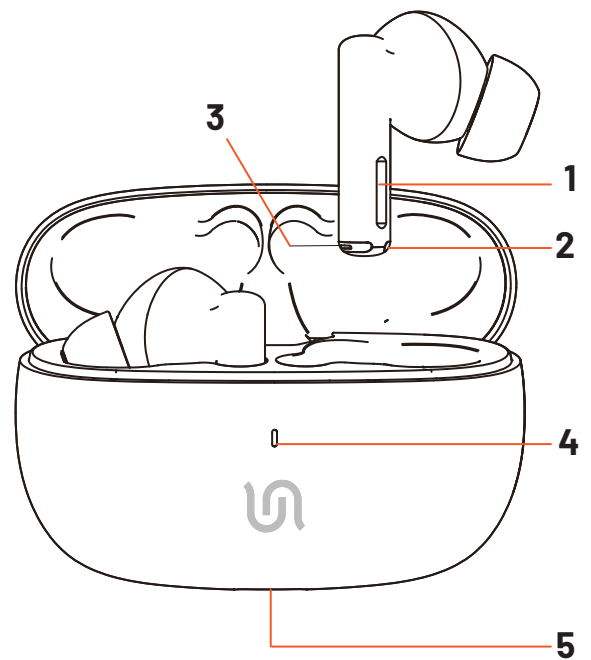

## Functional Operation


1. Power On: Press and hold the multifunction button on the left or right earbud for 3 seconds. When you open the charging case lid, the earbuds will automatically turn on or off, accompanied by a "power on" sound.
2. Power Off: Press and hold the multifunction button on the left or right earbud for 5 seconds while the charging case is either on or off. This action is accompanied by a "power off" sound.
3. Pause / Play: Tap once on the left or right earbud.
4. Previous Track: Double-tap the left earbud.
5. Next Track: Double-tap the right earbud.
6. Volume Up: Triple-tap the right earbud.
7. Volume Down: Triple-tap the left earbud.
8. Answer / Hang Up Call: Tap the left or right earbud.
9. Reject Call: Double-tap the left or right earbud.
10. Activate Voice Assistant: Press and hold the left or right earbud for 2 seconds.
11. Reset: When not connected, tap five times on either the left or right earbud.
12. Low Battery Reminder: When the earbuds are low on battery, a reminder will sound every 60 seconds, accompanied by a "please charge" prompt.

## Charging Instructions


1. Earbuds: Place the earbuds in the charging case; the green light will turn on and the full light will turn off.
2. Charging Case: The orange indicator on the charging case will blink, and the charging indicator will turn off when fully charged.

## Bluetooth Pairing


Open the charging case and the earbuds will turn on automatically. The left and right earbuds will connect automatically. Please keep the distance between the Bluetooth earbuds and your mobile phone (or other connected devices) within 50 cm. The closer the better for optimal connection.

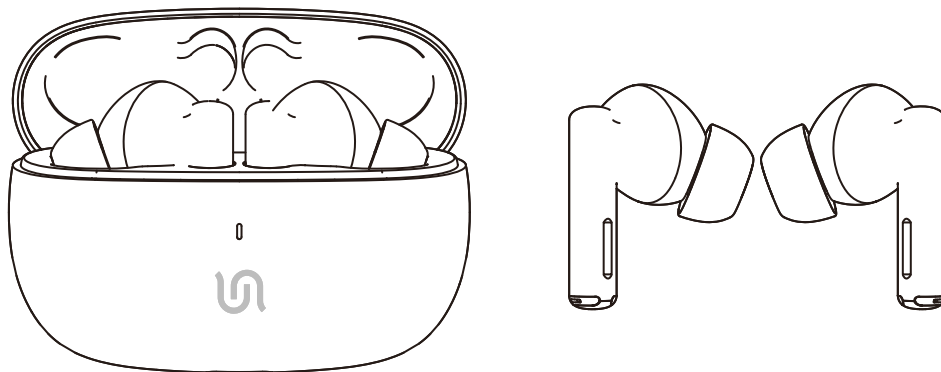

Open the Bluetooth interface on your phone to search for "PDST2242". Click on pairing, and it will successfully connect to the phone with a "connection" tone.

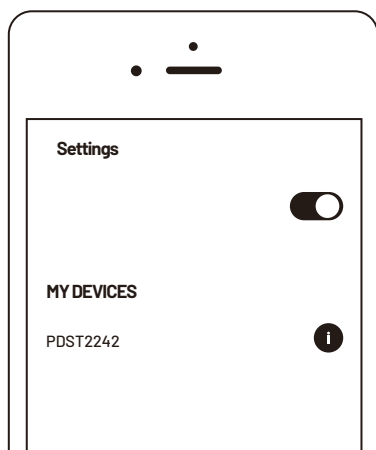

Search for Bluetooth devices "PDST2242"

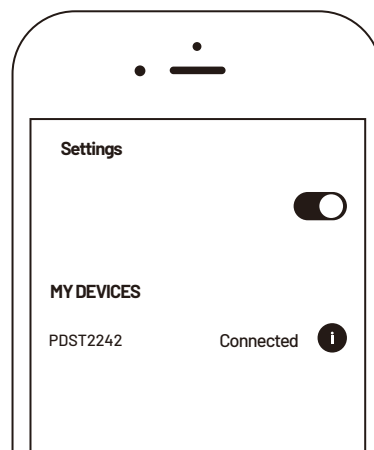

Connected

## Voice Prompts

Power on voice prompt: Power On

Power off voice prompt: Power Off

Voice prompt for successful connection of left and right earbuds: Dong

Voice prompt for successful connection to mobile phone: Connected

Voice prompt when Bluetooth disconnects: Disconnected

## Precautions

1. The device will automatically turn off 3 minutes after powering on without a connection.
2. Never use abrasive detergents to clean this product.
3. Do not allow this product to overheat or be placed near a heat source, such as an oven.
4. Avoid exposing this product to direct sunlight for extended periods.
5. Do not leave this product in fire to prevent explosions.
6. Do not attempt to disassemble this product for any modifications, as it contains no user-serviceable parts.
7. Do not use this product in the rain.
8. If you do not plan to use this product for a long time, store it in a dry environment and charge the earbuds at least once a month to extend their lifespan and avoid extreme temperatures and dust.

## Specifications

Model	PDST2242
Rated Input	5V/1A

Battery Case Capacity	230mAh
Earbuds Capacity	25mAh
Charging Interface	Type-C
Bluetooth Version	V5.3
Play Time	3H
Recharge Time	1.5H
Wireless Transmission Range	<10M
Frequency Range	2.4GHZ-2.48GHZ

## FAQ

**Q1:** Why can't the earbuds or phone case be charged?

**A1:** The charging cable may be broken. Please replace it with a new USB-C cable. If there is no power for a long time, the charging case will not charge.

**Q2:** One earbud is not working.

**A2:** Please place both earbuds in the charging case. Remove the Bluetooth device "PDST2242" from your phone, reset Bluetooth, and reconnect the earbuds. If the problem persists, please contact us.

## Disposal

This product must not be disposed of as unsorted household waste. It is important to separate such waste for proper treatment and recycling, in compliance with local waste management regulations.

## **Warranty**

Products that you buy directly from our **Porodo** website or shop come with a 24-month warranty.

When you buy **Porodo** products from any of our approved sellers, you only get a 12-month warranty. If you want to extend this warranty, go to our website at **porodo.net/warranty** and fill out the form with your information. Don't forget to upload a picture of the product too. After we've checked and accepted your request, we'll send you an email to confirm that your product's warranty has been extended.

For more info, please check:  
**porodo.net/warranty**

## **Contact Us**

If you have any questions about this Privacy Policy, please contact us at:  
**info@porodo.net**

Website: **porodo.net**

Service Support: **support@porodo.net**

Instagram: **porodo**