



Porodo Soundtec

OCTOPUS OPEN-EAR Wireless

SKU: PDSTL007

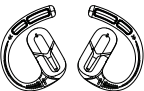


Table of Contents

Usage Instructions	2
Package Contents	2
Schematic View	2
Specifications	3
Charging Case Specifications	3
LED Indicator Status	3
Power and Bluetooth Connection	4
Operation of Touch Buttons	5
Restore Factory Settings	6
Material Content Table	6
FCC Statement	7
Disposal	7
Warranty	8
Contact Us	8


Usage Instructions

1. Do not attempt to disassemble the unit or change any parts, except for the operations described in the manual.
2. Avoid exposing the unit to liquids, moisture, or humidity, as it is not a waterproof product.
3. If liquid enters the unit, disconnect it from your Bluetooth device and move it to a safe area.
4. Do not assemble or disassemble the unit when there is water on your hands to prevent electric shock.
5. Do not expose the unit to extremely high temperatures or dispose of it in fire, as this could cause an explosion.
6. Avoid placing the unit in an environment with electromagnetic interference to prevent malfunction.

Package Contents

	Earbuds		Charging Case		Type-C
--	---------	---	---------------	---	--------

 Schematic View

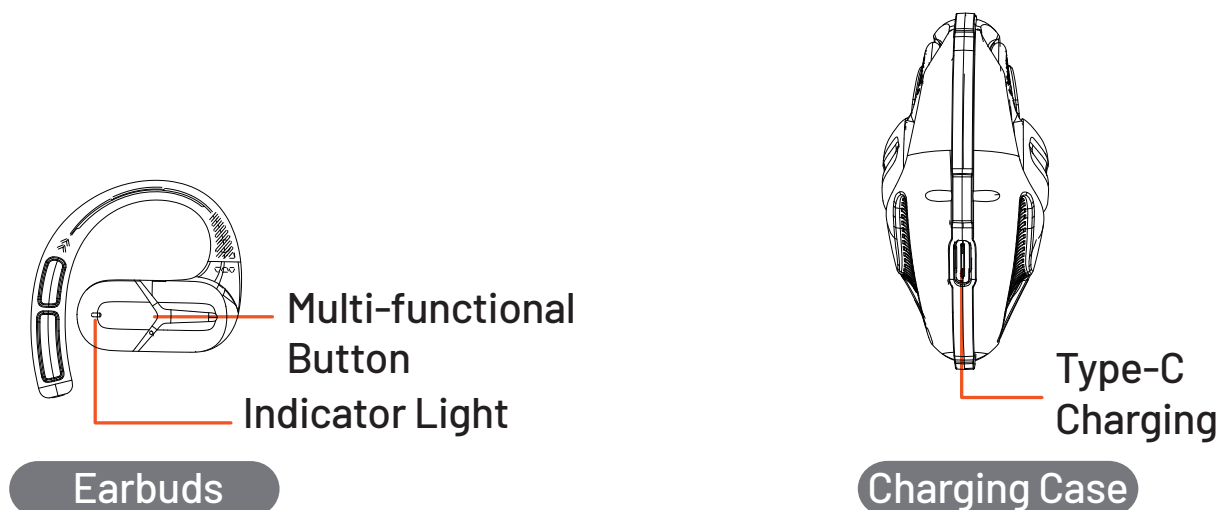

Specifications

Model	PDSTL007
Rated Input	5V/300mA
Battery Case Capacity	300mAh
Earbuds Capacity	35mAh
Charging Interface	Type-C
Bluetooth Version	V5.4
Playtime	4H
Recharge Time	1.5H
Bluetooth Frequency	2.4GHZ-2.48GHZ ISM Band
Frequency Response	20Hz~20kHz

Charging Case Specifications

Battery Capacity	300mAh
Charging Time	Approximately 2 hours
Rated Input	5V = 300mA

Connect the Type-C cable to a 5V power adapter, and plug the other end into the charging port of the charging case.

LED Indicator Status

1. Earphone Indicator Light:

Turn On: The white light stays on for 1 second.

Turn Off: The red light stays on for 1 second.

Earphones Pairing: White and red lights flash alternately.

Pairing Success: The indicator turns off.

Charging: The red light remains on.

2. Charging Case Lights:

Charging (Not Fully Charged): The digital display shows the power flashing.

Full Charge: The digital display shows "100."

Discharge Display: The current power is shown digitally, and the scroll bar indicating the battery level of the left and right headphones is illuminated.

Low Battery: The battery icon blinks one time.

Low Battery: The battery icon blinks one time.

Power and Bluetooth Connection

Power On

Method 1: Remove the earbuds from the charging case. The headset will automatically turn on.

Method 2: Press and hold the MF button on the headphones for 3 seconds to turn on the headphones.

Power Off


Method 1: Place the headphones back into the charging case and close the lid to turn them off.

Method 2: When both the left and right earbuds are turned on, they will turn off automatically after 5 minutes of inactivity or disconnection.

Pairing to the BT Device

Step 1: Take the earbuds out of the charging case. The left and right earbuds will automatically pair with each other.

 Step 2: Open the Bluetooth settings on your device, search for "PD_STBC_07" in the list of available devices, and connect (single earbud use is also supported).

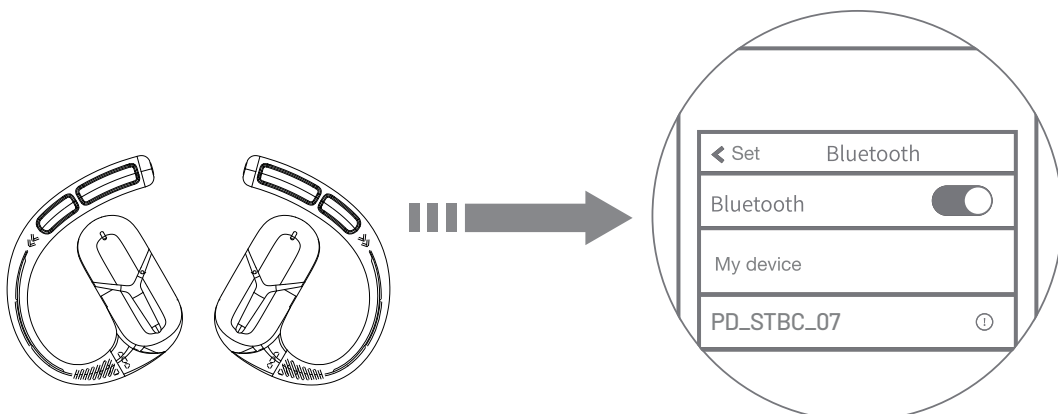

Operation of Touch Buttons

Music Playback

Left/Right Earphone Operations:

Previous Song: Triple tap the left earphone (L) touch button.

Next Song: Triple tap the right earphone (R) touch button.

Volume +: Tap the right earphone (R) touch button.

Volume -: Tap the left earphone (L) touch button.

Pause/Play: Double tap any earphone's function button.

 
Phone Hands-Free Operations

Left/Right Earphone Operations (During Incoming Calls):

Answer: Double tap any earphone's touch button.

Reject: Long press any earphone's touch button for 2 seconds to release.

Hang Up: Double tap any earphone's touch button.

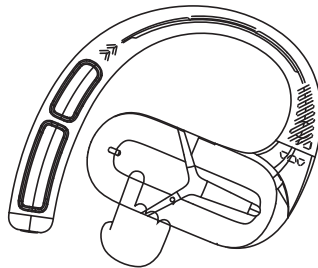

Voice Assistant

 
Left/Right Earphone Operation:

Long press the touch button for 2 seconds to activate the voice assistant.

Music/Game Mode

Left/Right Earphone Operation:

Long press the right earphone touch button for 2 seconds to toggle between music and game mode.

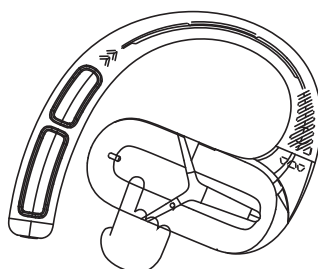

Restore Factory Settings

If the headset is not paired with the phone, press the headset function button five times to clear the pairing information and power off the device

Material Content Table

Part Name	Harmful Material					
	Pb	Hg	Cd	Cr(VI)	PBB	PBDE
Board	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
Parts and Shell	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>

This form complies with SJ/T 11364.

O: Indicates that the content of the hazardous substance in all homogeneous materials of the part is below the limit requirements specified in GB/T 26572.

X: Indicates that the content of the hazardous substance in at least one of the homogeneous materials of the part exceeds the limit requirements specified in GB/T 26572.

Parts marked with "X" on the form indicate that they contain harmful substances due to the limitations of global technological development.

Printed Circuit Board Components

Includes printed circuit boards and their parts, electronic components, etc. Depending on the product model, the product you purchased may not contain all the above components.



Environmental Protection Compliance

Electronic and electrical products sold in the People's Republic of China must display this logo. The number in the logo represents the product's environmental protection use period under normal conditions.

FCC Statement

According to Part 15 of the FCC Rules, this device has been tested to meet the restrictions for Class B digital devices. These regulations provide reasonable protection against harmful interference in residential environments. The device generates and uses radiofrequency energy. If not installed and used according to the instructions, it may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this device causes harmful interference to radio or television reception, the interference can be resolved by turning the device off and on again, or by trying one or more of the following measures:

Redirect or reposition the receiving antenna.

Increase the distance between the device and the receiver.

Connect the device to sockets on circuits different from the receiver.

Consult a dealer or an experienced radio/TV technician for assistance.

This device complies with Part 15 of the FCC Rules. The operation is subject to the following two conditions:

The device shall not cause harmful interference.

The device must accept any received interference, including interference that may cause unexpected operation.

Changes or modifications not explicitly approved by the party responsible for compliance may invalidate the user's permission to operate the device.

Disposal

This product must not be disposed of as unsorted household waste. It is important to separate such waste for proper treatment and recycling, in compliance with local waste management regulations.

Warranty

Products that you buy directly from our **Porodo** website or shop come with a 24-month warranty.

When you buy **Porodo** products from any of our approved sellers, you only get a 12-month warranty. If you want to extend this warranty, go to our website at **porodo.net/warranty** and fill out the form with your information. Don't forget to upload a picture of the product too. After we've checked and accepted your request, we'll send you an email to confirm that your product's warranty has been extended.

For more info, please check:

porodo.net/warranty

Contact Us

If you have any questions about this Privacy Policy, please contact us at:

info@porodo.net

Website: **porodo.net**

Service Support: **support@porodo.net**

Instagram: **porodo**