PORODO



Porodo Gaming 84 Keys Mechanical Gaming Keyboard

SKU: PDX226

Table of Contents

Features	2
Specifications	2
Instructions for Use	3
Caution	4
Storage	4
Warranty	5
Contact Us	5

Before using the product, please carefully read this User Manual to guarantee correct usage and keep it secure for future reference.

Features

- 1. Supports full N-Key Rollover (NKRO) allowing simultaneous keystrokes with high precision, tailored for gaming and fast typing environments.
- 2. Equipped with Arabic characters on the keys to facilitate typing in Arabic, enhancing usability for Arabic-speaking users.
- 3. A convenient rotary knob allows for quick adjustments of volume or muting the sound, providing easy audio control without leaving the keyboard.
- 4. Offers 23 different backlighting modes, enabling users to customize the aesthetics and visibility of their keyboard in various lighting conditions.
- **5.** Features Red mechanical switches known for their smooth, fast actuation and quiet operation, ideal for both gaming and typing.

Specifications

Product Name	Porodo Gaming 84 Keys Mechanical Gaming Keyboard
SKU	PDX226
Keyboard Type	Mechanical Keyboard
Key Switches	SNK Red Switch
Layout	84 Keys US + Arabic
Cable	1.5M PVC USB Cable
Product Weight	630±20g
Product Dimension	296×138×28mm
Compatibility	Mac, Windows
Operating Voltage/Current	5V / <150mA

Instructions for Use

A. Backlight Switch


FN + : Toggle backlight, total 23 backlight modes.

FN + \uparrow / \downarrow : Adjust keyboard backlight brightness.

 $FN + \rightarrow / \leftarrow$: Change keyboard backlight speed.

FN + ESC: Hold for 3-5 seconds for default backlight setting.

B. Button Function

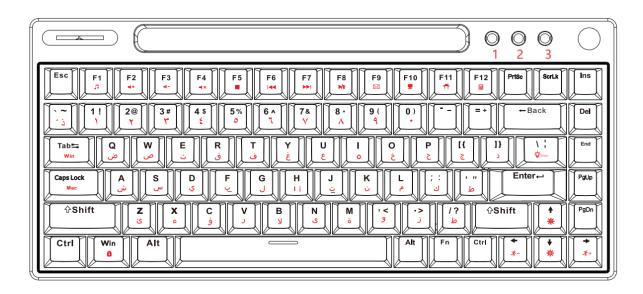

B.1 Control Operations Guide:

Button 1: Previous Track

Button 2: Pause

Button 3: Next Track

B.2 Knob Functions:

1. Volume Adjustment:

Turn knob clockwise to increase volume.

Turn knob counterclockwise to decrease volume.

2. Voice Mute: Short press to mute/unmute voice.

3. Backlight Settings:

Switching Modes: Long press (3-5 seconds) to switch to backlight mode.

Adjust Brightness: In backlight mode:

- Turn knob clockwise to increase brightness.
- Turn knob counterclockwise to decrease brightness.
- 4. Backlight Toggle: Short press to toggle backlight on/off.

C. Multimedia Shortcuts

FN+F1: Music

FN+F2: Volume Up

FN+F3: Volume Down

FN+F4: Mute

FN+F5: Pause

FN+F6: Previous Track

FN+F7: Next Track

FN+F8: Play/Pause

FN+F9: Email

FN+F10: Web

FN+F11: My Computer

FN+F12: Calculator

FN+Win: Lock/Unlock Windows

Caution

- 1. Shield the product from increased humidity, dust, and extreme temperatures.
- 2. Avoid using gasoline, alcohols, or other solvents which could damage the surface. Instead, use a soft, dry cloth for cleaning.
- 3. Prevent mechanical impacts on the product.
- 4. Do not attempt to open or repair the product yourself.

Storage

- 1. Temperature Range: Store the device at temperatures between -20°C to 60°C.
- 2. Maintain relative humidity below 93 %.
- 3. Keep the device away from direct sunlight.



Products that you buy directly from our **Porodo** website or shop come with a 24-month warranty.

When you buy **Porodo** products from any of our approved sellers, you only get a 12-month warranty. If you want to extend this warranty, go to our website at **https://porodo.net/warranty** and fill out the form with your information. Don't forget to upload a picture of the product too. After we've checked and accepted your request, we'll send you an email to confirm that your product's warranty has been extended.

For more info, please check: porodo.net/warranty

Contact Us

If you have any questions about this Privacy Policy, please contact us at:

info@porodo.net

Website: porodo.net

Service Support: support@porodo.net

Instagram: porodo