

PORODO



Porodo

Advanced Digital Camera
Video Stabilization 18× Zoom

SKU: PD-FHDCAM48

Table of Contents

 
Features	2
Schematic View	2
Power On	3
Photography	3
Snapshot	4
Focusing Function	4
Zoom Function	4
Video Recording	4
Filter Function	5
Flashlight Settings	5
Date Settings	5
Parameter Settings	5
Playback/Delete	6
Zoom in During Playback	6
Charging	6
Reset	7
Specifications	7
Warning	8
Warranty	8
Contact Us	8

 
 
Before using the product, please carefully read this User Manual to guarantee correct usage and keep it secure for future reference.

Features

- 1. This camera offers a powerful 18x zoom capability, allowing you to capture clear images of distant subjects without compromising on image quality.
- 2. Support time-lapse photography to capture and condense extended recordings into a short period of time, as well as loop recording for continuous shooting, ensuring no moment is missed.
- 3. Easily zoom in on details in your playback footage, enabling a closer look at specific moments or features within your videos and images.
- 4. Equipped with advanced autofocus technology, this camera allows you to choose between full and semi-automatic focusing modes to suit different shooting conditions and preferences.
- 5. The built-in electronic anti-shake feature stabilizes your shots, reducing blur caused by camera shake and ensuring sharp, clear images under various shooting scenarios.
- 6. Boasts a long standby time of up to 15 days, minimizing the need for frequent recharges and making it ideal for extended photography sessions or travel.


Schematic View

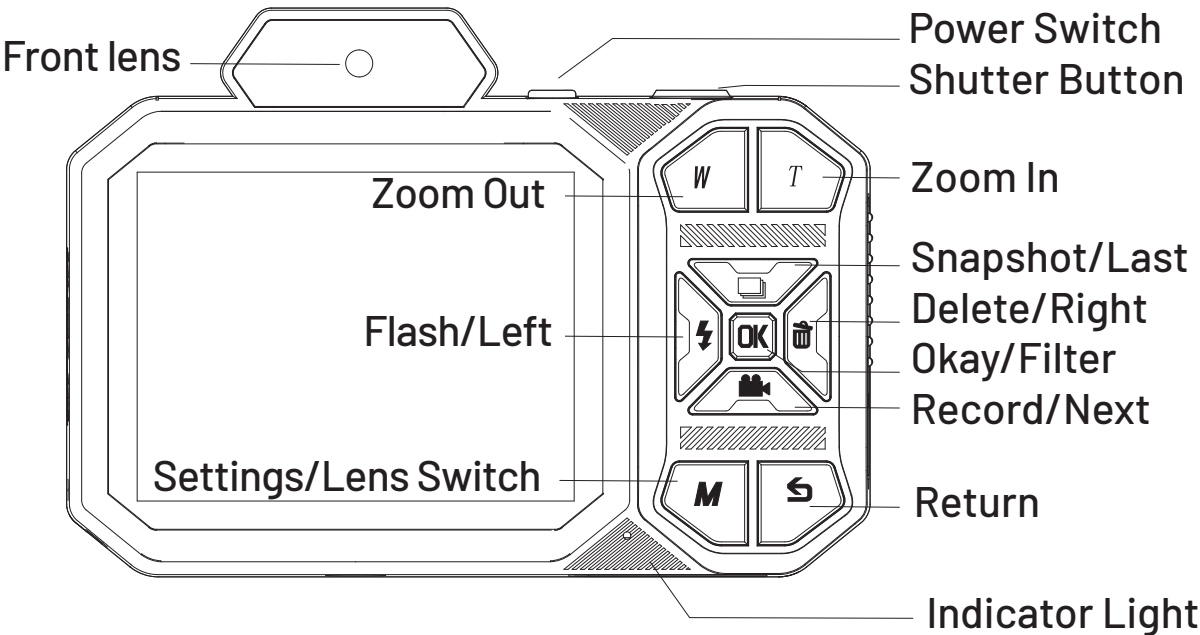


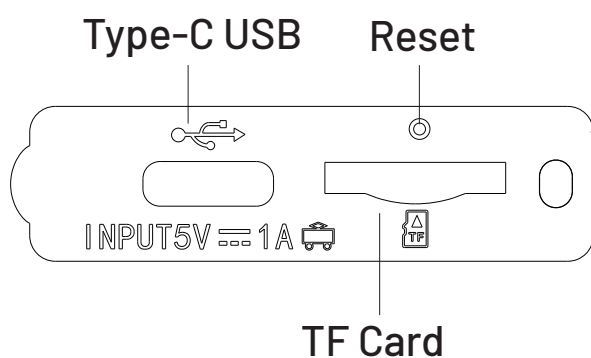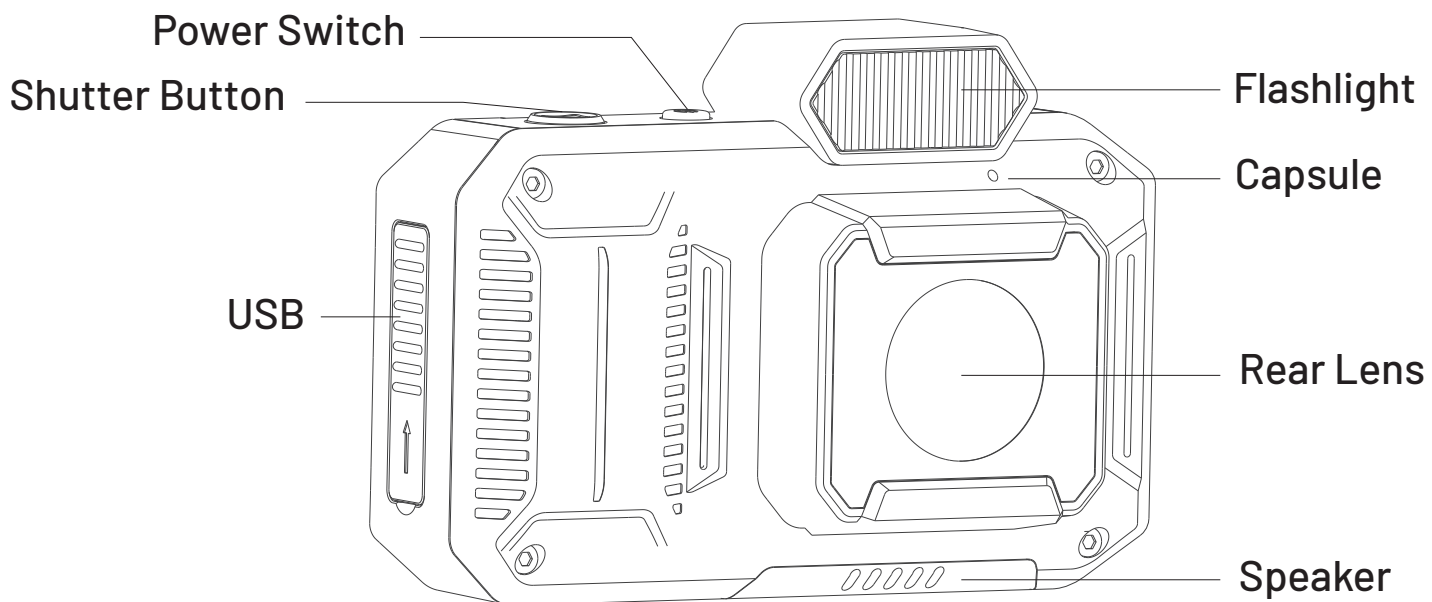


Note: In the event of a malfunction, users should gently press the reset button to restart the device.

Power On

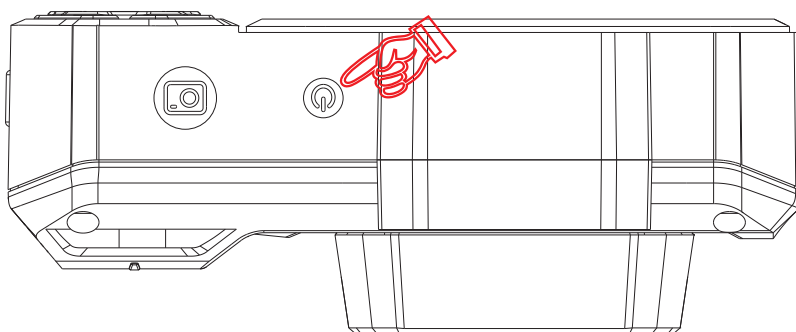

Insert the TF card, press and hold the power button  for a few seconds, and the machine will automatically power on.




Photography

1. Once the machine is powered on, ensure the TF card is inserted.
2. Lightly press the button  on the top to activate auto focus (AF).



Note: You may also take photos immediately by pressing the shutter button fully without focusing.

3. When the green frame appears, press the button  fully to capture the photo.
4. While photographing, you can select various modes such as 'continuous shooting', 'smiling face shooting', and 'scenario shooting' from the mode menu.
5. The photo function in photo mode supports a quick exit operation; press and hold the button  to quickly return to the standard photo interface.

Snapshot

1. Once the machine is powered on, press the button  to activate the snapshot function.
2. Following activation, pressing the shutter button will capture a quick shot, simultaneously taking multiple associated photos.


Focusing Function



1. This machine is equipped with both full-automatic and semi-automatic focus functions.
2. The focal length of the lens can be automatically adjusted to achieve optimal sharpness for shooting.
3. Full-automatic: Once activated, if the camera lens is moved, the lens will automatically adjust its focal length to maintain the best possible definition.
4. Semi-automatic: After selection, lightly press  to enable the automatic focusing. If the camera's angle is altered, it will be necessary to press  again to adjust the focus.

Zoom Function

During photography or video recording, press **T** to gradually zoom in, and **W** to gradually zoom out.

Video Recording


1. When the machine is powered on, press  to enter video recording mode.
2. Focusing: Once video recording is activated, the camera will automatically focus to ensure optimal image clarity.

3. Starting Recording: Press  to begin recording; a red icon will appear on the display screen to indicate recording is in progress.
4. Saving the Video: Press  again to stop recording and save the video.






Filter Function

During photography or video recording, press **OK** to cycle through the filter effects.



Flashlight Settings


1. When the machine is powered on, press  to cycle through the flash settings: Auto, On, Always On, Off.
 2. Auto: When enabled, the camera automatically activates the flash based on the brightness of the environment.
 3. On: When enabled, the flash will activate each time the camera button is pressed.
 4. Always On: When this setting is enabled, the flash remains on continuously.
- Note:** By default, the flash is off. It will automatically turn off when the machine is powered on and can be manually activated again.

Date Settings







1. Access Date and Time Settings: Enter the 'date and time' section within the settings parameter mode after powering on the machine.
2. In the 'date and time' settings interface, use  and  to adjust the parameters, and  and  to navigate through different settings.
3. Press **OK** to confirm your adjustments and exit the menu.
4. Use  to return to the previous menu levels step by step.

Parameter Settings






1. Enter Parameter Mode: Press **M** to access the 'parameter mode' column when the machine is powered on.
2. Adjust Parameters: Once in the 'date and time' setting interface, use  and  to adjust the parameters.

3. Confirm Changes: Press **OK** to confirm your settings and exit the menu.
4. Return to Previous Menu: Press  to navigate back to the upper level, one step at a time.

Playback/Delete

1. Briefly press  to access the playback interface while in photograph or record mode.
2. Use  and  to navigate through files.
3. Press **W** to open the grid page for a playback preview. Press **OK** to exit.
4. Press **T** to enter playback mode.
5. Press **M** to access the playback deletion menu. Confirm your choice by pressing **OK**.
6. Press  to start video playback and press again to pause.
7. Press  again to exit playback mode.
8. For quick access to the deletion interface, directly press  on the panel.

Zoom in During Playback

1. Initiate Zoom: Enter 'playback' mode, and press **T** to start zooming in during playback.
2. Adjust Zoom Level: Continuously press **T** to gradually enlarge the picture.
3. Use  and  to move the enlarged picture vertically, and  and  to move it horizontally for detailed inspection.
4. Restore Original Size: After zooming in, press **W** to return the image to its original size. Press  to exit the zoom-in mode in playback.

Charging

1. When a low voltage alert is displayed on the machine, it is crucial to charge the device promptly.
2. Use a Type-C cable and a 5V/1A charger for charging.
3. The indicator light will turn red during charging and will turn off once the battery is fully charged.

Reset

If the machine ceases to function correctly due to improper operation or other malfunctions, it must be reset.

Specifications

Screen Size	2.8" IPS
Input Power	5V/1A
Battery Capacity	2000mAh, 3.7V
Battery Type	Lithium 103450*50*34/10mm/7.4Wh
Battery Life	2-3H Photo Capture (Varies with resolution)// 1.5H Video Recording (Varies with resolution)
Recharge Time	3 hours
Charging Port	Type-C
Voltage/Current	5V/1A
Speaker Output	1W
Screen Resolution	2.88" 480 x 640 (Main screen)
Image Resolution	13MP (Interpolated 48MP)
Video Resolution	720P, 1080P, 2.7K, 4K
Micro SD Slot	Supported up to 64GB (Not Included)
Language	English, German, French, Spanish, Italian, Turkish, Russian, Portuguese, Dutch, Chinese, Simplified Chinese Traditional, Japanese, Polish, Korean.
N.W.	200g
Material	ABS
Zoom	18× digital zoom
Switch Lens	Supported
Format	Yes
Reset	Yes
Flash Settings	Auto, Always On, Off
Package Contents	Charging cable, Camera, Lanyard, Accessory bag

Warning

1. Inspect wires, plug housings, and other components regularly for any signs of damage. Discontinue use immediately if any damage is detected.
2. The built-in 3.7V battery is not user-serviceable and cannot be disassembled or replaced.
3. If the built-in battery is damaged, please contact authorized service professionals.

Warranty

Products that you buy directly from our **Porodo** website or shop come with a 24-month warranty.

When you buy **Porodo** products from any of our approved sellers, you only get a 12-month warranty. If you want to extend this warranty, go to our website at **<https://porodo.net/warranty>** and fill out the form with your information. Don't forget to upload a picture of the product too. After we've checked and accepted your request, we'll send you an email to confirm that your product's warranty has been extended.

For more info, please check:

<https://www.porodo.net/warranty>

Contact Us

If you have any questions about this Privacy Policy, please contact us at:

info@porodo.net

Website: **porodo.net**

Service Support: **support@porodo.net**

Instagram: **[porodo](https://www.instagram.com/porodo)**