

porodo



Porodo Gaming

Android TV & Game Stick PS5 Controller

16+2GB 2.4+5GHz 10000+ Built-In Games

SKU: PDX540

Table of Contents

Overview	2
Features	2
Specifications	2
Power On/Off and Sleep	3
Instructions for Use	3
Card Insertion	4
Connection Guideline	4
Reset	5
Warranty	6
Contact Us	6

Before installing and using the product, please carefully read this User Manual to guarantee correct usage and keep it secure for future reference.

Overview

A new horizon of entertainment and gaming excitement is introduced with the Porodo Gaming Android TV and Game Stick. Equipped with a vast library of more than 10,000 built-in games, the device is designed to engage and excite gamers at all levels. Smooth and responsive performance is ensured by the robust 2GB RAM, facilitating seamless navigation through apps and games. The gaming setup may be enhanced by utilizing the Micro SD slot, which provides additional storage options.

Features

- 1. Experience stunningly sharp visuals with support for both 8K and 4K video decoding.
- 2. Enjoy reliable and fast connectivity with dual-band Wi-Fi that supports both 2.4GHz and 5GHz networks for improved streaming and fewer interruptions.
- 3. Easily set up your device with a simple plug and play interface, making it user-friendly and accessible for immediate use.

Specifications

CPU	H313 Quad-core
GPU	G31 OpenGL 3.2
RAM	2GB
ROM	16GB
Micro SD Slot	Up to 64GB (Not Included)
Upgrades	Over-The-Air (OTA)
Android version	12.1
Video Encoding	1080P @ 60fps, 2*1080P @ 30fps
HDMI	8K, 4K, 2K

Power On/Off and Sleep

1. Connect the box to the TV using an HDMI cable, connect the box to the power adapter, and connect a mouse, air mouse, or other input devices using the USB port.
2. After the device and cable are connected, the power LED will turn blue.
3. The power LED turns off when the device and cable are disconnected.
4. To enter sleep mode while the device is powered on, press the power button on the remote control.
5. In sleep mode, pressing the power button on the remote control will wake the device.

Instructions for Use

Upon turning the device on, proceed by following these steps:

1. Open Applications

Use the arrow keys on the remote control to select the desired program, then press the OK button to open it.

2. Switch in the Applications

To view recently used programs, click "My Apps". You can then select any program icon to switch to that application at will.

3. Close Applications

Click the icon  to view recently used programs. Select any program by clicking and holding, then drag it to a blank area to close the application.

Note: This function is only available in Mouse mode.

4. Back to Home Screen

A. Click the home icon  to return to the home screen.

B. You can also press the home icon on the remote control  to return to the home screen.

Card Insertion

1. External Storage Data

To access data from an external storage device:

- A.** Insert a USB flash drive or removable hard disk into the USB port while the device is powered on.
- B.** An icon  will appear in the top left corner of the desktop.
- C.** Open "File Browser"; the USB drive (labeled as "USB(A:)" will be listed under "Local Disk".

The USB drive is now ready for use.

2. TF Card

To access data from a TF card:

- A.** Insert the TF card into the device while it is powered on.
- B.** An icon  will appear in the top left corner of the desktop.
- C.** Open "File Browser"; the TF card will be identified and appear under "Local Disk."
- D.** The TF card is now ready for operation.

Connection Guideline

1. Wi-Fi Function

To activate the Wi-Fi function:

- A.** Home Screen → SETTINGS → Network → Select "Wi-Fi" to activate the Wi-Fi function.
- B.** Choose a hotspot → Input Password → Connect to the network.

2. Ethernet Function

To activate the Ethernet function:

- A.** Home Screen → SETTINGS → Network → Select "Ethernet" to activate the Ethernet function.
- B.** Insert the network cable; the network connection will be established automatically.

3. WLAN Hotspot

A. Home Screen → SETTINGS → Other → More Setting → More... → Portable hotspot → Select "Portable Wi-Fi Hotspot"

B. Select "Set up Wi-Fi hotspot" to configure "Network SSID", "Security", and "Password" parameters.

Note: Ensure the box is connected to the wired network; it can then be used as a wireless Access Point (AP) to support additional wireless device access.

Reset

1. Uncompress the downloaded firmware (ROM) and place it at the root of your formatted SD card.

2. Insert the SD card into the powered-off box, ensuring that the power cable is not connected and no external USB storage devices are attached.

3. Use a toothpick to press and hold the hidden button inside the AV port of the box while connecting the power cable. Do not release the button until the Robert Logo appears on the screen.

4. The update will run automatically. Once completed, select "Reboot". You can ignore any errors that appear after the update as they are not relevant to your device.

5. After the system has rebooted, go to Settings > Wi-Fi to verify the Wi-Fi functionality. Turn on the Wi-Fi if it is off, and ensure that you can connect successfully.

Warranty

Products that you buy directly from our **Porodo** website or shop come with a 24-month warranty.

When you buy **Porodo** products from any of our approved sellers, you only get a 12-month warranty. If you want to extend this warranty, go to our website at [**https://porodo.net/warranty**](https://porodo.net/warranty) and fill out the form with your information. Don't forget to upload a picture of the product too. After we've checked and accepted your request, we'll send you an email to confirm that your product's warranty has been extended.

For more info, please check:

[**https://www.porodo.net/warranty**](https://www.porodo.net/warranty)

Contact Us

If you have any questions about this Privacy Policy, please contact us at:

[**info@porodo.net**](mailto:info@porodo.net)

Website: **porodo.net**

Service Support: [**support@porodo.net**](mailto:support@porodo.net)

Instagram: **porodo**