




**GREEN LION**

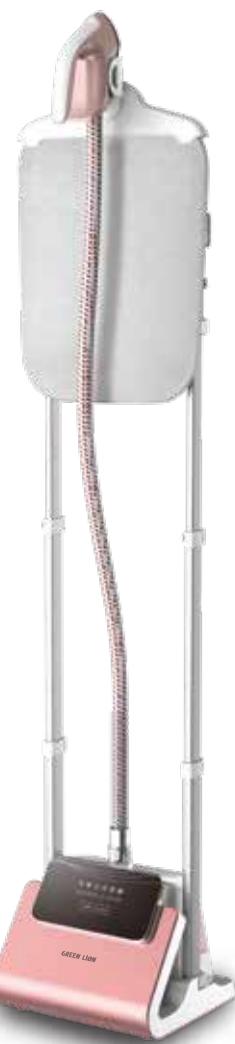

# Green Lion Digital Garment Steamer

SKU: GNDGSTM RPK

# Table of Contents

Notes	2
Features	2
Accessory Guide	2
Schematic View	3
Assembly	4
Instructions for Use	5
Cleaning and Storage	6
Descaling Method	7
Safety Precautions	7
Circuit Diagram	10
Specifications	11
Package Contents	11
Warranty	12
Contact Us	12

## Notes

1. Please read this manual carefully before using the product.
2. The company reserves the right to interpret the contents of this manual.
3. The product's appearance may vary from the physical item.
4. Store this manual and the corresponding invoice in a safe place after use.
5. In the event of technical or software updates, no additional notifications will be issued.

## Features

1. The heating pot, designed for high power and efficiency, ensures uniform steam distribution.
2. The nozzle features a 9-hole aluminum cast panel that is smooth, protecting clothes from damage.
3. A large-capacity, transparent water tank allows for extended ironing sessions without frequent refills.
4. The rear drainage design simplifies the descaling process, making it quicker and more convenient.
5. Features a dual anti-dry burning system that offers comprehensive protection, enhancing safety and security.
6. Incorporates a straight insertion double square pole for stable and reliable support.
7. The multi-functional ironing board enhances comfort during ironing, catering to various ironing needs.

## Accessory Guide



To use, hold the smaller end and insert the larger end into the collar, cuffs, and other intricate areas to facilitate ironing.


Collar Hanging Bracket



When ironing clothes by hand, wear these gloves to protect your hands from heat and prevent burns.


Gloves

## Schematic View

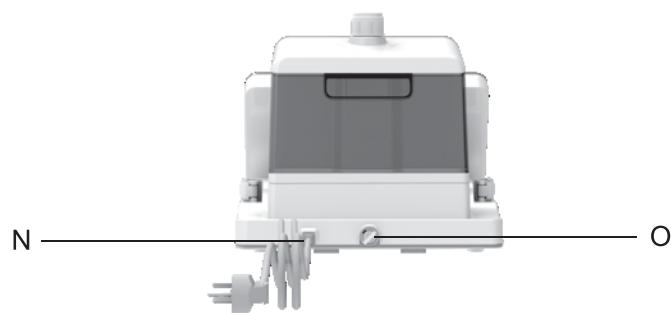

<b>A.</b> Steam nozzle	<b>I.</b> Steam hose protection spring
<b>B.</b> Nozzle hook	<b>J.</b> Control panel
<b>C.</b> Hanger components	<b>K.</b> Water tank
<b>D.</b> Ironing board	<b>L.</b> Machine body
<b>E.</b> Handle	<b>M.</b> Base
<b>F.</b> Steam hose	<b>N.</b> Cord plug
<b>G.</b> Telescopic rods	<b>O.</b> Drain valve knob
<b>H.</b> Telescopic rod adjusting buckle	

# Assembly

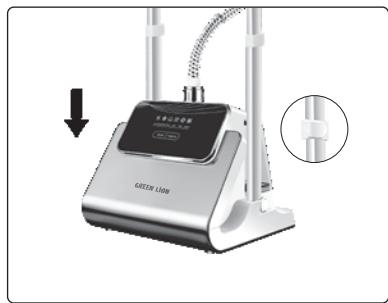

1. Unpack and remove the main unit and accessories from the packaging.
2. Insert the two thick ends of the telescopic rod into the sockets at the base and ensure they are fully seated in the square holes.
3. Secure the unit by locking the ear clip onto the body.
4. Align the nut at the bottom of the steam hose with the threads on the top of the main unit and tighten the nut clockwise to secure it firmly.

## A. Telescopic Rod Height Adjustment




1. Loosen the two clips located in the middle of the telescopic rod.
2. Adjust to the desired height.
3. Secure the adjustment by fastening the middle two buckles.


## B. Hanger and Ironing Board Installation



Installation of Hanger

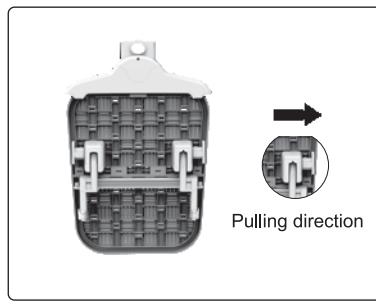

Before Installation of Ironing Board

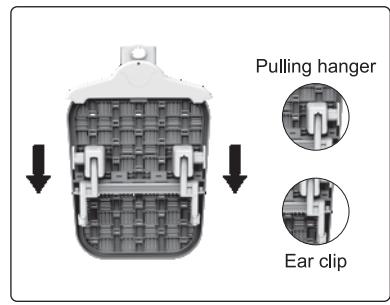

After Installation of Ironing Board

1. Position the nozzle hanger in the center of the hanger, aligning it with the direction of the fabric cover on the ironing board.
2. Align the rectangular groove at the bottom of the hanger with the square groove on the ironing board.
3. Insert the hanger into the groove by pulling in the direction indicated, ensuring it snaps securely into place with the help of the ear clip.

4. Ensure that the front side of the ironing board aligns with the display panel of the main unit.
5. Connect the two tubes at the bottom of the ironing board with the upper end of the telescopic rod, press down firmly.
6. Secure the connection with the ear clip to lock it in place.
7. The ironing board can be positioned horizontally, vertically, or tilted at angles of 30° or 60°. To adjust, simply pull the handles located in the middle of both sides of the ironing board, move the board to the desired position, and then release the handles.
8. The locking mechanism will automatically engage to secure the ironing board in the chosen position.



## Instructions for Use



### A. Placing the Nozzle:

Attach the nozzle head into the nozzle hanger, which is designed to accommodate various configurations for versatile use.

**Caution:** Avoid hanging the steam hose on a coat rack to prevent potential falls that could cause injury or damage to the steam nozzle.

### B. Filling the Water Tank:




1. Remove the water tank from the main unit, unscrew the nut at the base of the tank, and fill it with water.
2. After filling, screw the nut back on securely, ensuring the water tank is properly aligned and repositioned without any misalignment.
3. Note: Only fill the tank with cold water. Do not use hot water, and avoid adding substances like perfume, vinegar, starch, or other chemicals to the cold water to prevent damage to the unit.

## C. Ironing



1. Insert the power cord plug into a powered socket to connect the device.
2. To power on the unit, press the "SWITCH" key. To select the steam level, use the "FUNCTION" key to choose the appropriate setting.
3. The device features a 6-gear steam adjustment system, allowing you to adjust the steam output to the material, thickness, and texture of the clothing being ironed.
4. Note: Avoid tilting the water tank when it is full to prevent water from spilling over the sink.

## D. Tips

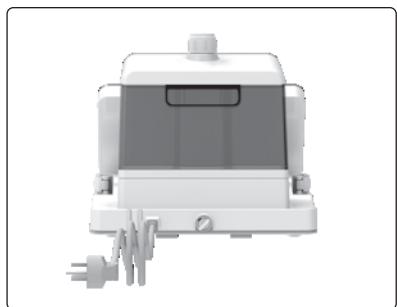

1. After finishing your ironing, press the switch to turn off the unit. Safely unplug the device from the socket once the indicator light goes off.
2. If the hanging ironing machine is not going to be used for an extended period, it's important to prevent water stagnation that can lead to bacterial growth. Ensure the machine is turned off and let the water cool down before draining it. Open the drainage valve to release any residual water.


## Cleaning and Storage

1. Always unplug the power cord before beginning any cleaning activities.
2. Avoid washing the fuselage directly with water. Instead, use a soft cloth dampened with a mild detergent to clean the surface. Do not use harsh solvents such as gasoline for cleaning.
3. After cleaning and performing any maintenance, ensure the device is completely dry before storing or using it again.

**4.** If the device will not be used for a prolonged period, clean it thoroughly and allow it to dry. Subsequently, detach the steam hose from the nozzle hanger and disassemble the ironing board components and the telescopic rod.

**5.** Store all parts back in the original packaging box in a cool and dry location to preserve their condition.

## **Descaling Method**

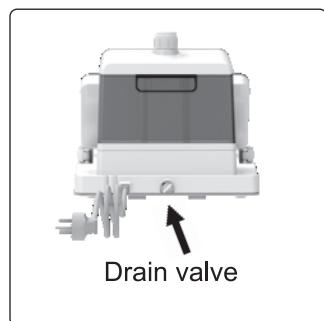

- 1.** Fill the water tank with 1000g of pure water and add 2g of detergent. Stir until the detergent is fully dissolved. Place the tank back into the machine.
- 2.** Heat the machine for 20-30 minutes at the lowest steam setting. Afterwards, turn off the machine and allow it to cool for 30 minutes.

**3.** Position the machine over a water tank or a waste- water bucket. Open the drainage valve by turning it counterclockwise. Do not use sharp objects to scrape the inner walls of the machine. Once the water has fully drained, securely tighten the drain valve.

**4.** After draining, dispose of any remaining detergent solution in the tank. Rinse the tank thoroughly with clean water.

**5.** It is recommended to perform this descaling procedure monthly to maintain the optimal performance of your machine.

## **Safety Precautions**



**1.** Note: All instructions below are crucial for safe operation of this product. Please adhere to these guidelines to avoid potential hazards and accidental damages.

**2.** Only use accessories approved by the manufacturer.

**3.** Upon unboxing, inspect the product for any damages and ensure all components are intact.

4. This product is not suitable for children or individuals who are unable to follow operational instructions.
5. In case of a malfunction, immediately disconnect the power plug. Do not attempt to operate a faulty unit.
6. If the power cord is damaged, it must be replaced by the manufacturer or a qualified technician to prevent any risk of harm.

 Forbidden	Adhering to the guidelines on this sign is compulsory to prevent damage to the product and to safeguard the user's personal safety.
 Warning	It is crucial to follow the instructions on this sign precisely during installation and use to avoid damaging the product and risking the user's safety.
 Attention	Users must pay close attention to the details on this sign to avoid product damage or other losses resulting from incorrect operation.

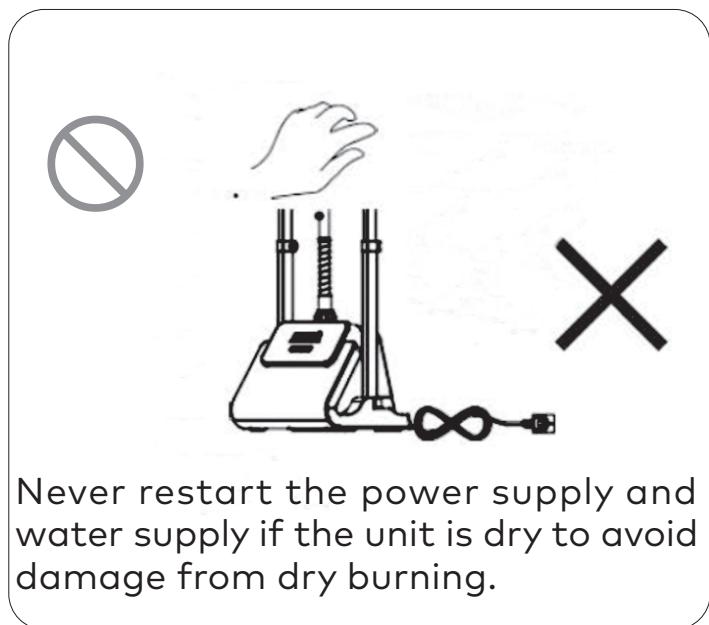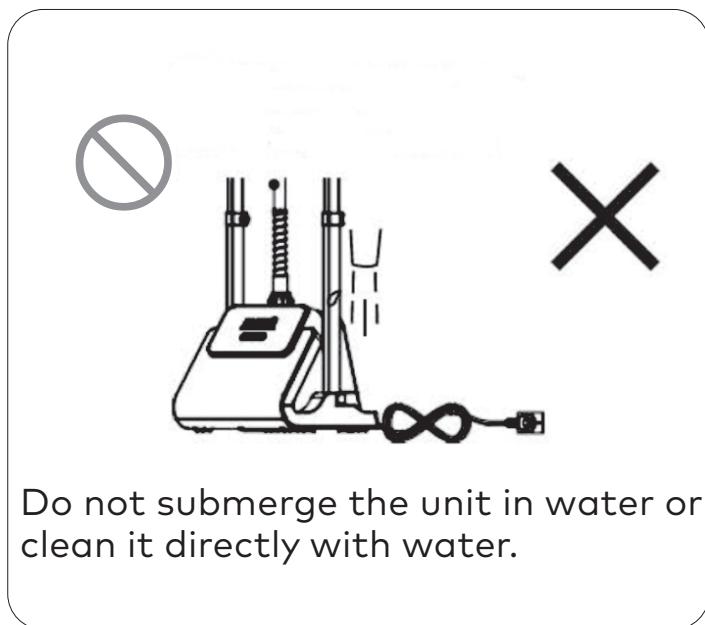




This product is not suitable for outdoor use.




Do not fold the steam hose or block the steam outlet during operation.



Do not leave the appliance unattended while it is in use. Take precautions to avoid steam burns when handling any utensils. Always disconnect the power by unplugging the appliance when filling or cleaning.

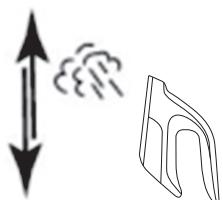

Avoid touching the heating elements and the ironing surface of the spray head. Disconnect the power and allow the water to cool before emptying to prevent scalding.

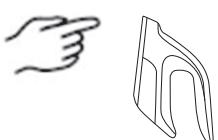

When the product is activated, a small amount of hot, condensed water may be expelled from the steam outlet. The nozzle will operate vertically. Always aim the nozzle downward to prevent the condensation of water droplets and ensure safe usage.




Do not pour hot water into the water tank to prevent deformation of the tank.






Ensure the safety of the power switch, socket, and power supply. Avoid dragging or pulling the power switch.

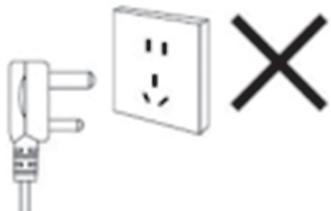


This product must be used with a socket that has a grounding wire.




Avoid placing the product on unstable surfaces such as tables or chairs to prevent the risk of tipping.

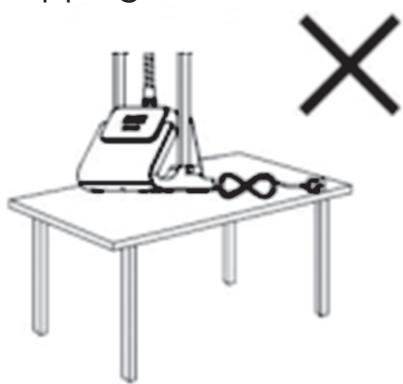

This product is compatible with ordinary tap water. If your local tap water is hard, using bottled or distilled water is recommended.

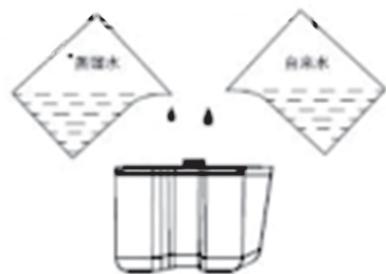

## Circuit Diagram

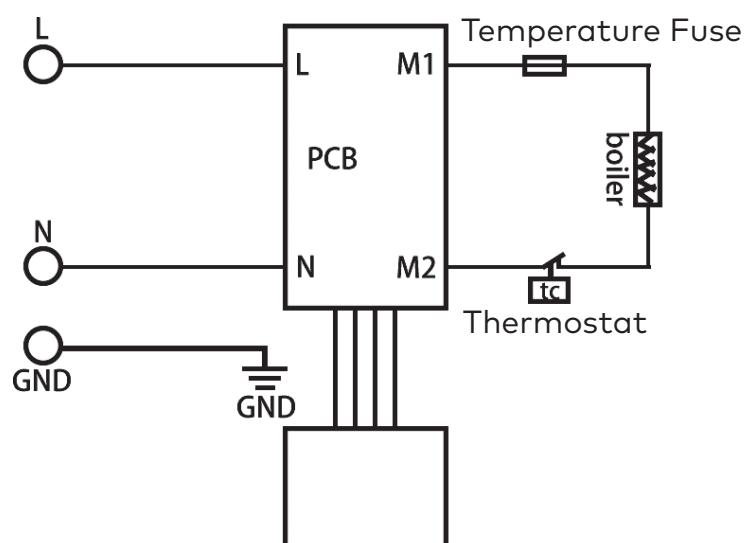

## Specifications

Model No	GL-GS18
Rated Voltage	220-240V
Rated Frequency	50/60Hz
Rated Power	1800W
Water Tank Capacity	2.5L
Outlet Steam Temperature	98°C
Mist Output	32g/min
Power Cord	UK

## Package Contents

Name	Quantity	Name	Quantity	Name	Quantity
Digital Garment Steamer	1	Manual	1	Glove	1
Telescopic Rod	2	Hanger Components	1	Collar Hanger	1
Ironing Board Components	1	Steam Hose Componen	1	-	-

## **Warranty**

Products that you buy directly from our **Green Lion** website or shop come with a 24-month warranty.

When you buy **Green Lion** products from any of our approved sellers, you only get a 12-month warranty. If you want to extend this warranty, go to our website at [\*\*https://www.greenlion.net/warranty\*\*](https://www.greenlion.net/warranty) and fill out the form with your information. Don't forget to upload a picture of the product too. After we've checked and accepted your request, we'll send you an email to confirm that your product's warranty has been extended.

For more info, please check:

[\*\*https://www.greenlion.net/warranty\*\*](https://www.greenlion.net/warranty)

## **Contact Us**

If you have any questions about this Privacy Policy, please contact us at:

Website: [\*\*https://www.greenlion.net/\*\*](https://www.greenlion.net/)

Sales: [\*\*sales@greenlion.net\*\*](mailto:sales@greenlion.net)

Service Support: [\*\*Support@greenlion.net\*\*](mailto:Support@greenlion.net)

Telegram: [\*\*@greenlion\\_global\*\*](https://t.me/greenlion_global)

Instagram: [\*\*@greenlion\\_global\*\*](https://www.instagram.com/greenlion_global)