

LePRESSO



LePresso

**Rich Brew Coffee Machine
with Interactive Touch Display**

SKU: LPCFFM0006-BK

Table of Contents

Features	2
Specifications	2
Safety Precautions	3
Schematic View	4
Control Panel	4
First Time Using	5
Instructions for Use	6
A. Time Adjustment	6
B. Reservation Mode Activation	7
C. Modifying the Scheduled Time	7
D. Cancelling the Scheduled Time	8
Adjusting the Concentration	8
Keep Warm Function	9
Using a Travel Cup	10
Notice	11
Ice Coffee Preparation	12
Disposal	13
Cleaning & Safety Instructions	14
Warranty	15
Contact Us	15

Features

1. This feature maintains your coffee at the ideal drinking temperature for extended enjoyment after brewing is complete.
2. The machine includes a 1.38-liter water tank, providing ample capacity for multiple servings without needing frequent refills.
3. Equipped with a durable and eco-friendly filter that is easily washable for repeated use.
4. A user-friendly touch display enhances the ease of operation, allowing settings adjustments and function selections with just a touch.
5. Optimizes brewing time, enabling fast preparation of your coffee, which is perfect for busy mornings.
6. The carafe can hold up to 10 cups of coffee, ideal for serving larger gatherings or for keeping a steady supply during your day.

Specifications

Rated Voltage	220-240V
Rated Frequency	50-60Hz
Rated Power	900W
Power Plug	UK 3-Pin Plug
Product Weight	2.1Kg
Product Dimension	290×158×322 mm
Glass Carafe Capacity	1.25L
Water Tank Capacity	1.38L
Travel Mug Capacity	4ml

Safety Precautions

Please carefully read this manual and adhere to the following guidelines before operating this machine:

1. Before operation, ensure the machine's voltage matches the rated voltage listed on the specifications table.
2. Do not touch the machine's hot surfaces during operation.
3. To prevent fire, electric shock, and injury, avoid immersing the power cord and plug in water or other liquids.
4. Ensure that children do not use the machine without adult supervision.
5. Disconnect the machine from the power source before cleaning. Allow accessories to cool completely beforehand.
6. If the power cord or plug is damaged, or the machine fails or appears damaged, do not attempt to operate it. Instead, bring it to the nearest authorized service center for professional service and adjustment.
7. This machine is exclusively for brewing ground coffee.

Cord Safety: Prevent the power cord from hanging off table edges where it could be pulled on or tripped over.

8. Operate the machine at safe temperatures to avoid overheating.
9. Do not use containers with broken or loose handles to ensure stability and safety.
10. This product should not be used by anyone, including children, with physical, sensory, or mental disabilities, or those lacking experience, unless they are under close supervision of a responsible adult.
11. Children must not operate this machine without adult supervision.
12. Operate this machine only as instructed and for its intended uses.
13. Avoid contact with sharp blades to prevent injury.
14. Fill the tank with cold water only; do not use warm or hot water.
15. Do not operate the appliance outdoors. It is designed for indoor use only.

16. The coffee maker is designed for household and similar applications, such as use in farm houses, staff kitchen areas, offices, and other working environments. It is also suitable for use in hotels, motels, and other residential-type environments, including bed and breakfast establishments.


17. If the power cord is damaged, contact service professionals for its replacement.

18. Retain this manual for future reference.

Schematic View



Control Panel

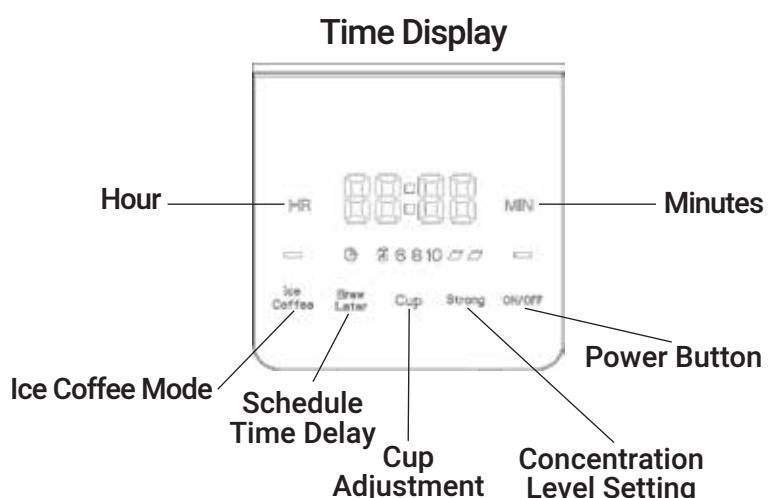

First Time Using

1. Open the water tank lid and add room temperature water up to the maximum water level indicated on the tank gauge or as per your desired cup size. Position the coffee machine on a level surface.

Important Notes: The volume of brewed coffee might be less than the chosen cup size because some water is absorbed by the coffee grounds during brewing procedure.

2. Avoid adding hot water, milk, coffee powder, or tea into the water tank.

3. Place the recommended amount of coffee powder into the filter (6 grams per cup is advised). Seal the water tank by closing its lid after adding the coffee.

4. Plug the power cord into an electrical socket. Once the coffee machine beeps, indicating it is powered on, it will enter a standby mode and the ON/OFF button will start flashing.

5. Press the ON/OFF button to turn on the coffee machine and access the control interface. For manual activation of the standby mode, press and hold the ON/OFF button. The machine will automatically shut off after 30 minutes if not in use.

6. You must set the time first to use the reservation feature of your coffee machine. The steps for adjusting the time are detailed in the function description section of this manual.

7. Adjust the desired cup size by pressing the Cup function key. Options include settings for 4 cups, 6 cups, 8 cups, and 10 cups.

8. The default setting is 10 cups if no selection is made.

Cup capacities are as follows:

A. 4 cups: 400ml

B. 6 cups: 750ml

C. 8 cups: 1000ml

D. 10 cups: 1250ml

9. Modify the strength of your coffee using the Strong function key.

Note: If you do not set the strength, the machine will use the default setting (no strength adjustment).

10. Once you have set the cup size and strength, initiate brewing by pressing the ON/OFF button.

11. The indicator light above the ON/OFF button will flash red, indicating that the settings (cup size and coffee strength) can still be adjusted.

12. If there is no input within 5 seconds, the settings will lock in, and the machine will brew coffee according to your preferences.

13. Once the coffee has finished brewing, the machine will emit a "beep" sound and the indicator light above the ON/OFF button will change from red to green.

14. If you do not unplug the machine or press the ON/OFF button to deactivate it, the coffee machine will automatically maintain the coffee's temperature for 40 minutes.

15. After the keep warm cycle completes, the machine will switch to standby mode.

16. It will then turn off automatically one hour after entering standby.

Warning: Avoid touching the coffee machine during and shortly after brewing to prevent burns from steam.

Instructions for Use

A. Time Adjustment

1. When you power on the coffee machine, the LCD will display "00:00."

2. Press "Hr" and "Min" to set the time.

2.1 The "Hr" button adjusts the hours and will cycle from "00" to "23".

2.2 The "Min" button adjusts the minutes from "00" to "59". Holding either button will cause the numbers to increase rapidly.

Note: When the minutes reach "59" and the "Min" button is pressed again, the minutes reset to "00" and the hours increment by one. When the hours

reach "23" and the "Hr" button is pressed again, the hours reset to "00".

3. After setting the time, if no buttons are pressed within a few seconds, the clock will resume normal operation.
4. The machine's clock has a maximum time deviation of ± 15 seconds per 24 hours.

B. Reservation Mode Activation

1. Press the "Brew Later" button. The corresponding icon will illuminate and blink every second to indicate that the function is not yet set.
2. Upon entering the reservation mode, the clock will display "00:00."
3. Use the "Hr" and "Min" buttons to set the desired time.
4. If no button is pressed for 5 seconds, or if the "Brew Later" button is pressed again, the reservation function will activate, confirming the time has been successfully set.
5. After setting, the "Brew Later" icon will stay lit but stop blinking.
6. The display will revert to the current time. When the set time is reached, the machine will automatically start brewing coffee.
7. The ON/OFF button will illuminate red to indicate that brewing has begun.

C. Modifying the Scheduled Time

1. Press the "Brew Later" button. The icon above it will light up and flash once per second.
2. The display will show the previously set start time, which can be modified.
3. If you need to adjust the start time, press the "Brew Later" button again within 5 seconds to re-enter the modification mode.
4. After setting the new time, the icon will remain lit but will stop flashing, indicating that the new time is set.
5. The display will revert to the current time after setting.
6. When the clock reaches the set time, the machine will automatically start brewing. The ON/OFF button's red light will illuminate.
7. For example, if it's currently 12:00 and you wish for the machine to

start at 13:30. Adjust the display time to 12:00. Set the "Brew Later" appointment to 13:30. The display will confirm the time and then return to the current time.

Additional Notes:

- [1] Press the "ON/OFF" button at any time to cancel the reservation.
- [2] To change the brew time, repeat the setting process.
- 8. You can also select the desired cup size and strength before the scheduled start by using the "Cup" or "Strong" buttons.
- 9. After brewing at the set time, if the coffee machine is not manually turned off or unplugged, it will automatically switch to the "keep warm" mode for 30 minutes.

D. Cancelling the Scheduled Time

- 1. Pressing the ON/OFF button at any time will cancel the reservation function. If the ON/OFF button does not light up immediately after pressing, ensure you are not scheduling a new brew.
- 2. Users must fill the coffee machine with water and coffee powder in advance to utilize the reservation function effectively. Failure to do so will prevent the machine from brewing coffee at the scheduled time.
- 3. Even if the reservation is cancelled, the scheduled time will remain saved in the machine's memory unless the power plug is disconnected for more than 5 seconds.

Adjusting the Concentration

- 1. When not adjusted, the coffee will brew at the default concentration level. The 'Strong' icon does not turn on.
- 2. Setting the level:
 - [A] Press once to activates Level 1 concentration (mild strength). The corresponding icon will light up with 1 grid.
 - [B] Double-press to activates Level 2 concentration (strong strength). The

icon will light up with 2 grids.

[C] Press three times to deactivates the concentration function. The icon turns off.

3. Continue pressing the 'Strong' button to cycle through the concentration levels again.

4. Once the desired concentration is set, begin brewing by pressing the ON/OFF button. The indicator above the ON/OFF button will illuminate to indicate that the machine is active.

Note: Brewing coffee at a higher concentration level may take longer than the usual brewing time. This delay is normal and ensures the coffee reaches the desired strength.

Keep Warm Function

1. The machine automatically calculates brewing time based on the number of cups selected. Once brewing is completed, the machine enters the keep warm function. At this point, the red light above the ON/OFF button turns off momentarily and then reactivates to indicate that the keep warm mode is active.

2. The coffee machine will remain in the keep warm mode for 40 minutes. After this period, it will switch to standby mode and power off automatically after 1 hour.


3. If you do not require the coffee to remain warm, press the ON/OFF button again after brewing. This will turn off the green light, and the machine will exit the keep warm function.

Note: For safety purposes, the control interface is locked during the keep warm period. To make any further adjustments, you must first press the ON/OFF button to exit the heat preservation mode before accessing other functions.

Using a Travel Cup


1. For using the travel mug function, first place the coaster horizontally on the insulation board.

Note: Ensure the coaster is only used in 4-cup mode to prevent damage.

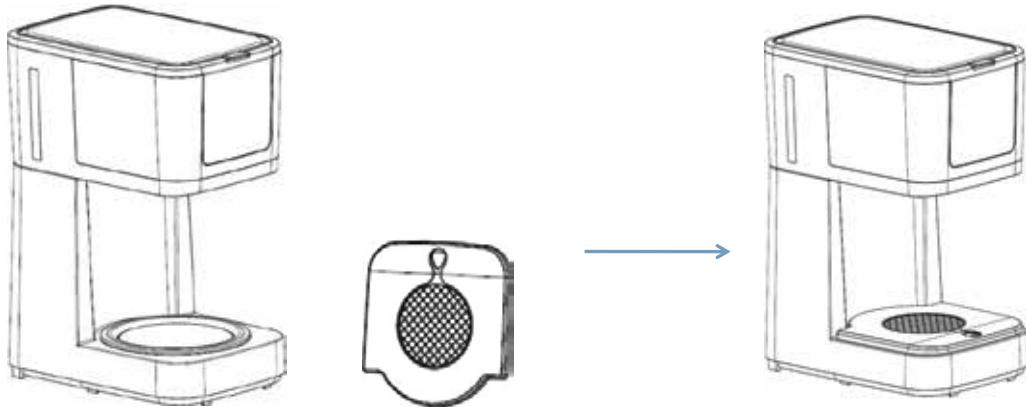

2. Unscrew the lid of the coffee cup and place the water bottle on the coaster.

Note: When using the coaster, the machine defaults to a 4-cup capacity.

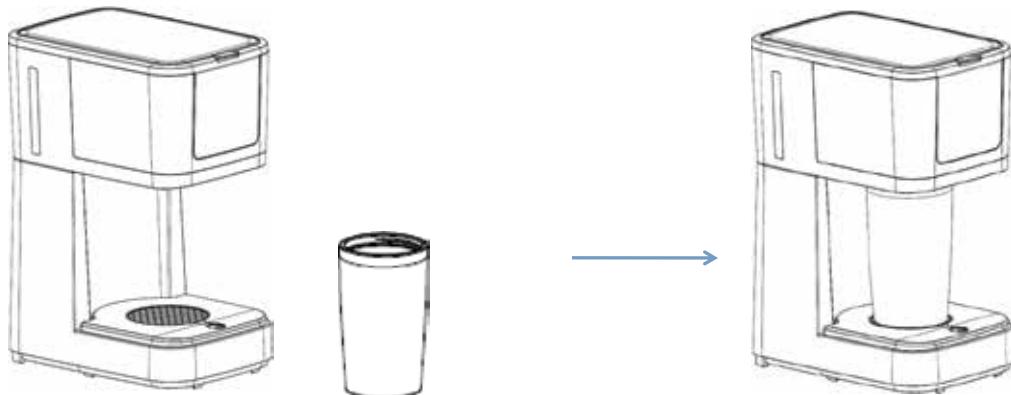


3. Open the water tank cover and pour in 4 cups or more of water at a constant temperature.

4. Place the appropriate amount of coffee powder into the filter (6g of coffee per cup is recommended), and close the water tank cover after completing this step.

5. You can modify the coffee strength by pressing the Strong function key. If no concentration is set, the function will default to cancelling any concentration adjustments.

6. Use the cup volume selection feature by pressing the Cup button to choose 4 cups. The corresponding indicator will turn on when selected.
7. Once the coffee machine finishes brewing and stops dripping, the red light will turn off. Wait for 30 seconds before removing the coffee cup.
8. Remove the coffee cup horizontally, securely tighten the lid, and enjoy your coffee.
9. After using the coffee machine, place the coaster on the hook located behind the machine to store it for future use.

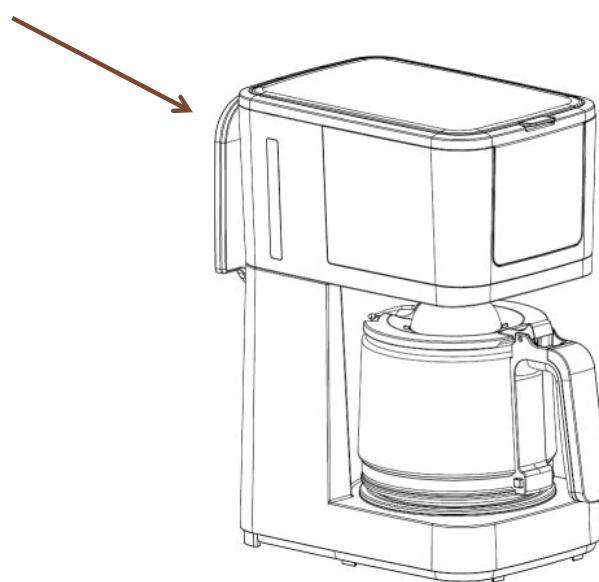

► Notice

1. The amount of coffee brewed may differ from the selected cup size due to water absorption by the coffee grounds.
2. Do not add hot water, milk, coffee powder, or tea directly into the water tank.
3. The coffee cup function of this machine is specifically designed for the included coffee cup. Do not use other brands of coffee cups with this feature.
4. Do not place the coffee cup directly on the insulation board of the machine, as this may cause damage to either the machine or the cup.
5. If more water is added than required by the coffee cup function, the

remaining water in the tank can be used to prepare additional cups after the machine has finished brewing.

6. If you plan to use the reservation function to prepare coffee cups, ensure you complete steps 1 through 6 in advance.

Ice Coffee Preparation

1. For the iced coffee function, place 550-500g of ice cubes into the glass first.
2. After filling the glass with ice cubes, place it horizontally on the coffee machine's insulation board.
3. Open the water tank cover and add 6 cups or more of water at room temperature.
4. Place the appropriate amount of coffee powder into the filter (6g per cup is recommended). Close the water tank cover after completing this step.
5. You can modify the coffee strength by using the Strong function key. If no strength is selected, the function will default to the regular setting.
6. Turn on the machine and press the Ice Coffee button. The red light will turn on, indicating that the machine has begun brewing.
7. Once the coffee machine finishes brewing, the red light will turn off. Wait for 60 seconds before removing the glass. The iced coffee function is now complete.

Notes

[1] The iced coffee function does not include the keep warm function. Once brewing is complete, enjoy the coffee immediately. The machine remains active, allowing other operations to be performed.

Water Tank Usage:

500 to 550 gr Ice



[2] Do not add hot water, milk, coffee powder, or tea directly into the water tank.



[3] The brewed coffee volume could be slightly less than the selected cup size due to water absorption by the coffee grounds.

[4] If more water is added than needed for the iced coffee function, the remaining water in the tank can be used to brew additional cups or to boil water after the current operation is finished.

Disposal



1. You can contribute to protecting the environment.
2. Ensure compliance with local regulations by properly disposing of non-working electrical equipment.
3. Take any non-functional electronic devices to an authorized waste disposal center.

Cleaning & Safety Instructions

1. Cleaning Surfaces in Contact with Food: To maintain hygiene and prevent contamination, clean all surfaces that come into contact with food or liquids, such as the water reservoir, brewing chamber, and carafe, after each use.
2. Use a soft cloth or sponge with warm water and mild detergent.
3. Do not immerse the appliance in water or any other liquid to prevent electrical components from being damaged.
4. Avoid abrasive cleaners or scouring pads, which could scratch or damage the surfaces.
5. For a more thorough cleaning, refer to the detailed instructions in the manual. Regular cleaning will help ensure optimal performance and prevent contamination.
6. Children should not clean the appliance without supervision. Ensure that the appliance is cleaned only by responsible adults.

Warnings

- 1. Warning of Potential Injury:** Misuse of the coffee machine, such as improper assembly, overfilling the water reservoir, or using the appliance for purposes other than its intended use, could result in injury or damage. Always follow the operating instructions carefully.
- 2. Do not operate the machine with any parts removed or improperly assembled.**
- 3. Keep body parts away from moving parts, and avoid contact with hot surfaces during operation.**
- 4. Always ensure the machine is turned off and unplugged before cleaning, assembling, or disassembling.**
- 5. Keep out of reach of children, and always supervise its use to prevent accidents.**
- 6. Residual Heat Warning:** The surface of the heating element and surrounding components remain hot even after the coffee machine is turned off. Allow adequate cooling time before touching any parts that are in contact with the heating element to avoid burns or injury.
- 7. To minimize risk, handle with caution after use and wait until the appliance has completely cooled before performing any cleaning or maintenance tasks**

Warranty

Products that you buy directly from our **LePresso** website or shop come with a 24-month warranty.

The 24-month warranty applies to products purchased directly from our **LePresso** website or store. If **LePresso** products are bought from any of our verified retailers, then the product is eligible for only a 12-month warranty. To extend your product's warranty, visit our website <https://www.lepresso.com/warranty> and fill in your details in the provided form along with an uploaded picture of the product to process your request. Once approved, you will receive a confirmation email of the extended product warranty. Upload the required information within 48 hours of purchase to be eligible for a 24-month warranty period.

For more info, please check:

<https://www.lepresso.com/warranty>

Contact Us

If you have any questions or concerns about our Shipping and Returns Policy, please contact us at: **info@lepresso.com**

Website: **<https://www.lepresso.com/>**

Instagram: **lepresso_official**