

LèPRESSO



LePresso

Portable Outdoor Electric Kettle

SKU: LPCFFM0007-WH

Table of Contents

Important Safety Instructions	2
Product Overview	4
Specifications	4
Before Using	5
Instructions for Use	5
Boil-Dry Protection	6
Cleaning and Maintenance	6
Removal of Mineral Deposits	6
Disposal	7
Warranty	8
Contact Us	8

Important Safety Instructions

Read all instructions carefully before use.

- 1.** Before connecting the kettle to a power supply, ensure that the voltage indicated on the appliance matches the power source.
- 2.** Do not allow the cord to hang over the edge of a table or counter, or to come into contact with hot surfaces.
- 3.** Do not place the kettle on or near a hot gas or electric burner, or in a heated oven.
- 4.** Do not operate the appliance without water to prevent damage to the heating elements.
- 5.** Place the kettle on a stable and flat surface, out of the reach of children, to prevent it from tipping over and causing damage or injury.
- 6.** To avoid the risk of fire, electric shock, or personal injury, do not immerse the cord, plug, or kettle in water or any other liquids.
- 7.** While the water is boiling, or immediately after it has boiled, avoid contact with steam from the spout.
- 8.** Pour boiling water slowly and carefully to prevent the kettle from tipping over.
- 9.** Exercise caution when refilling the kettle while it is hot.
- 10.** This appliance can be used by children aged 8 years and older, and by individuals with reduced physical, sensory, or mental capabilities, or those lacking experience and knowledge, provided they are supervised or have been instructed on the safe use of the appliance and understand the associated risks.
- 11.** Children should not play with the appliance. Cleaning and maintenance should not be performed by children without supervision.
- 12.** Children must be supervised to ensure they do not play with the appliance.
- 13.** Do not touch hot surfaces. Use only the handle or control buttons.
- 14.** The attached base is intended for use only with this appliance and should not be used for other purposes.

- 15.** Exercise extreme caution when moving an appliance containing hot water.
- 16.** This appliance is not a toy. Do not allow children to play with it.
- 17.** Only use accessories recommended by the manufacturer. The use of unauthorized accessories may result in fire, electric shock, or personal injury.
- 18.** Unplug the kettle from the power outlet when not in use and before cleaning. Allow the kettle to cool completely before attaching or removing parts, and before cleaning the appliance.
- 19.** To disconnect, turn any controls to the "off" position, then remove the plug from the wall outlet.
- 20.** If the power cord is damaged, it must be replaced by the manufacturer, its service agent, or a similarly qualified person to avoid any hazards.
- 21.** Use the appliance only for its intended purpose.
- 22.** The kettle should only be used with the stand provided.
- 23.** Do not overfill the kettle, as boiling water may overflow.
- 24.** Always ensure the lid is securely closed and do not open it while the water is boiling. Scalding may occur if the lid is removed during boiling cycles.
- 25.** This appliance is designed for use in household and similar settings, such as:
 - 25.1** Staff kitchen areas in shops, offices, and other working environments
 - 25.2** Farmhouses
 - 25.3** By guests in hotels, motels, and other residential settings
 - 25.4** Bed and breakfast establishments
- 26.** Retain these instructions for future reference.

Product Overview



Heating Plate

Capacity	300ml
Material	Stainless Steel 304
Temperature Options	45/55/100°C
Product Size	80×207mm
Net Weight	390g
Rated Voltage	12V
Power Output	96W
Power Source	DC Car Adapter

Before Using

Before using the kettle for the first time, it is recommended to clean it by boiling water at its maximum capacity once, then discarding the water. Repeat this process a second time. Afterward, wipe the exterior surface with a damp cloth.

Note: The maximum capacity of the kettle is 0.3 liters.

Instructions for Use

1. Place the kettle on a flat surface.

2. To fill the kettle, remove it from the power source and lift the lid handle to open the lid.

3. Fill the kettle with the desired amount of water, then close the lid. Ensure that the water level does not exceed the maximum level.

Note: Insufficient water may cause the kettle to turn off before boiling is complete.

Note: Do not exceed the maximum water level, as this may cause water to spill from the spout during boiling.

4. Ensure the lid is securely closed before connecting the kettle to the power outlet.

5. Connect the plug to a power outlet.

6. Press the power switch; the indicator will illuminate, and the kettle will begin to boil the water.

7. The kettle will automatically switch off, and the indicator will turn off once the water has boiled.

8. If needed, wait 30 seconds before pressing the power switch again to re-boil the water.

9. You can stop the boiling process at any time by lifting the kettle off the power base.

Note: Ensure the switch is unobstructed and the lid is securely closed.

The kettle will not turn off if the switch is blocked or if the lid is not properly closed.

10. Lift the kettle from the power base and carefully pour the water.

Note: Exercise caution when pouring water from the kettle, as boiling water can cause burns. Additionally, do not open the lid while the water in the kettle is hot.

11. The kettle will not re-boil until the switch is pressed again.

Note: Always disconnect the power supply when the kettle is not in use.

Boil-Dry Protection

If the kettle is accidentally operated without water, the boil-dry protection feature will automatically shut off the power. If this occurs, allow the kettle to cool completely before refilling it with cold water for re-boiling.

Cleaning and Maintenance

1. Always disconnect the appliance from the power outlet and allow it to cool completely before cleaning.

2. Never immerse the kettle or power cord in water, nor allow moisture to come into contact with these parts.

3. Clean the exterior of the kettle with a damp cloth or a mild cleaner. Do not use any harmful or toxic cleaners.

4. Caution: Avoid using chemical, steel, wooden, or abrasive cleaners on the kettle's exterior, as these can damage the finish.

5. When not in use or during storage, disconnect the power cable.

Removal of Mineral Deposits

To maintain the efficiency of your kettle, periodic descaling is necessary, as mineral deposits from tap water can accumulate at the bottom, reducing performance. You can use a commercially available descaling agent,

following the instructions provided on its packaging. Alternatively, you may use white vinegar by following the steps below:

- 1.** Fill the kettle with three cups of white vinegar and add water until the bottom is fully covered.
- 2.** Leave the solution in the kettle overnight.
- 3.** Discard the vinegar solution and fill the kettle with clean water up to the maximum level.
- 4.** Boil the water, then discard it. Repeat this process several times until the smell of vinegar is completely eliminated.
- 5.** Any remaining stains inside the spout can be removed by gently rubbing with a damp cloth.

Disposal



Help protect the environment. Please comply with local regulations by taking non-functional electrical equipment to an appropriate waste disposal center.



Warranty

Products that you buy directly from our **LePresso** website or shop come with a 24-month warranty.

The 24-month warranty applies to products purchased directly from our **LePresso** website or store. If **LePresso** products are bought from any of our verified retailers, then the product is eligible for only a 12-month warranty. To extend your product's warranty, visit our website <https://www.lepresso.com/warranty> and fill in your details in the provided form along with an uploaded picture of the product to process your request. Once approved, you will receive a confirmation email of the extended product warranty. Upload the required information within 48 hours of purchase to be eligible for a 24-month warranty period.

For more info, please check:
<https://www.lepresso.com/warranty>

Contact Us

If you have any questions or concerns about our Shipping and Returns Policy, please contact us at: info@lepresso.com
Website: <https://www.lepresso.com/>
Instagram: [lepresso_official](#)