

LéPRESSO



LePresso
Multi-Temperature
Illuminated Glass Kettle

SKU: LPCFFM0008-BK



Table of Contents

Important Safety Instructions	2
Product Overview	4
Button Instructions	4
Specifications	5
Before Using	5
Instructions for Use	5
Function Introduction	6
Temperature Indicators	6
Operation	6
Boil-Dry Protection	8
Cleaning and Maintenance	8
Removal of Mineral Deposits	9
Disposal	9
Warranty	10
Contact Us	10

Before installing and using the product, please carefully read this User Manual to guarantee correct usage and keep it secure for future reference.

Important Safety Instructions

Please read all instructions thoroughly prior to use.

- 1.** Before connecting the kettle to the power source, verify that the voltage specified on the appliance matches the voltage in your home.
- 2.** Do not allow the cord to dangle over the edge of a table or counter, or come into contact with hot surfaces.
- 3.** Avoid placing the kettle near or on sources of heat, such as gas or electric burners or inside an oven.
- 4.** Never operate the kettle without water; doing so can damage the heating element.
- 5.** Place the kettle on a stable and level surface to prevent it from tipping over. This placement ensures it is out of reach of children.
- 6.** To guard against fire, electric shock, or injury, avoid immersing the cord, plug, or kettle in water or other liquids.
- 7.** During and immediately after boiling, keep clear of steam emitting from the spout. Refrain from opening the lid prematurely.
- 8.** Always pour boiling water slowly and with care to prevent the kettle from tipping over.
- 9.** Exercise caution when opening the lid for refilling if the kettle is hot.
- 10.** Close supervision is necessary whenever the appliance is used near children.
- 11.** Avoid touching the heated surface; handle the appliance only by its handle or button.
- 12.** This kettle is intended for household use only.
- 13.** Do not use the appliance outdoors.
- 14.** Refrain from using any accessory attachments not recommended by the manufacturer, as they may pose risks of fire, electric shock, or injury.

15. Disconnect the kettle from the electrical outlet when not in use and before cleaning. Allow the appliance to cool before disassembling or cleaning.

16. Ensure the lid is securely closed and do not open it while the water is boiling to avoid scalding.

17. If the power cord is damaged, it must be replaced by the manufacturer or a qualified service representative to prevent any hazards.

18. This appliance is equipped with a grounded plug. Verify that the outlet is properly grounded.

19. Use the kettle exclusively with the accompanying stand.

20. Avoid overfilling the kettle, as it may result in boiling water being expelled.

21. The appliance should not be used by individuals (including children) with reduced physical, sensory, or mental capabilities, or a lack of experience and knowledge, unless they are under the supervision or have received instruction on appliance use from a person responsible for their safety.

22. Ensure that children are supervised to prevent them from playing with the appliance.

23. This appliance is designed for domestic and similar environments including:

23.1 Staff kitchen areas in commercial settings such as shops and offices

23.2 Farmhouses

23.3 Client use in hotels, motels, and other residential settings

23.4 Bed and breakfast establishments.

24. Retain these instructions for future reference.

Product Overview



Button Instructions



Button: This is a multifunctional button serving as the 100°C button, power button, or keep-warm button. Press and hold it for three seconds to activate.



Button: Temperature Selector. Use this button to select the desired temperature setting: 50°C, 70°C, 80°C, or 90°C.



Specifications

Rated Voltage	220-240V
Rated Frequency	50-60Hz
Rated Power	1850-2200W
Capacity	1.7L
Power Plug	3-Pin UK Plug
Product Gross Weight	1.3kg
Product Dimension	232×158×249mm
Temperature Options	50/70/80/90/100°C

Before Using

Prior to initial use, it is advised to clean your kettle by boiling a full kettle of water twice and then discarding the water.

Note: The capacity of the kettle is 1.7 liters.

Instructions for Use

1. Remove the kettle from the power base.
2. Open the lid by pressing the Lid Release button and fill the kettle to the desired level with water.
3. You can also fill the kettle through the spout. Ensure the water level is between the MIN and MAX marks indicated inside the kettle. Insufficient water may cause the kettle to switch off prematurely.

4. Close the lid securely.

Note: Do not exceed the maximum water level as this may cause spillage during boiling. Ensure the lid is firmly in place before connecting the kettle to the power source.

5. Place the kettle on the power base.

6. Ensure that the plug is securely connected to a power outlet.

Note: The power base is designed to rotate 360 degrees for convenient placement of the plug.

Function Introduction

1. The kettle uses an integrated circuit (IC) to control heating and maintain warm water temperatures.
2. When the kettle is placed on the power base, all four indicators on the control panel will activate, and a single beep will sound.
3. Simultaneously, the kettle's indicator cycles through red, green, and blue before turning off. 4. The control panel indicators then switch off simultaneously with another beep.

Temperature Indicators

The kettle's indicator displays different colors to signify various temperatures, regardless of the water's initial temperature:

50°C: Green

70°C: Blue

80°C: Purple

90°C: Light green

100°C: Red

Operation

[A] Boiling Water

1. Place the kettle on the power base and press the "100°C" button.

2. The kettle will begin heating the water directly to 100°C.
3. At this point, the control panel indicators will remain off, while the kettle's indicator will light up in red.
4. Once the water temperature reaches 100°C, the indicator in the kettle will turn off, and two beeps will sound to signal completion.

[B] Heating Water to a Selected Temperature

1. Place the kettle on the power base and use the "+/-" button to select your desired water temperature (50°C, 70°C, 80°C, or 90°C).
2. Upon selection, the corresponding indicator on the kettle will illuminate.
3. Press the "100° C" button. The kettle will begin heating the water to the selected temperature.
4. Once the target temperature is reached, all control panel indicators will turn off, and you will hear two beeps to indicate that the water is ready.

[C] Keeping Water Warm

1. Place the kettle on the power base and use the "+/-" button to select your preferred keep-warm temperature (50°C, 70°C, 80°C, or 90°C).
2. Once selected, the corresponding indicator will activate.
3. To initiate the keep-warm mode, press and hold the "100° C" button for three seconds.
4. The kettle will then maintain the water at the selected temperature.
5. During this mode, the indicator for the selected temperature will blink at a rate of once per second.
6. Upon reaching the selected temperature, you will hear a single beep, indicating that the kettle has entered the keep-warm state.
7. The kettle will maintain this temperature for 30 minutes, after which it will automatically shut off and all indicators will turn off.

Note: Ensure that the switch is unobstructed and the lid is securely

closed. The kettle will not turn off if the switch is obstructed or if the lid is not fully closed.

8. Lift the kettle from the power base and carefully pour the water.

Note: Exercise caution when pouring water, as boiling water can cause skin burns. Additionally, do not open the lid while the water in the kettle is hot.

9. The kettle will not re-boil the water unless the switch is pressed again.

You may store the kettle on the power base when not in use.

Note: Ensure the power supply is turned off when the kettle is not in use.

Boil-Dry Protection

Should the kettle be inadvertently operated without water, the boil-dry protection feature will automatically shut off the power. If this occurs, please allow the kettle to cool completely before refilling it with cold water for subsequent boiling.

Cleaning and Maintenance

1. Always disconnect the appliance from the power outlet before cleaning.

2. Never immerse the kettle, power cord, or power base in water. Avoid allowing moisture to contact these parts.

3. Clean the exterior of the kettle with a mild and damp cloth. Do not use any toxic cleaners.

4. Caution: Avoid using chemical, steel, wooden, or abrasive cleaners on the outside of the kettle to prevent damage to the finish.

5. When not in use, store the power cord in the designated storage area on the power base.

Removal of Mineral Deposits

To maintain optimal operation, your kettle should be periodically descaled due to mineral deposits from tap water. You can use a commercially available descaling agent by following the instructions provided on the package, or alternatively, use white vinegar as described below:

1. Fill the kettle with three cups of white vinegar and add enough water to completely cover the bottom of the kettle.
2. Leave the vinegar solution in the kettle overnight.
3. Discard the vinegar solution in the morning.
4. Rinse the kettle by filling it with clean water, bringing it to a boil, and then discarding the water.
5. Repeat this process several times until the smell of vinegar is no longer noticeable.

Note: Any remaining stains inside the spout can be removed by gently rubbing with a damp cloth.

Disposal



Help protect the environment! Remember to adhere to local regulations regarding the disposal of non-functioning electrical equipment. Please ensure that such items are taken to an approved waste disposal center.

Warranty

Products that you buy directly from our **LePresso** website or shop come with a 24-month warranty.

The 24-month warranty applies to products purchased directly from our **LePresso** website or store. If **LePresso** products are bought from any of our verified retailers, then the product is eligible for only a 12-month warranty. To extend your product's warranty, visit our website <https://www.lepresso.com/warranty> and fill in your details in the provided form along with an uploaded picture of the product to process your request. Once approved, you will receive a confirmation email of the extended product warranty. Upload the required information within 48 hours of purchase to be eligible for a 24-month warranty period.

For more info, please check:
<https://www.lepresso.com/warranty>

Contact Us

If you have any questions or concerns about our Shipping and Returns Policy, please contact us at: info@lepresso.com
Website: <https://www.lepresso.com/>
Instagram: [lepresso_official](https://www.instagram.com/lepresso_official)