

PORODO
LIFESTYLE



Porodo Lifestyle
Urban Scooter Pro Electric Mobility
with 10 Inch Durable Wheels

SKU: PD-LFST009-BK

Table of Contents

Features	2
Safety Notes	2
Safety Precautions	3
Schematic View	5
Button Instructions	6
Assembly Instructions	6
Folding Guide	7
Disassembly Guide	7
Battery Installation	7
Riding Instructions	8
Battery Instructions	9
A. Battery Specifications	9
B. Battery Warnings	9
Charging Instructions	10
Tips	11
Maintenance	11
Specifications	12
Storage	13
Troubleshooting	13
Package Contents	13
Warranty	14
Contact Us	14

Thank you for choosing and purchasing our electric scooter. This manual provides safe operation instructions and precautions for your electric scooter. Please read them carefully before initial use. Failure to follow these instructions may result in danger. For your safety, please review the manual thoroughly before operating the scooter to ensure correct and safe usage.

Features

1. The scooter can support a maximum load of 100 kg, accommodating a wide range of users comfortably and safely.
2. Equipped with a robust 350W motor, the scooter delivers strong and efficient performance, suitable for various terrains.
3. With a fully charged battery, the scooter can travel up to 35 kilometers, making it ideal for both short commutes and longer journeys.
4. It reaches a top speed of 32 km/h, providing a quick and efficient way to navigate through urban environments.
5. The scooter features 10-inch durable wheels, enhancing stability and ride smoothness, even on rough surfaces.

Safety Notes

 
Operating any vehicle, including e-scooters, involves risks. For your safety, it's crucial to learn how to ride safely and to comply with local regulations.


1. **Pre-Ride Checks:** Before using the scooter, check if the fastening screws are secure, inspect for sharp edges on external decorations and movable parts, and verify that the brakes, folding mechanisms, and tire pressures are functioning correctly. If you detect any issues, stop riding immediately.
2. Avoid actions that could endanger others or their property.
3. Do not modify the e-scooter as it could affect its performance, compromise safety, and lead to severe injuries.
4. Never immerse the e-scooter in water as it can damage the scooter and increase the risk of accidents.
5. Do not attach any load to the handlebar, as this can compromise the stability of the vehicle.

- 6.** Avoid riding in areas with heavy traffic or where crowds gather. Always yield politely to pedestrians.
- 7.** Do not lend the electric scooter to individuals who have not read this manual. As the lender, you are responsible for ensuring the new user's safety.
- 8.** The electric scooter is suitable for users over the age of 14.
- 9.** This scooter is intended for personal transportation only and not for performing acrobatics or engaging in extreme sports.
- 10.** Use only accessories and spare parts certified by the manufacturer for maintenance. Utilizing non-certified parts can damage the vehicle and pose safety risks.


Safety Precautions

 
Please be aware that riding an e-scooter may result in loss of balance, crashes, or falls. To minimize the risk of injury, ensure you are well-acquainted with this manual and maintain the scooter in excellent condition.

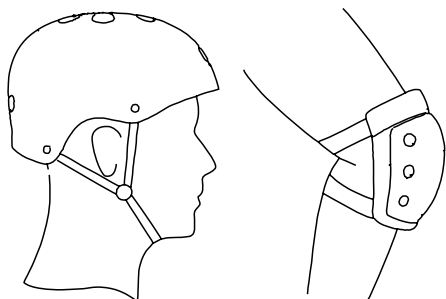


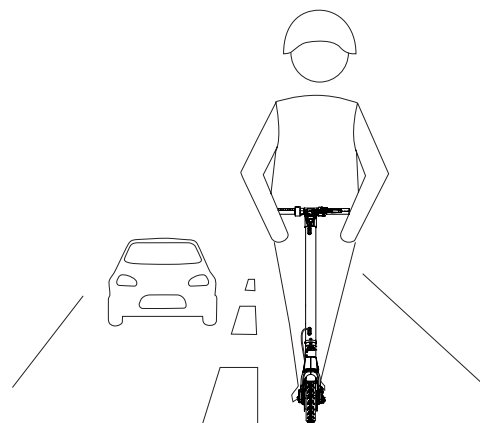 
-  **Warning:** You must wear a helmet and appropriate protective gear before riding to ensure your safety.




-  **Do not ride on rainy days or over waterlogged roads to prevent accidents.**

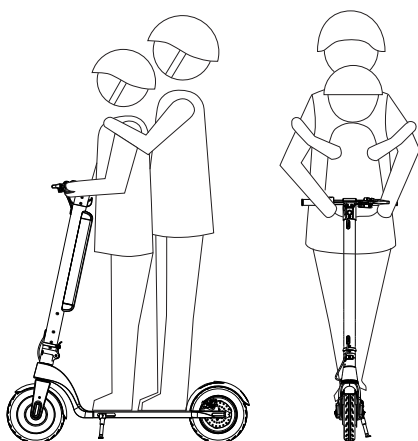

 
-  **It is prohibited to add any items to the scooter apart from the rider; multiple passengers are not allowed.**




-  **Do not ride on roads intended for vehicular traffic to avoid potential dangers.**




- ⚠ Do not operate the scooter if you have consumed alcohol or taken medication that could impair your ability to ride safely.

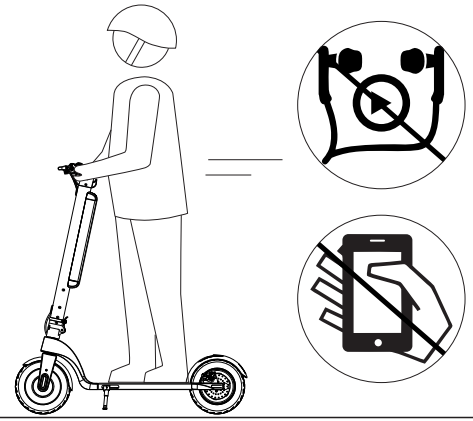

 
- ⚠ Do not make phone calls or listen to music while riding the e-scooter to maintain full awareness of your surroundings.

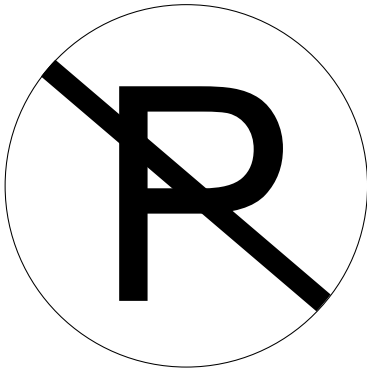

 - ⚠ Do not park the scooter in building foyers, evacuation corridors, or in front of safety exits to ensure unobstructed access during emergencies.

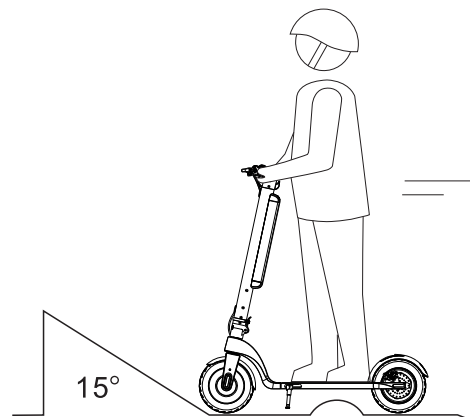


 - ⚠ Exercise caution on roads that have obstacles such as roadblocks, sandstone, water, mud, ice, and snow. Be mindful of slopes steeper than 15 degrees and avoid riding in poorly lit areas.

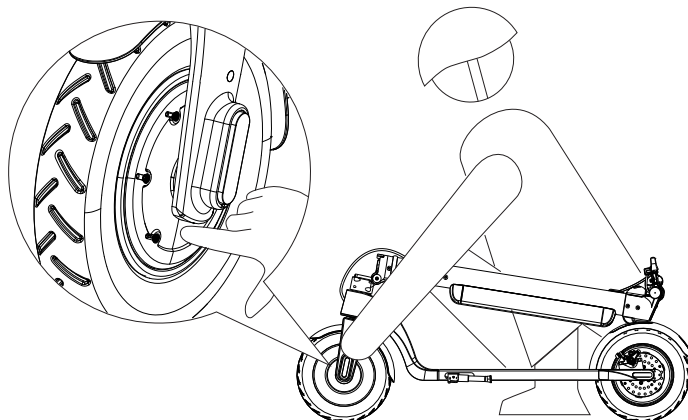

- ⚠ After extensive use, the motor hub and disc brakes can become extremely hot. Avoid touching them directly after riding to prevent burns.

 Schematic View


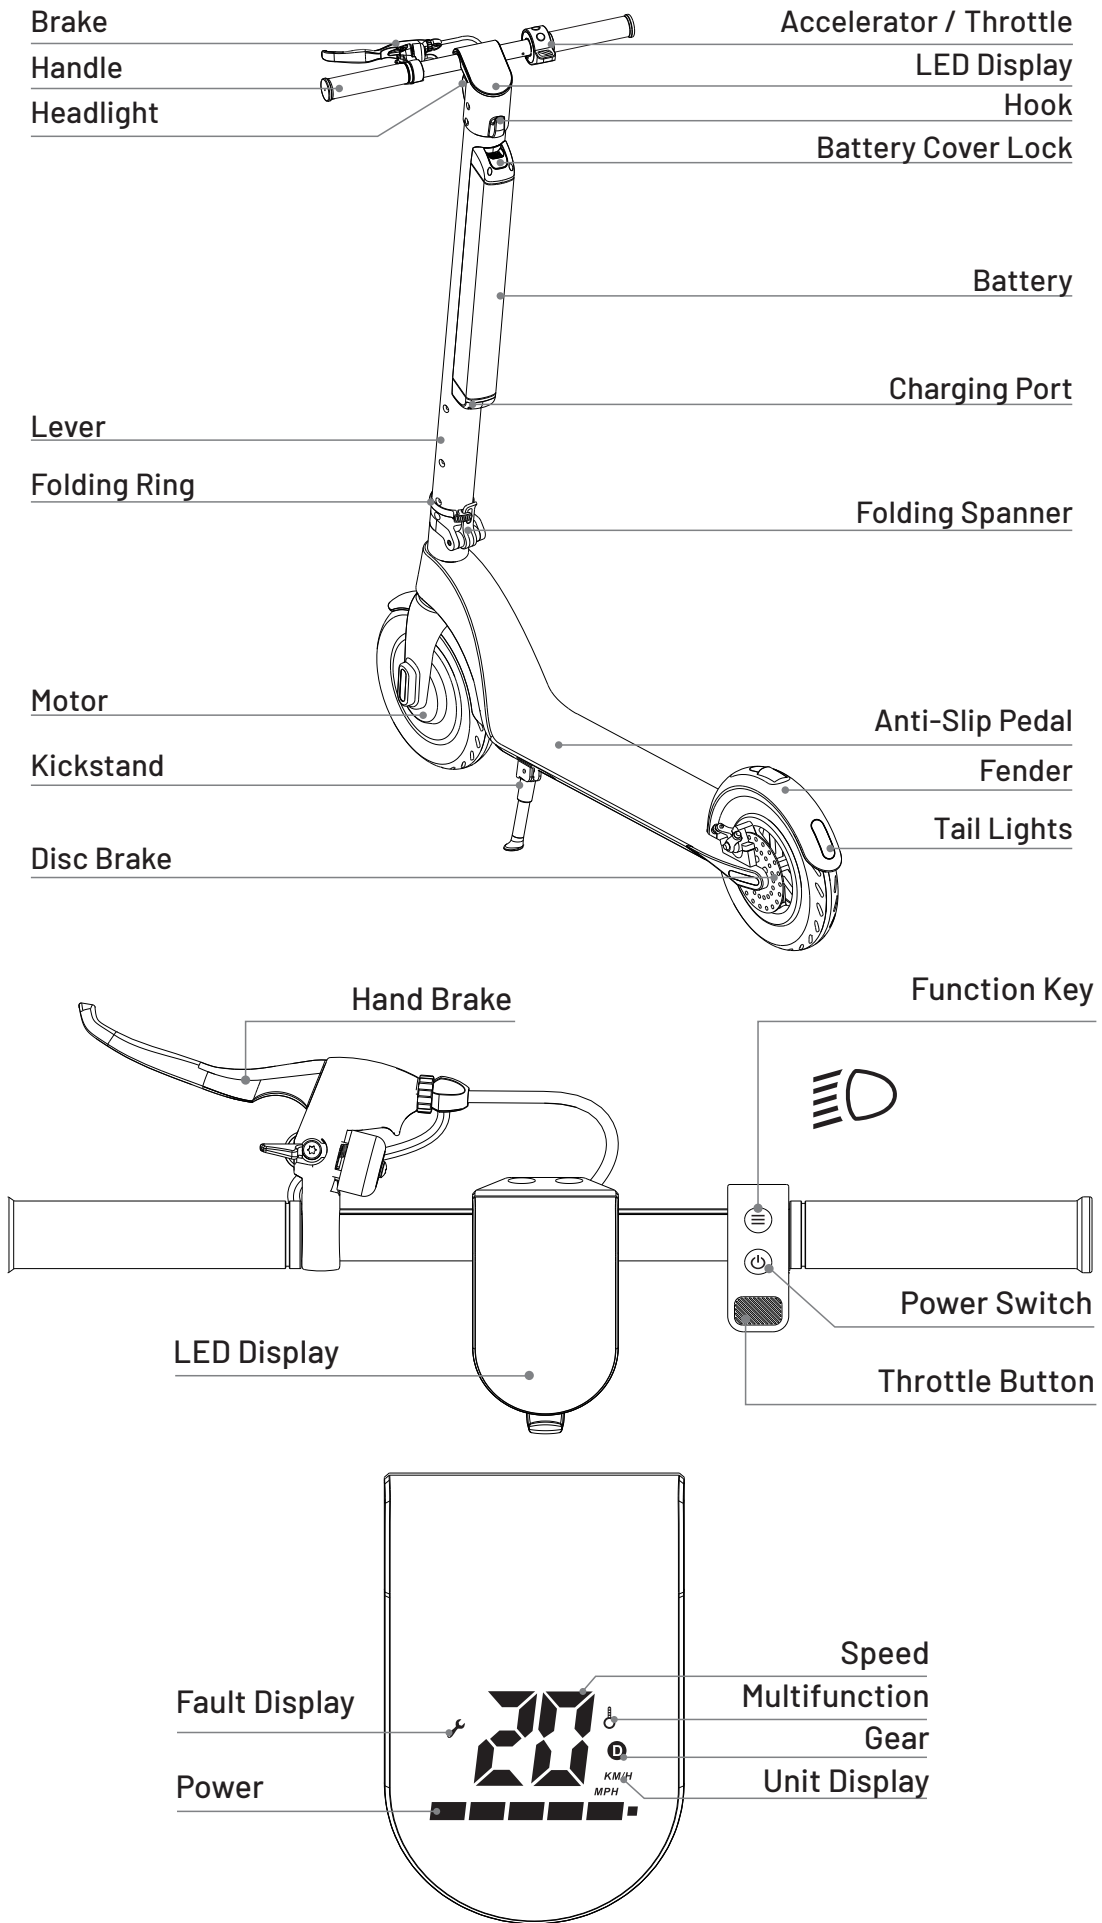


LED display


Button Instructions

1. Power Switch: Long press the power button to turn the scooter on or off.
2. Function Key:
A: Press the function key once to cycle through the gears:
Pedestrian Mode: The gear indicator **D** is not displayed. The indicator starts flashing.
Normal Mode: The gear indicator **D** illuminates with a white light.
Sports Mode: The gear indicator **D** illuminates with a red light.
B: Press the function key twice to toggle the front and rear lights. The lights remain continuously on when activated.
3. Accelerator: Press the accelerator to initiate and increase speed.
4. Brake: Hold the brake handle to slow down or stop. Lightly stepping on the rear fender can also help activate the brakes.
5. Cruise Mode: Engage the cruise control by maintaining the current speed (≥ 6 km/h) for six seconds. The scooter automatically enters cruise mode. Exit cruise mode by pressing the accelerator again or holding the brake handle firmly.

  
Assembly Instructions

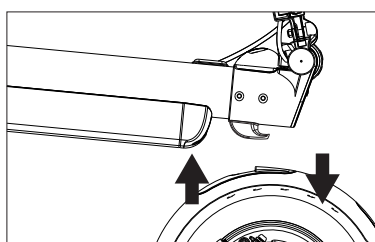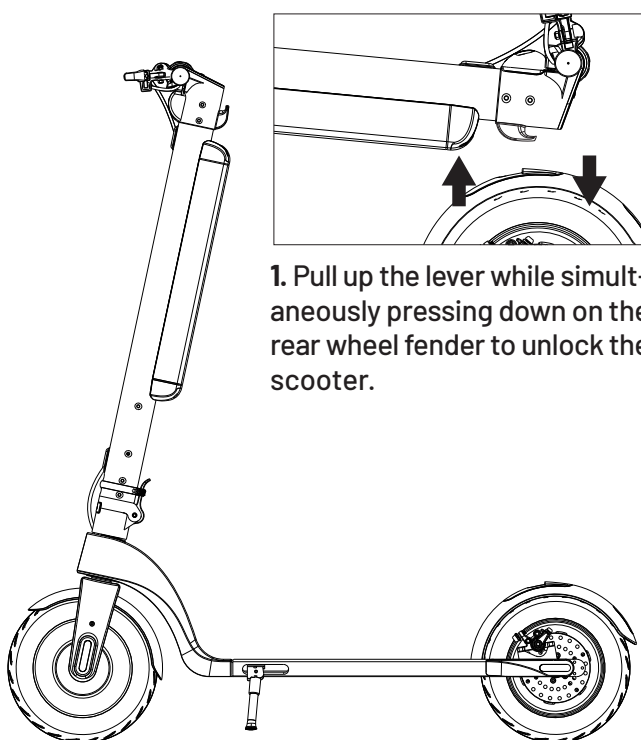

 
1. Pull up the lever while simultaneously pressing down on the rear wheel fender to unlock the scooter.

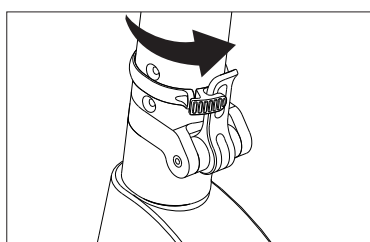

 
2. Fasten the folding spanner and use the folding fixing ring to secure the spanner in place.

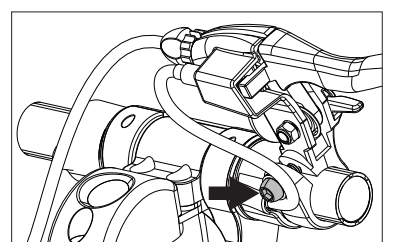

 3. Secure the brake lever using an M5 hex wrench.

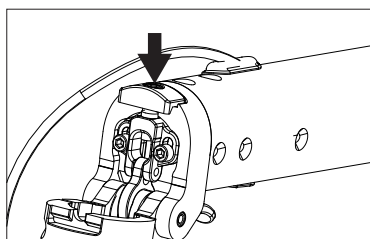


 5. During use, if the fixed buckle becomes loose, tighten the screw clockwise to secure.

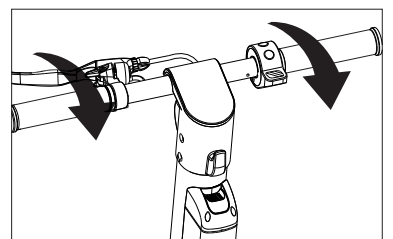


4. Ensure the handlebars are securely tightened, paying attention to the direction of rotation during tightening.

 
Folding Guide

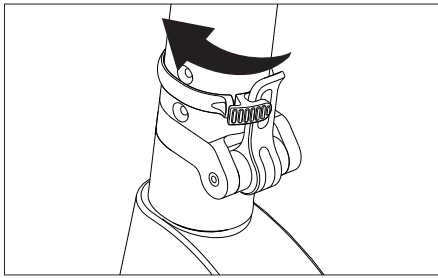


 
1. Start by loosening the folding fixing ring to prepare for adjustments.

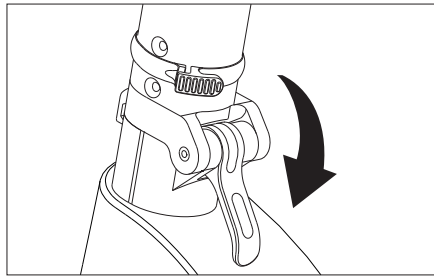

 2. Next, open the folding wrench to release the locking mechanism.

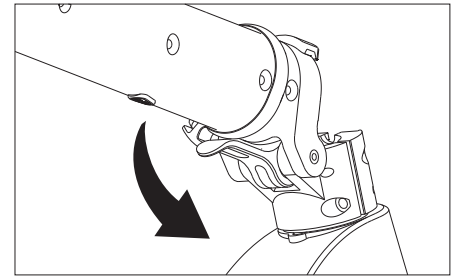


  3. After releasing the lock, open the folding wrench further to lower the pole smoothly.

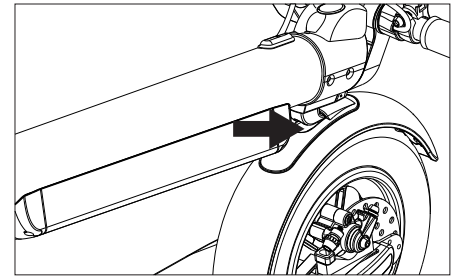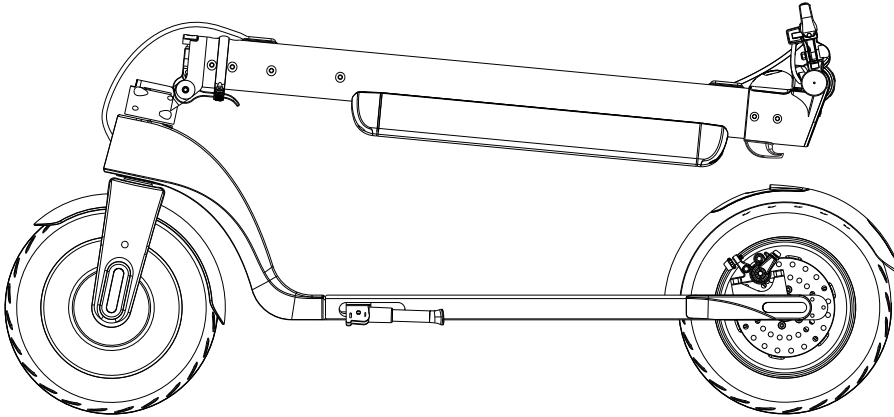


4. Align the hook with the hole on the rear fender and press down to secure the pole in place.

 
Disassembly Guide

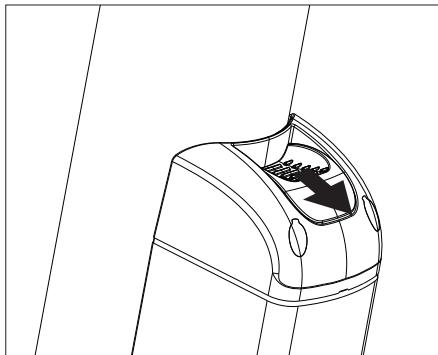

 1. Begin by pulling the lock on the battery case to release it.

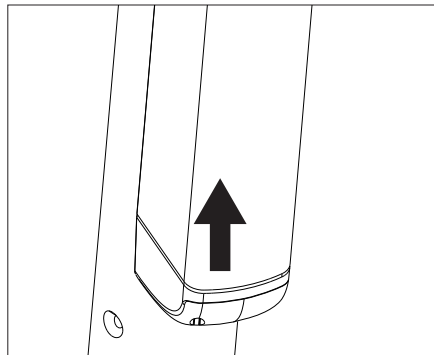


 2. Gently push the battery upward from the bottom to loosen it from the compartment.

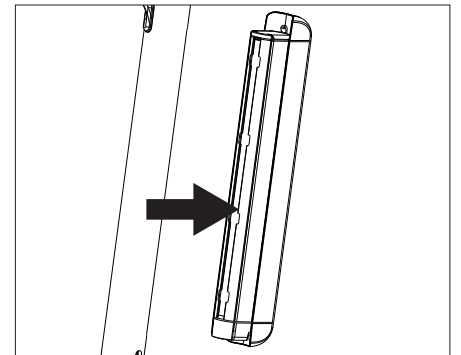


3. After pushing the battery up, slide it out horizontally to completely remove it.

 Battery Installation

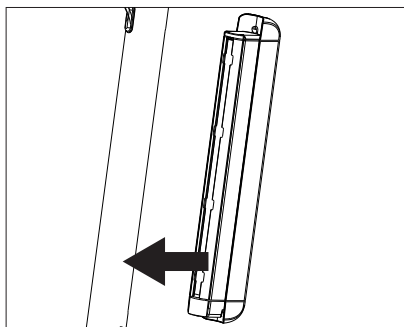


 1. Slide the battery horizontally into the pole's battery compartment.

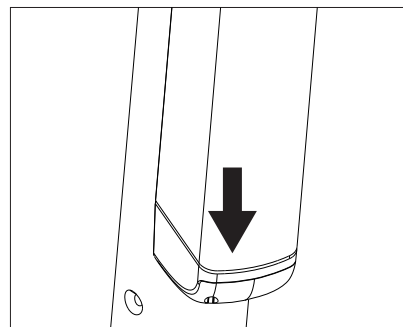


2. Push down on the battery until the lock latch of the battery box clicks into place, ensuring it is securely fastened.

 
Riding Instructions

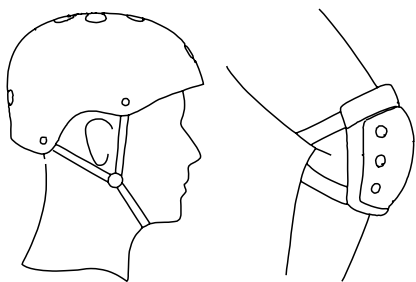

 
Warning: Always wear a helmet, knee pads, and elbow pads when learning to ride the scooter to ensure your safety.

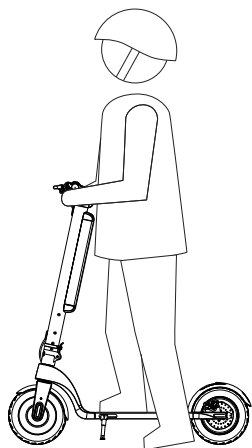

 
2. Stand on the pedal with one foot, gently press the acceleration dial, and position your other foot at the back to maintain balance.

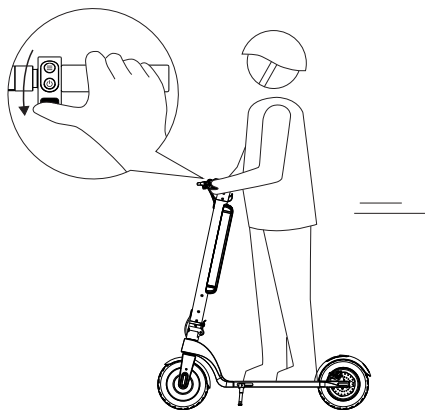

 
4. Continue pressing the thumb shifter to increase speed. To change direction, turn the handle grip accordingly.

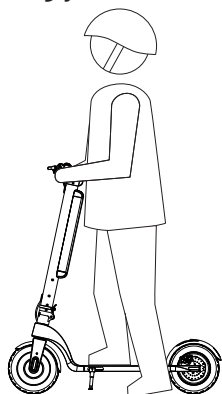

 
6. As the scooter slows to a stop, step down with one foot and smoothly dismount.

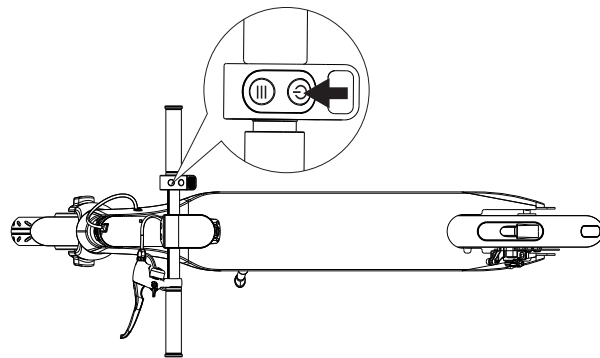

 
1. Long-press the power button for two seconds to turn on the scooter.

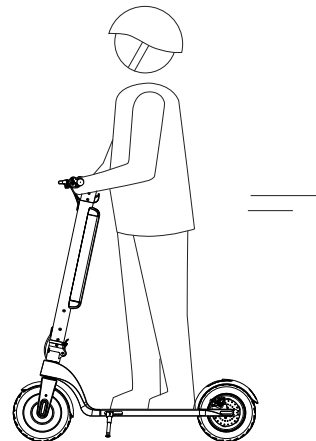

 3. Once the scooter starts to glide, place the other foot on the pedal to continue riding smoothly and stably.

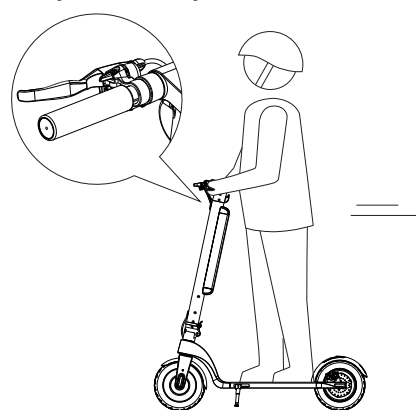

 5. Firmly grasp the brake handle to reduce speed and come to a stop.

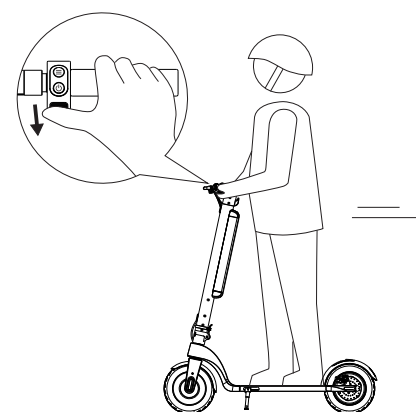

7. Until you are accustomed to the scooter's performance, avoid riding at high speeds to prevent accidents and ensure safety.



Note

1. During rainy or snowy conditions, braking distances increase. It is essential to reduce your speed accordingly to ensure safe stopping.
2. Always maintain a speed that allows for safe braking. Sudden braking can reduce tire traction, potentially causing the scooter to slide and lead to dangerous situations, including serious injuries.

Battery Instructions

A. Battery Specifications

Battery Type	Li-ion Battery
Capacity	10Ah
Charging Time	7 hours
Voltage	36V
Charging Current	2A
Working Temperature	0°C to 35°C
Charging Temperature	0°C to 35°C
Storage	At -10°C to 40°C for 3 months (full charge)

B. Battery Warnings

 
1. The battery must be charged and used within the temperature range specified by the manufacturer to ensure stable and efficient operation.
2. Always remove the charger when installing the battery to prevent any potential hazards.
3. Do not disassemble or pierce the battery casing to avoid the risk of short circuits caused by metal objects touching the battery contacts, which could lead to battery damage or personal injury.
4. There is a risk of fire or explosion if water enters the battery circuit. If this occurs, stop using the battery immediately and consult after-sales support.
5. You may only charge the battery using the original adapter provided to avoid any unforeseen consequences.

- 6.** If the battery appears damaged, emits a bad smell, or is over-heated, stop using immediately and keep it at a safe distance from other equipment.
- 7.** Store the fully-charged battery (100 %) to extend its lifespan.
- 8.** Do not store the battery in conditions below -20°C or above 50°C.
- 9.** If the battery has not been used for over 30 days, charge it to at least 80 % capacity. For optimal maintenance, charge it to 100 % every 90 days.
- 10.** Charging the battery as recommended in the manual after each use, rather than depleting it completely, will significantly enhance its lifespan. Battery life and performance are optimized at room temperature, but can decrease significantly in temperatures below 0°C.
- 11.** Avoid charging electric scooters in residential buildings. Ensure that the charging area is free from combustible material, and keep charging times as short as possible.
- 12.** Improper disposal of used batteries can seriously harm the environment. Please comply with local regulations when disposing of this battery.
- 13.** If the internal temperature of the battery exceeds 50°C, the battery enters a protected state and cannot be charged.
- 14.** After being fully charged, the electric scooter will deplete its stored power after about 120-90 days of standby. If not recharged timely, this can lead to irreversible battery damage.

Charging Instructions

- 1.** Open the charging port cover. Ensure the charging port is clean and dry before use.
- 2.** Connect the charger to the battery and plug the other end into a power source (100V-240V; 50/60Hz). Ensure the charging indicator is activated.
- 3.** When the indicator light on the charger changes, it signifies that the charging process is underway. If it does not change, verify that the connections are secure.
- 4.** If the charger's indicator changes color, indicating the battery is nearly full (99 %), stop charging to avoid compromising the battery's lifespan due to overcharging.

Charging Method

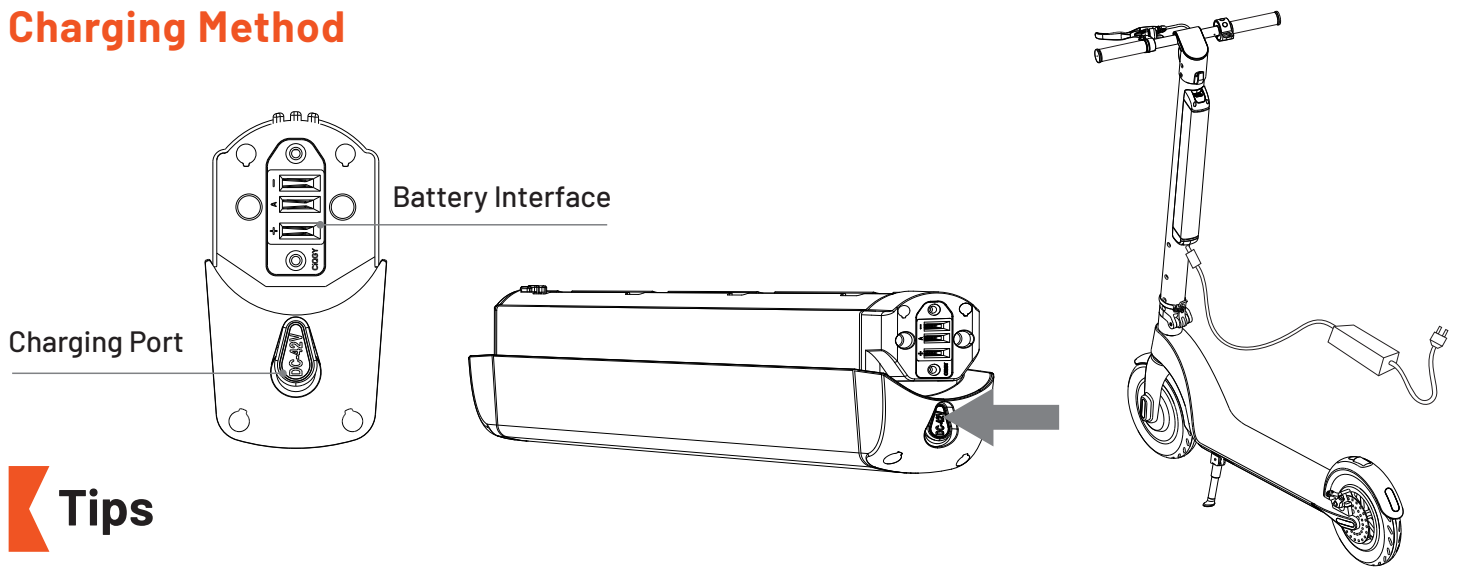

Tips

1. To access the charging port, first remove the battery, then open the silicone charging port cover.
2. Insert the charger's DC plug into the battery charging port.
3. Connect the other end of the charger to a power outlet (100V-240V; 50/60Hz) and ensure the charging indicator is functioning properly.
4. After charging, cover the charging port with the anti-dust cap to prevent any metal objects from coming into contact and potentially causing a short circuit.

Maintenance

1. Ensure that the electric scooter's charger and charging cable are disconnected and that the scooter is turned off before performing any maintenance.
2. Clean the electric scooter's exterior with a soft cloth. Avoid applying excessive lubricant to the bearings during maintenance.
3. Regularly check the tire pressure before driving to ensure safety. The recommended tire pressure is between 320 kPa and 340 kPa.
4. Inspect the brake system and tires at least once a month as these are critical and wear-prone components. If you notice any decline in brake performance or tire grip, contact your dealer for replacement parts.
5. Do not use accessories not approved by the manufacturer as this could lead to safety hazards due to compatibility issues.
6. Avoid cleaning the electric scooter with high-pressure water jets or immersing it in liquids; such methods can cause irreversible damage to electronic components.
7. Do not attempt to disassemble the electric scooter. Doing so voids the warranty and can compromise safety.

Specifications

Product Name	Porodo Lifestyle Urban Scooter Pro Electric Mobility with 10 Inch Durable Wheels
SKU	PD-LFST009-BK
Input Voltage	100-240V AC
Rated Frequency	50/60Hz
Rated Power Output	350W
Motor Power	600W Max
Rated Voltage	36V
Battery Capacity	10Ah
Recharge Time	7 Hours
Max Speed	32 Km/h
Max Distance	35 Km
Slope	20°
Wheelbase	10"
Brake	Front electronic brake, Disc brake, Pedal brake
Lights	Front LED headlight, Tail light
Net Weight	15 kg
Dimensions	1186×401×1083mm (Unfolded), 1083×401×460 mm (Folded)
Height from Pedal to Ground	115mm

Storage

1. Please charge your electric scooter before placing it in storage to prevent the battery from discharging excessively. Ensure that you charge the scooter at least once every three months.
2. If the storage environment's temperature is below 0°C, avoid charging the scooter. Relocate it to a location where the temperature exceeds 10°C before charging. The appropriate storage temperature range is -10°C to 35°C.
3. Store the electric scooter in a dry, indoor environment where the temperature is suitable. To protect the scooter from dust, cover it appropriately.

Troubleshooting

Note: In the event of a malfunction, please contact authorized service professionals. Do not attempt to disassemble or repair the product on your own.

Problem	Solution
Unable to Start Up	Check to ensure the battery is powered.
Cannot Charge	Check whether the plugboard is powered. Verify if the charger is connected to an AC outlet and the indicator light is on. Ensure the charger plug and the scooter's charging port are properly inserted.
No Horn, No Bluetooth Signal	Check whether the Bluetooth switch is turned on.

Package Contents

1. Electric Scooter
2. Charger
3. Screws and Wrench

Warranty

Products that you buy directly from our **Porodo** website or shop come with a 24-month warranty.

When you buy **Porodo** products from any of our approved sellers, you only get a 12-month warranty. If you want to extend this warranty, go to our website at **porodo.net/warranty** and fill out the form with your information. Don't forget to upload a picture of the product too. After we've checked and accepted your request, we'll send you an email to confirm that your product's warranty has been extended.

For more info, please check:
porodo.net/warranty

Contact Us

If you have any questions about this Privacy Policy, please contact us at:
info@porodo.net

Website: **porodo.net**

Service Support: **support@porodo.net**

Instagram: **porodo**