

PORODO



Porodo
Kids Digital Camera
with Dual Lens

SKU: PD-LFST013

Table of Contents

Product Overview	2
Interface Overview	3
Instructions for Use	3
A. Power Button	3
B. Photo Shooting	3
C. Recording Video	4
D. Game	5
E. Reset Button	5
Charging Mode	5
Auto Standby	5
USB Mode and PC Camera	5
Troubleshooting	6
Safety Precautions	6
Specifications	7
Battery Safety Precautions	7
Warranty	8
Contact Us	8

Product Overview



Interface Overview

1. Shooting
2. Recording Video
3. Photo album
4. Settings
5. Games
6. MP3
7. Background



Instructions for Use

A. Power Button

To start the camera, press and hold the "Power" button. To return to the Main Interface or Previous Menu, press the button briefly.

Note: Please ensure the battery is fully charged before first use.

B. Photo Shooting

1. The camera can take up to 51 photos without a TF memory card. To take more than 51 photos, a TF card must be installed.
2. When the TF card reaches its full capacity, a message "Memory Card Space Is Insufficient" will appear.

B.1 Taking Photos

Press the "Shutter" or "Enter" button to capture a photo. The remaining number of photos is displayed in the upper right corner of the screen. A flashing indicator confirms that the photo has been captured.

B.2 Using Filters

Press the "Up" or "Down" button to cycle through available filters or to apply a mirror image or emoticon effect.

B.3 Zoom Lens

In shooting mode, adjust the zoom level by rotating the lens barrel to the right to zoom in or to the left to zoom out. The zoom can be adjusted from 1 to 10 times magnification. The current zoom level is displayed in the lower right corner of the screen.

B.4 Fill Light for Photos

In shooting mode, press the "Left" button to toggle the fill light on or off. In photo mode, use the same button to activate or deactivate the light. Pressing the "Shutter" or "Enter" button to capture a photo will cause the fill light to flash once, indicating that the photo has been successfully taken.

B.5 Timer

Access the Settings menu to configure the timer for taking photos. Options include turning the timer off or setting it to a 2-second or 10-second delay.

B.6 Selfie Mode

Press the "Right" button to switch from the rear camera to the front camera for selfies. Press the "Right" button again to revert to the rear camera.

C. Recording Video

Video recording is enabled only when a TF card is inserted into the camera.

C.1 Start

To begin recording, press the "Record" or "Enter" button. The recording indicator will flash to signal that recording has started. The current resolution is displayed in the center top of the screen, and the remaining recording time is shown in the upper right corner.

C.2 Filter

To change the filter effect, press the "Up" or "Down" buttons.

C.3 Fill Light

Activate the fill light in recording mode by pressing the "Left" button. The fill light icon will appear on the upper left of the screen, indicating that the fill light is continuously active during recording.

C.4 Selfie Mode

Switch to selfie mode by pressing the "Right" button to change from the rear to the front camera. Press the "Right" button again to switch back to the rear camera.

C.5 Stop Recording

Once recording is complete, press the "Power Button" to stop and exit the recording mode.

C.6 Video Playback

Access the photo album page to view the latest photos and videos. Use the "Left" and "Right" buttons to navigate through the videos or photos. Press the "Enter" button to play or pause the current video or photo. To delete a video or photo, use the "Up" or "Down" buttons.

D. Game

To play a game, navigate and select it using the "Left" or "Right" buttons. Start the game by pressing the "Enter" button and exit by pressing the "Power" button when finished.

E. Reset Button

If the camera becomes unresponsive, use a SIM card ejector tool or a small pin to press the "Reset Button". The camera may freeze due to a low battery or if the memory card is full.

Charging Mode

1. Charge the camera using a power adapter.
2. Charge the camera using a Type C cable.
3. Charge using the built-in power adapter.

Important Note: Always use a 5V/1A adapter to avoid damaging the camera. Using an adapter with more than 5V can cause irreversible damage and prevent the camera from turning on.

Note: No adapter is included.

Auto Standby

The camera automatically enters Auto Standby mode when not in use for 2 minutes and will shut down if inactive for 3 minutes.



USB Mode and PC Camera

When the camera is connected to a computer via USB cable:

[1] If no TF card is present, it defaults to PC Camera mode.

[2] If a TF card is installed, it switches to Card Reading mode.

Troubleshooting

Problem	Solution	Images for Reference
SD Card Not Recognized	<ol style="list-style-type: none"> 1. After inserting the SD card into the camera, go to the main menu and select "Settings". 2. Scroll down to locate the "Format" option. 3. Select "Execute" to begin formatting the SD card. 4. Once formatting is complete, select "End" to exit the settings menu. 	
Camera Screen Freezes	Use a SIM card ejector tool (note: this tool is not included with the camera accessories) to press the reset button on the camera. This action will reset the camera settings.	

Safety Precautions

1. Maintenance

This product should not be used in or exposed to water or humid environments. Always ensure that the camera case and all interfaces are kept dry.

2. Attention

2.1 Chargers provided with this camera are not toys and should always be used under adult supervision, whether the camera is charging or not.

2.2 Keep the charger dry and follow all usage instructions carefully.

2.3 If the SD card is full, promptly delete unnecessary videos or photos to free up space.

3. Safety Note

The camera contains small parts that may pose a choking hazard to children under 3 years old. Keep the camera out of reach of young children and ensure it is not used near any open flame or heat source.

Specifications

Battery Capacity	1000mAh
Charging Port	Type-C
Charging Voltage	DC 5V/1A
Recharge Time	2H
Battery Life	Up to 5H
Screen Resolution	320×240 IPS
Image Resolution	12MP (Extrapolated 48MP)
Video Resolution	1080P, 720P, VGA
Micro SD Slot	Up to 32GB (SD Card not included)
Supported Languages	English, Arabic, Russian, Italian, Japanese, German, Korean, Spanish, Portuguese, Chinese
Picture Format	JPG
Video Format	AVI

Battery Safety Precautions

- 1.** Do not connect a power supply exceeding the recommended value.
- 2.** Inspect the wire and outer casing before charging. Discontinue use if damaged.
- 3.** Children aged 3-0 should use this product only under parental supervision.
- 4.** Avoid using the product while it is charging.
- 5.** Keep the product away from fire.

Warranty

Products that you buy directly from our **Porodo** website or shop come with a 24-month warranty.

When you buy **Porodo** products from any of our approved sellers, you only get a 12-month warranty. If you want to extend this warranty, go to our website at **porodo.net/warranty** and fill out the form with your information. Don't forget to upload a picture of the product too. After we've checked and accepted your request, we'll send you an email to confirm that your product's warranty has been extended.

For more info, please check:
porodo.net/warranty

Contact Us

If you have any questions about this Privacy Policy, please contact us at:
info@porodo.net

Website: **porodo.net**

Service Support: **support@porodo.net**

Instagram: **porodo**