

PORODO



Porodo
Kids FLIP Digital Camera
with Tripod Stand

SKU: PD-LFST014

Table of Contents

Features	2
Specification	2
Schematic View	3
Homepage Guide	3
Power On	4
Photo Capturing	4
Recording Function	4
Playback Function	4
ABC Function	5
Settings	5
Charging	5
Reset Function	6
Standby Feature	6
Warning	6
Warranty	7
Contact Us	7

 
 
Features

1. Capture high-quality videos in full HD 1080P resolution, perfect for preserving vibrant and clear memories.
2. Take stunning photographs with a high resolution of 48 megapixels, ensuring every detail is crisp and vivid.
3. Enjoy up to four hours of continuous use on a single charge, ideal for extended photography sessions during outings or events.
4. The camera features a versatile 180-degree flip lens, allowing for creative angles and easy selfies.
5. View your photos and videos on a 2.4" wide screen that offers a clear and bright display.
6. Enhance your photos with five different color filters, adding fun and artistic effects directly from the camera.


Specifications

Product Name	Porodo Kids FLIP Digital Camera with Tripod Stand
SKU	PD-LFST014
Battery Capacity	1000mAh
Charging Port	Type-C
Charging Voltage/Current	5V/1A
Battery Life	4 hours
Recharge Time	1 hour
Screen Resolution	320×240 IPS
Screen Size	2.4"
Image Resolution	12MP
Video Resolution	1080P, 720P, VGA
Micro SD Slot	Up to 32GB (SD card not included)
Language	English, Russian, Italian, Japanese, French, German, Korean, Spanish, Thai, Polish, Dutch, Portuguese, Chinese

Schematic View

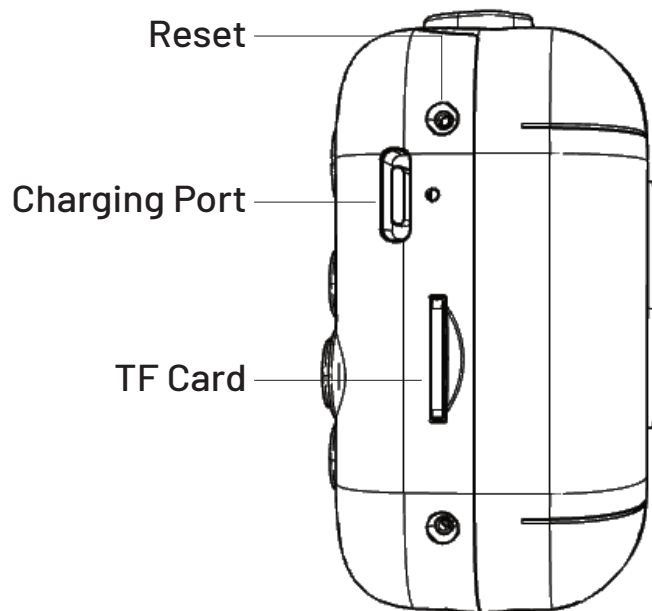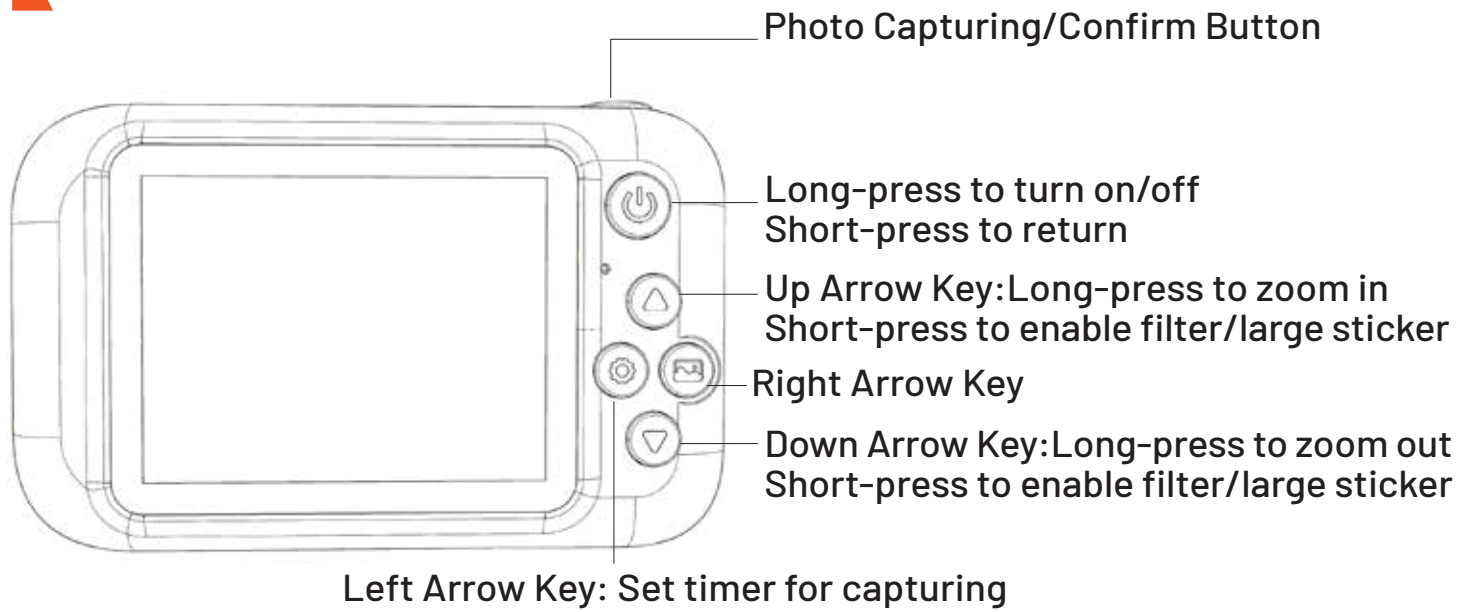

Homepage Guide

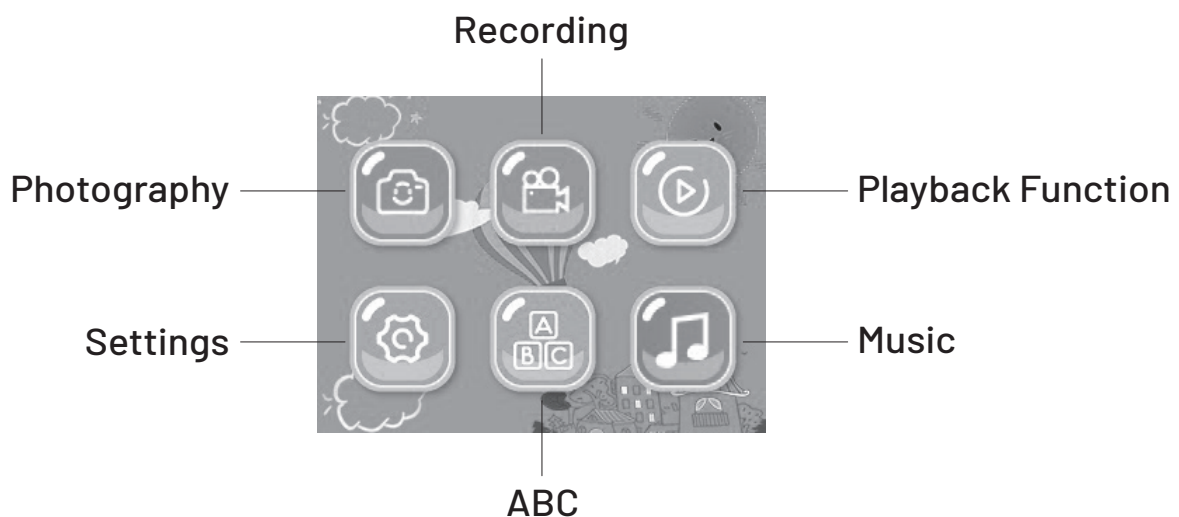 

Power On

Briefly press the power button to return to the previous screen or interface level.

Photo Capturing

Activate the photo capturing function to store images on the card when a TF card is present.

1. Briefly press the [Confirm] / [Take Picture] button to capture a photo.
2. Briefly press the up or down arrow keys [▲ ▼] to cycle through available effects such as filters, Big Head stickers, or Haha Mirror.
3. Zoom Function: Press and hold the up or down arrow keys in photography mode to zoom in or out.

Recording Function

The recording function is only available when a TF card is present. If no card is inserted, it will prompt "Not inserted." If the card is full, it will prompt "Card full."

1. Recording: Briefly press the confirm button or the record button to start recording.
2. Exit: Briefly press the power button to stop recording or taking photos.

Playback Function

Select the playback function to display the first image from photos or videos stored, with priority given to showing the content of the TF card.

1. Video Switching

Briefly press the left/right arrow keys to switch between videos and photos.

2. Video Mode

Briefly press the [confirm button] to pause or play the current video.

3. File Deletion

Briefly press the up/down arrow keys to prompt for file deletion. Select "Yes" or "No" to confirm deletion of the file.

ABC Function

Activating the ABC function will switch the device to ABC mode.

1. Briefly press the left/right arrow keys to choose the learning type.
2. Briefly press the [Confirm] button to select the desired type.
3. Exit ABC mode by briefly pressing the power button.

Settings

Access the settings function to customize the user's configuration.

A. Buttons

Up Arrow Key / Down Arrow Key [▲ ▼]: Select the setting to be adjusted.

Confirm Button: Confirm the selected setting.

Power Button: Exit the settings menu.

B. Format

Locate the formatting option within the settings and press the confirm button to apply changes.

C. Version Number

Choose the version number icon to display the current system version.

D. Date and Time

Select the time settings option to set the device's clock.

Charging

1. The device can be charged using the 5V/1A charger via a USB interface.
2. Ensure the camera is turned off and disconnected from the charging base before connecting it to a computer USB interface to access photos and videos.
3. Please use an approved 3C-certified charger for optimal performance.

Reset Function

In case of malfunction, a pin can be inserted into the reset hole to enable the reset function and reboot the device.

Standby Feature

The camera automatically enters standby mode when not in use. If it remains in standby mode without activity, it will shut down automatically to conserve power.

Warning

- 1.** The device includes a built-in 3.7V lithium battery which is non-removable and non-replaceable. If the battery is damaged, please contact service personnel for repair.
- 2.** Regularly inspect the wires, plugs, and external components of the charger. Discontinue use of the device immediately if any components are found to be damaged and do not resume use until it has been fully repaired.
- 3.** Only use an authorized and branded adapter rated at 5V/1A.
- 4.** Keep adapters out of children's reach as they are not toys and are not meant for play. Chargers should only be operated by adults or under strict adult supervision.
- 5.** This product contains small parts that may pose a choking hazard and is not suitable for children under three years of age.
- 6.** Improper disposal of this product may result in environmental damage. Please ensure it is disposed of responsibly.
- 7.** Retain this manual as it contains vital information necessary for future reference.

Warranty

Products that you buy directly from our **Porodo** website or shop come with a 24-month warranty.

When you buy **Porodo** products from any of our approved sellers, you only get a 12-month warranty. If you want to extend this warranty, go to our website at **porodo.net/warranty** and fill out the form with your information. Don't forget to upload a picture of the product too. After we've checked and accepted your request, we'll send you an email to confirm that your product's warranty has been extended.

For more info, please check:
porodo.net/warranty

Contact Us

If you have any questions about this Privacy Policy, please contact us at:
info@porodo.net

Website: **porodo.net**

Service Support: **support@porodo.net**

Instagram: **porodo**