

PORODO



Porodo
Baby Nail Trimmer Set

SKU: PD-LFST019-WH

Table of Contents


Warning	2
Schematic View	2
Installing Batteries	3
Instructions for Use	3
A. Overview	3
B. Baby's Nails	4
C. Adult's Nails	5
C.1 Using the Shaving Pad	5
C.2 Using the Polishing Pad	5
Using the Night Light	6
Replacing the Trimming Heads	6
Specifications	7
Maintenance and Storage	7
Warranty	8
Contact Us	8

This product is designed specifically for nail care and as a night light. Please do not use it for any other purposes. Keep this manual in a safe place for future reference.

Warning

1. Keep the product, storage box, and accessories in a safe place, out of children's reach. Mishandling or accidental ingestion of small parts could result in a serious accident.
2. Read the instruction manual thoroughly before using the product.
3. Ensure the battery is inserted correctly into the device.
4. Keep the product away from fire.
5. Do not use batteries that are damaged or dented.
6. Always turn the power off after each use.
7. Remove the batteries if the product will not be used for an extended period.
8. Replace the batteries once they are depleted.
9. Do not mix or use different brands of batteries together.
10. Use only alkaline batteries. Do not use manganese, nickel, or rechargeable batteries.
11. When discarding batteries, follow local disposal regulations.
12. Keep the product away from water, as it is not waterproof.
13. Use a dry towel for cleaning if necessary.

Schematic View

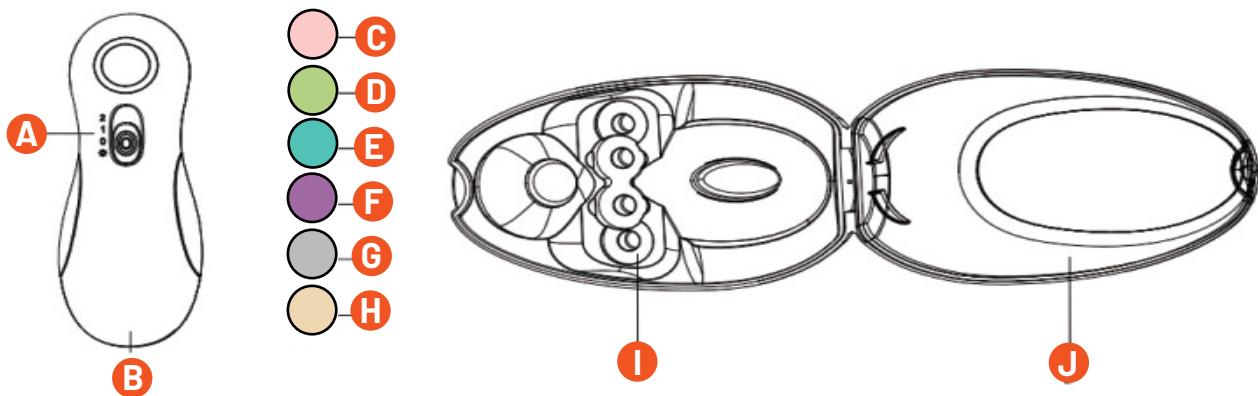

A: Switch [2: High speed, 1: Low speed, 0: Off, Night light]	F: Purple (Hard Sandpaper)
B: Nail Trimmer Body	G: Shaving Pad (For Adults)
C: Pink (Soft Sandpaper)	H: Polishing Pad (For Adults)
D: Green (Medium Sandpaper)	I: Blister Part
E: Blue (Medium Sandpaper)	J: Storage Case


Installing Batteries

The battery compartment is located on the back of the nail trimmer.

Step 1: Hold the nail trimmer securely and slide the battery cover down (refer to image 1).

Step 2: Insert two AAA batteries, ensuring they are placed in the correct orientation (refer to images 2 and 3).

Step 3: Slide the battery cover back up into its original position (refer to image 4).

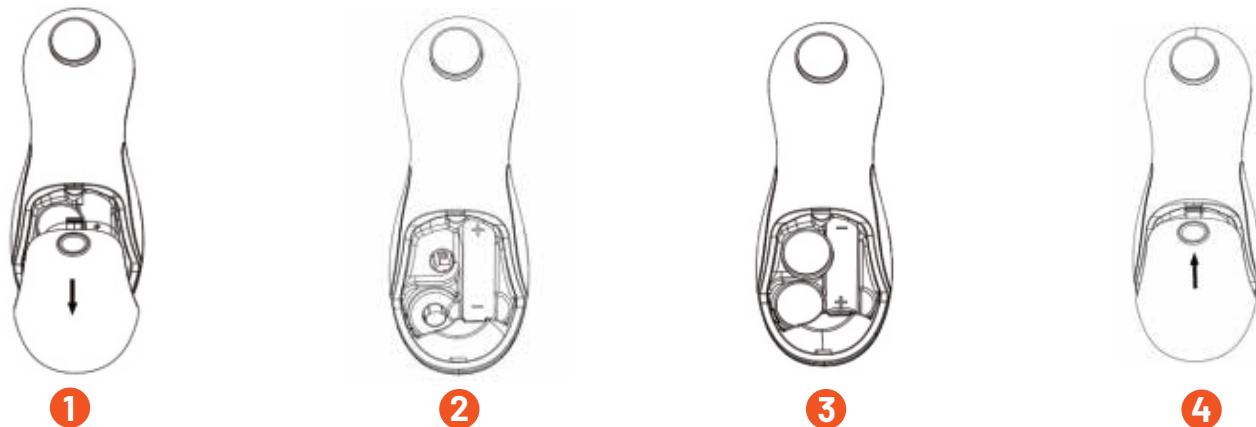


Instructions for Use


A. Overview

1. This product is designed to safely shape children's nails.
2. The following age recommendations are provided to help you select the appropriate trimming head based on the child's age, nail condition, and thickness.
3. Adults can also use these trimming heads for their own nail care needs.


I. Kids

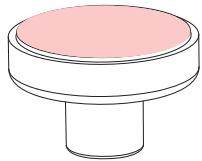

Soft Filling Pad
(0-3m)

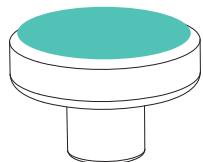


Medium Filling
Pad (4-11m)

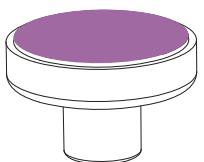


Hard Filling
Pad (+12m)

Fine <----- Rough

II. Adults

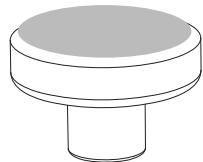


Shaving Pad
(Adult)

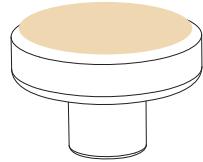

Polish Pad
(Adult)

B. Baby's Nails

1. Place the trimming head securely into the designated slot.
2. Turn the switch to setting 1 to operate at a lower speed. Gently touch the sandpaper to the tip of the child's nail.
3. Hold the trimmer at a 50-60° angle to the nail for optimal shaping. Move the trimmer lightly and slowly to shape the edge of the nail.
4. After finishing all the nails, turn off the power and brush away any debris around the nails.
5. Remove the trimming head from the trimmer body and store it in the provided case.

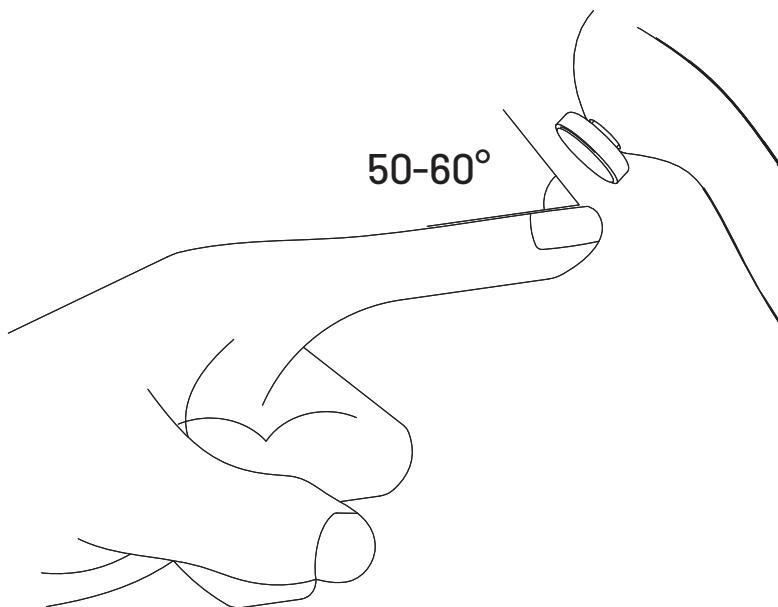

Attention

1. Do not use attachments designed for adults on children's nails, as this can cause significant damage to the children's fingers and nails and is extremely dangerous.
2. The sandpaper is intended solely for shaping the nails. Avoid using it to polish the nail surface, as it can harm a child's delicate nails.

C. Adult's Nails

1. Choose the appropriate adult trimming head based on your specific need.
2. Place the selected trimming head securely into the slot.
3. Turn on the device to the desired setting (1 for lower speed or 2 for higher speed) based on your personal preference.
4. Once you have finished trimming all nails, turn off the device and clean any residual dust from around the nails.
5. Detach the trimming head from the device and store it in the provided case for safekeeping.


Attention

Avoid using the product on any single area of the nail for an extended period. Doing so may file off the surface excessively, causing discomfort or a sensation of heat from friction.

C.1 Using the Shaving Pad


1. Gently apply the disc to the area of the nail you wish to shape.
2. Hold the disc at a 50-60° angle to the nail. Adjust the angle as necessary during use to achieve the desired shape.
3. Apply light pressure and avoid pressing too hard or moving the disc back and forth excessively as this can lead to difficulties in shaping.

Warning: This product is not suitable for removing gel nails.

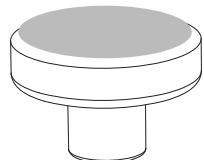

C.2 Using the Polishing Pad

1. Place the entire surface of the disc against your nail and move it slowly to polish effectively.
2. Avoid pressing too hard or moving the disc erratically to ensure an even polish.
3. For optimal results, ensure that the nail surface is already smooth before polishing. If necessary, smooth out any irregularities on the nail surface prior to using the polishing disc.

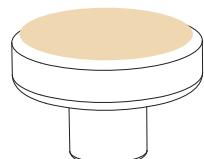

Three Steps for Polishing Nails:


1. Medium Sandpaper (Green): Use to remove bumps from adult nails, smoothing out uneven surfaces.
2. Soft Sandpaper (Pink): Employ this to refine and smooth the base of the nails, preparing them for a finer finish.
3. Polishing Pad: Utilize the disc to eliminate any remaining dirt and achieve a smooth, polished surface.

Note: Adjust the sequence of using the disc and sandpaper according to the specific condition of your nails for optimal results.

Using the Night Light

This product features a night light function, ideal for a child's room. The soft glow provides comfort for your baby, helping them sleep peacefully without fear of the dark. It's also useful for nighttime breastfeeding or diaper changes.

1. Slide the switch down to the night light setting to turn it on.
2. Place the nail trimmer body into the storage box for safe keeping.
3. Ensure the unit is placed vertically on a flat surface.

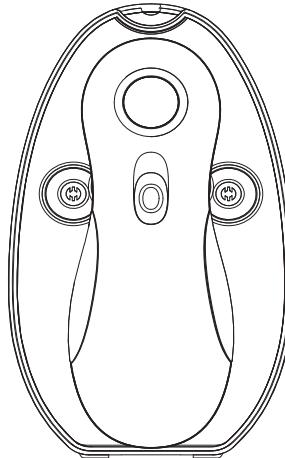

Replacing the Trimming Heads

1. All trimming heads are consumable and will wear down over time.
2. The surface of the trimming head will eventually degrade, which may impact its performance.
3. Please ensure to replace the trimming heads once the surface has worn out to maintain the effectiveness of the nail trimming process.

Specifications

Material	ABS + Polymer
Battery	x2 AAA Battery (Not Included)
Head Trimmer	4 (Babies/Toddler) 2 (Adult)
Trimmer Color & Function	Pink (Babies under 3 months), Tosca Green (4 to 11 months), Leaf Green (4 to 11 months), Purple (12 months and over), Silver & White (Adult)
Product Net Weight	65g

Maintenance and Storage

1. After each use, turn off the power and allow the device to cool before cleaning.
2. Clean the product with a dry, soft cloth. Do not use water, detergent, alcohol, or any other liquid as it may cause damage.
3. If the attachment slot accumulates dust, it may affect the spinning speed. Clean the area using a dry cloth or cotton swab.
4. After cleaning, place the device back into its storage case. Store it in a cool, dry area, away from dust, humidity, and heat sources.
5. Keep the device out of the reach of children.
6. If the device will not be used for an extended period, remove the batteries.

Warranty

Products that you buy directly from our **Porodo** website or shop come with a 24-month warranty.

When you buy **Porodo** products from any of our approved sellers, you only get a 12-month warranty. If you want to extend this warranty, go to our website at porodo.net/warranty and fill out the form with your information. Don't forget to upload a picture of the product too. After we've checked and accepted your request, we'll send you an email to confirm that your product's warranty has been extended.

For more info, please check:
porodo.net/warranty

Contact Us

If you have any questions about this Privacy Policy, please contact us at:

info@porodo.net

Website: **porodo.net**

Service Support: **support@porodo.net**

Instagram: **porodo**