

PORODO
LIFESTYLE




Porodo Lifestyle
Steam Press Iron

SKU: PD-LFST039-BK

Table of Contents

Important Safeguards	2
Product Overview	3
Component Description	4
Instructions for Use	6
[A] Initial Setup	6
[B] Steam Press Ironing Guide	6
[C] Steam Burst Function	7
Tips for Steam Pressing	8
[A] Pressing Shirts and Blouses	8
[B] Pressing Pants	8
[C] Other Techniques	8
Specifications	9
Auto Shut-Off	9
Cleaning and Maintenance	10
Storage Guide	10
Troubleshooting	10
Warranty	11
Contact Us	11

Important Safeguards

 **Warning:** To reduce the risk of fire, electric shock, or injury, please follow these essential safety precautions when using this electrical appliance.

1. Read All Instructions Before Using Your Steam Press.
2. Do not leave the Steam Press unattended while it is plugged in or in use.
3. This unit is not a toy. Close supervision is required when using the unit near children, pets, or plants.
4. The unit produces hot, pressurized steam, and caution must be exercised to prevent burns or injuries.
5. Always unplug the power cord when the unit is not in use.
6. Do not use this unit if the power cord or outlet is damaged. Do not operate the unit if it is malfunctioning, has been dropped, is damaged, or has been exposed to outdoor conditions. In such cases, send the unit to an authorized service technician for repair.
7. This unit is an electrical appliance. Do not submerge it in water.
8. Do not use the power cord as a handle, or allow it to be pinched in doors.
9. Avoid pulling or stretching the cord around sharp edges.
10. Keep the cord away from heated surfaces.
11. Do not use this unit with extension cords or outlets that lack sufficient current capacity.
12. A three-prong outlet or a properly grounded adapter is necessary when using the Steam Press.
13. To unplug the Digital Fabric Steam Press, firmly grasp the plug and pull it smoothly from the outlet.
14. Do not attempt to unplug the unit by pulling or tugging on the cord.
15. Exercise caution when operating the unit, as burns may result from contact with hot metal parts or from close exposure to steam.
16. Do not handle or use this unit with wet hands or without wearing shoes.
17. To prevent falls and other injuries, ensure floors are dry and stand away from damp areas when using the steam press.
18. The Digital Fabric Steam Press is intended for use only with recommended accessories.

- 19.** Using unapproved accessories may result in injury or damage to the unit.
- 20.** During use, surfaces may become hot. To avoid injury, do not touch the pressing plate or any other hot surface.
- 21.** Do not place hands or arms between the pressing plate and ironing board while the unit is in operation.
- 22.** When filling your Digital Fabric Steam Press with distilled water, do not fill below half of the container's capacity.
- 23.** Before adding water to the unit, always follow these steps:
- * Turn the appliance off.
 - * Unplug the power cord.
- 24.** Failure to follow these steps may lead to electrical shock or injury.
- 25.** Use only water in this unit. Adding other chemicals may damage the unit and cause injury.
- 26.** Do not operate the steam burst function if the steam openings are obstructed. If this occurs, turn off and unplug the unit.
- 27.** Store your Steam Press in a cool, dry place. Always allow the unit to cool completely before storing it.
- 28.** Please retain these instructions for future references.
- 29.** This device is for household use only.

Product Overview



12



13



1. Top cover	8. Water Tank
2. Control Interface	9. Cord Storage Compartment
3. Handle	10. Locking Knob
4. Pressing Plate Cover	11. LCD Screen
5. Ironing Board	12. Spray Bottle
6. Pressing Plate	13. Pressing Cushion
7. Pressing Machine Base	

Component Description



- 1.** Use the handle (3) to safely lift and lower the pressing plate and to carry the unit.
- 2.** Press the handle (3) down to generate a strong steam injection.
- 3.** Fill the tank (8) with distilled water to ensure the unit functions properly. Ensure water is present in the tank for the steam burst function to operate correctly.
- 4.** Place fabric on the ironing board (5), the padded surface designed for pressing. Remove and wash the fabric cover as needed.
- 5.** The pressing plate (6), a temperature-controlled, Teflon-coated surface, heats and presses the fabric.
- 6.** Use the pressing plate cover (4) to protect the pressing plate.
- 7.** Flip the on/off switch to activate or deactivate the unit.
- 8.** Turn the locking knob (10) to secure the pressing plate and ironing board together, allowing for easy carrying and storage of the unit.
- 9.** Store the power cord in the cord storage compartment for convenient and accessible storage.
- 10.** Connect the power wire to a rated voltage outlet.
- 11.** Check the steam (C) indicator light is turned on to confirm when the steam is ready for ironing functions on wool, cotton, or linen.
- 12.** Turn on the voice switching (B) to activate the voice prompt function.
- 13.** Use the on/off switch (A) to control the power of the unit.
- 14.** Press the function keys (D) to select settings for five different materials.
- 15.** Monitor the water level indicator (H) light to know when the water level is low.
- 16.** Check the steam indicator (G) to ensure steam is off.
- 17.** Observe the steam capacity indicator (G) light to verify steam levels for wool, cotton, or linen functions.
- 18.** Check the temperature indicator (E) light to monitor real-time temperature.
- 19.** Use a spray bottle to moisten fabrics before pressing, making the pressing process easier and more effective in certain situations.
- 20.** The pressing cushion is a fabric-covered pad used for pressing gathered or contoured areas, such as sleeves, darts, or yokes.

Instructions for Use

[A] Initial Setup

1. Place the Steam Press on a flat surface or position it on the matching stand. Turn the screw lock counterclockwise to secure the steam press to the stand.


Note: To adjust the height of the stand, remove the Steam Press from the stand.



2. Gently press down the handle and turn the button to the unlock position.

3. Lift the pressing plate using the handle. It will remain in the lifted position automatically.

4. The water tank is removable. Draw out the water tank before operating the steam press, fill it with water, and insert it back into the machine.

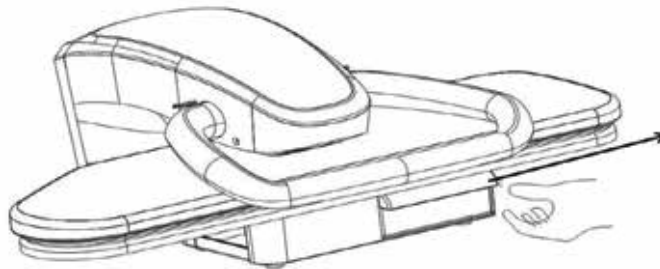

[B] Steam Press Ironing Guide

1. With the pressing plate lifted, plug the power cord into an electrical outlet and set the on/off switch to the "On" position.

2. Turn on the ON/OFF power switch on the LCD panel and follow the voice prompts from your steam press.

3. Identify the type of fabric you will be pressing and select the corresponding ironing function.

4. Start with the most delicate fabrics, such as nylon and silk, as higher heat levels may damage them.

5. Touch the corresponding function key for the material. Press the "Steam" key to adjust the steam power.
 6. The pressing indicator light will flash around the temperature display while the pressing plate is heating.
 7. Allow a few minutes for the heating time to reach the selected temperature.
 8. The real-time temperature will display on the screen.
 9. Once the pressing plate has heated, the pressing indicator light will stop flashing, indicating that you are ready to begin pressing.
 10. Lay the fabric flat on the ironing board. The machine will remind you to open the handle within 15 seconds after you close the pressing plate.
 11. When pressing wool, you may choose to use a burst of steam. This function becomes available once the steam burst ready indicator light illuminates.
- Note:** Do not activate the burst of steam with the unit completely closed, as this may damage the unit.
12. For best results, hold the pressing plate open approximately 75 mm above the ironing board before pressing the steam burst button.
- Note:** For safety reasons, do not hold the pressing plate open more than 75 mm when using the steam burst function.
13. To press the fabric, gently lower the pressing plate onto it and the ironing board.
 14. Hold the plate in place for 8 to 10 seconds, then lift it up.
 15. Repeat this process until you achieve the desired crease and smoothness.
 16. Once you complete your pressing tasks, immediately set the on/off switch to the "Off" position.



[C] Steam Burst Function

1. Hold the pressing plate approximately 75 mm above the ironing board.
2. Press the steam burst button to release a burst of steam onto the fabric.
3. Lower the pressing plate onto the fabric, then raise it again.
4. Repeat steps 1 to 3 until the fabric is smooth and wrinkle-free.

Tips for Steam Pressing

[A] Pressing Shirts and Blouses

1. Place the shoulder yoke on the ironing board first and press it.
2. Position the sleeves on the ironing board with the fold parallel to the long seam and press.
3. Place the cuffs at the end of the ironing board and press them.
4. Position the bottom of the shirt behind the ironing board. Begin by pressing the side with the pocket, pulling the shirt towards you as you press each section.
5. Finish by pressing the collar of the shirt.

[B] Pressing Pants

1. Place the pressing cushion under the waistband and press, repositioning the waistband until you fully press it.
2. To press the inseam, place the pressing cushion under the area to be pressed.
3. Position the pleated area on the ironing board. Carefully fold the pleats and press.
4. Place the embroidery face down on the ironing board to reduce wear and prevent damage to delicate areas.

[C] Other Techniques

1. Place the pressing cushion between the fabric and the pressing plate to protect delicate fabrics.
2. For buttons and zippers, take special care if your garment has older types that may melt. To prevent damage, position the garment face down and cover it with the pressing cushion before pressing.
3. Use a spray bottle to lightly mist fabrics. This technique can help remove exceptionally stubborn wrinkles.
4. Place a damp cloth over the fabric before pressing to assist with stubborn wrinkles or heavy-weight fabrics.
5. To press large pieces of fabric, lay the entire piece on the ironing board. Pull the fabric towards you, lower the pressing plate, and press the fabric in sections until you complete the task.

Specifications

Rated Voltage	220-240V
Rated Frequency	50/60Hz
Rated Power	2200W
Main Frame	Aluminum
Power Cord	UK 3pin Plug
Steam Output	120g/min
Steam Duration	1 minute
Water Tank Capacity	850ml
Temperature Range	80-220°C
Pressing Board Length	32"
Stand Gross Weight	7.2kg
Stand Net Weight	6kg
Stand Dimension	39×16.5×99.5cm

Auto Shut-Off

1. The auto shut-off feature of the Digital Fabric Steam Press includes both an auto shut-off and an auto wake-up function.
 2. The auto shut-off feature deactivates electrical power to the heater when you leave the pressing plate in a closed position against the ironing board for more than 10 seconds.
 3. The deactivation of the heater is indicated by a beeping sound. You can restore heater functionality by lifting the pressing plate.
 4. The power to the heater will also cut off if you leave the pressing plate in the lifted position without use for approximately 15 minutes, which will be signaled by a beeping sound for about 22 seconds.
 5. Once the beeping stops, you must press the temperature control buttons to restore the heating capability of the unit.
- Important:** The power to the unit is NOT completely cut off upon auto shut-off activation. The power remains on, and the power indicator light will stay illuminated until you set the on/off switch to the "Off" position.

Cleaning and Maintenance

1. Fill the tank with water following the procedure outlined on page 6 of this manual.
2. Place the pressing cushion in the center of the ironing board.
3. Position a clean towel over the pressing cushion and ironing board.
4. Set the temperature control buttons to the highest setting (linen).
5. Press the steam burst button six times.
6. Allow the pressing plate to cool.
7. Clean the pressing plate with a damp cloth. Avoid using abrasive materials, as these may damage the pressing plate.
8. The fabric cover of the ironing board is removable for cleaning. Hand wash it using only mild detergent.

Storage Guide

1. Once you complete the pressing, immediately turn off the unit and unplug the power cord from the electrical outlet.
2. Allow the unit to cool completely for at least 30 minutes.
3. Lower the pressing plate and turn the lock button to the "lock" position.
4. Wrap the power cord and place it in the cord storage compartment.
5. Store all accessories safely, preferably near the Digital Fabric Steam Press.
6. Keep the Digital Fabric Steam Press in a cool, dry place.

Troubleshooting

Problem	Possible Cause	Solution
The unit fails to heat up and produce steam. The power indicator light does not illuminate.	The unit is not plugged in.	Plug the unit into an electrical outlet and ensure it is powered on.
	The unit is powered off, or no function key has been pressed, or operation is occurring without following the voice alert.	Turn on the power switch. Press the on/off key on the control panel and select the appropriate function key for different materials. Follow the voice prompts for first-time use.
You notice smoking during initial use.	A small amount of smoke may emerge due to the presence of anti-rust oil inside the ironing board during initial heating.	It is normal for some initial smoke to occur during first-time use.

The unit does not produce steam.	Press the correct function key for the fabric you are using.	When steaming, choose only one of the function keys for wool, cotton, or linen.
	The water tank contains no water or insufficient water.	Refill the water tank with fresh water when the signal indicates two drops of water [the (H) light will turn on].
Drops of water spray out when pressing the steam button.	You need to keep ironing continuously.	Press the steam button every two seconds.
You observe white deposit around the holes of the ironing board.	Some chemicals may deposit at the exit of the holes.	Clean the ironing board with a wet cloth.

Warranty

Products that you buy directly from our **Porodo** website or shop come with a 24-month warranty.

When you buy **Porodo** products from any of our approved sellers, you only get a 12-month warranty. If you want to extend this warranty, go to our website at **porodo.net/warranty** and fill out the form with your information. Don't forget to upload a picture of the product too. After we've checked and accepted your request, we'll send you an email to confirm that your product's warranty has been extended.

For more info, please check:
porodo.net/warranty

Contact Us

If you have any questions about this Privacy Policy, please contact us at:

info@porodo.net

Website: **porodo.net**

Service Support: **support@porodo.net**

Instagram: **[porodo](https://www.instagram.com/porodo)**