

**PORODO**  
LIFESTYLE



**Porodo Lifestyle**  
**Automatic Hair Curler**

SKU: PD-LFST174-BK

# **Table of Contents**

Features	2
Warning	2
Product Components	4
Charging Guide	4
Instructions for Use	5
Cleaning Instructions	7
Specifications	7
Disposal	8
Warranty	8
Contact Us	8

## Features

- 1.** Achieve flawless, long-lasting curls with precision using the dual barrel design, which allows for customizable left and right curl directions to effortlessly style your hair.
- 2.** Personalize your styling experience by adjusting both the temperature and timer settings, ensuring consistently perfect curls tailored to your desired look.
- 3.** Simply insert a section of your hair into the curler and let the device do the work, delivering precise, well-formed curls with minimal effort.
- 4.** Enjoy the freedom of styling without being tethered to a power source, with the cordless design offering flexibility and ease of use anywhere.
- 5.** The innovative dual barrel system ensures even heat distribution for smooth, uniform curls, resulting in a polished, salon-quality finish.
- 6.** With up to 30 minutes of styling time per charge, this curler is ideal for quick touch-ups or full styling sessions while on the go.

## Warning

The Beauty Hair Curler should be used exclusively in accordance with the following instructions:

- 1.** Do not use the product near water or in environments where it can become wet.
- 2.** Never submerge the curler in water or any other liquid.
- 3.** This appliance is not intended for use by individuals (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have received appropriate supervision or instruction regarding the use of the device by a person responsible for their safety.
- 4.** Children should be supervised at all times to prevent them from playing with the appliance.

- 5.** The Beauty Hair Curler is not a toy and should be used under careful adult supervision.
- 6.** Always inspect the Beauty Hair Curler and its adapter for any signs of damage before use. Do not use if damaged or if the curler has been dropped.
- 7.** The unit contains no user-serviceable parts. For repairs, please contact the manufacturer or an authorized service center. Unauthorized repairs may lead to accidents, injury, or malfunction.
- 8.** Never leave the Beauty Hair Curler on a heat-sensitive surface while in use.
- 9.** To prevent suffocation, keep all plastic bags out of the reach of children and pets.
- 10.** Always use the charging cable provided with the curler to prevent damage.
- 11.** Do not use this product with flammable or explosive accessories, as this may cause fire or damage.
- 12.** While the curler is charging, never leave it unattended. Be sure to remove the charger and switch off the curler once it is fully charged.
- 13.** Charging should only be performed using a compatible power supply that meets the product's specifications.
- 14.** Be cautious to prevent contact between hot surfaces and your eyes, ears, face, or neck.
- 15.** The curler should be used exclusively on fully dry hair.
- 16.** Do not insert metal objects into the product to prevent the risk of electric shock.
- 17.** Avoid wrapping the charging cable around the curler, as this may cause damage to the cable.
- 18.** Allow the curler to cool completely before storing it.
- 19.** When using the product for the first time, a slight smell may occur due to the high temperature of the oil in the rotating mechanism. This is normal and will dissipate over time.
- 20.** If left unused, the Beauty Hair Curler will automatically turn off after 5 minutes of inactivity.

## Product components



- A.** Comb
- B.** Storage bag
- C.** Two hair clips
- D.** Beauty hair curler unit
- E.** Curling chamber
- F.** Heater
- G.** Start
- H.** LED display
- I.** +/- Adjustment
- J.** Power (on/off) & Menu
- K.** Micro USB input
- L.** USB Input
- M.** USB Output
- N.** Hair Section Guide Tool

## Charging Guide

- 1.** For optimal performance, ensure that the product is fully charged before use.
- 2.** When preparing to store the product for an extended period, charge it fully

and ensure it is recharged every three months to maintain the product in optimal condition.

**3.** To charge, connect the supplied charging cable to the base of the curler and plug the USB end into a power outlet that meets the product's specified requirements.

**4.** While charging, the LED display will show a flashing battery indicator.

**5.** Once fully charged, the battery indicator will stop flashing.

**Important:** Do not use the product while it is charging.

## Instructions for Use

**1.** Before use, make sure your hair is completely dry.

**2.** Press and hold the Power On/Off button for 2 seconds to turn on the appliance. You will hear a "beep," and the LED display will light up.


**3.** To turn off the curler, press and hold the Power On/Off button for 2 seconds. If the curler is left on and not used for 5 minutes, it will automatically power off.

**4.** To scroll through the settings, press the Menu button briefly.

**5.** The setting you are currently using will flash on the display, indicating that you can adjust it.

**6.** When the display flashes, use the +/- Adjustment button to scroll through the available options. The selected option will determine the tightness of the curl or the direction in which the curl is formed.

**7.** From the main screen, press the Menu button once. The temperature setting will begin to flash. Choose between the following options: 150°C / 300°F, 160°C / 320°F, 170°C / 340°F, 180°C / 360°F, 190°C / 380°F, and 200°C / 390°F.

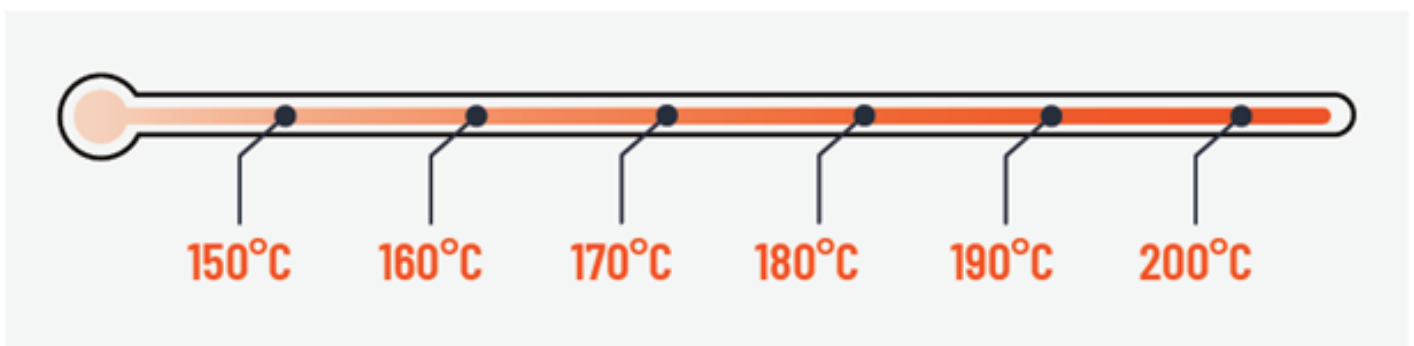

**Note:** You can switch between Celsius (°C) and Fahrenheit (°F) later in the settings.

**8.** Press the Menu button again, and the direction will begin to flash. Use the Adjustment button to select the curl direction: L for left and R for right.

**9.** Press the Menu button again to choose between degrees Celsius (°C) or Fahrenheit (°F) for the temperature display.

**10.** Press the Menu button again to set the curling time in seconds. Choose from the following options: 8s, 10s, 12s, 14s, 16s, and 18s.



**11.** After 5 seconds of inactivity, the curler will begin to heat to the selected temperature. The heating symbol will appear, and you will hear a “beep-beep” once the curler reaches the desired temperature.

**12.** Thoroughly comb through all sections of hair to be curled, ensuring there are no tangles.

**13.** Divide your hair into sections no wider than 2cm. For thick or long hair, reduce the section size. Use the Hair Selector Tool to assist with sectioning.

**14.** Lay each section of hair along the side opening of the curling chamber. Ensure only the section to be curled is near the chamber.

**15.** Press and hold the Start button. The curler will automatically draw the hair into the curling chamber.

**16.** Release the Start button when the curler emits a “beep.” Hold the curler in place, ensuring that the hair stays inside the chamber. The curler will beep according to the duration set. For example, if set for 8 seconds, it will beep 8 times.

**17.** Once the curling process is complete and the beeping stops, gently remove the curler from your hair. Ensure the curler is not in charging mode, turned off, and cool before cleaning.

## Cleaning Instructions

- 1.** Do not immerse the Beauty Hair Curler in water or any other liquid.
- 2.** Wipe down the curler with a damp, soft cloth. This product is not waterproof. Be sure no liquid enters the main unit, as this could cause a short circuit.
- 3.** After each use, ensure that any hair left in the chamber is removed once the curler has cooled.
- 4.** Avoid using sharp objects or corrosive cleaners when cleaning the curler.

## Specifications

Battery Capacity	3000mAh
Charging Interface	Type-C
Standby Time	60 Minutes
Working Time	30 Minutes (Continuous)
Recharge Time	4H
Accessories	Type-C Charging Cable, Pouch Bag, Clip, Comb
Model Number	LFS174



## Disposal

This product must not be disposed of as unsorted household waste. It is important to separate such waste for proper treatment and recycling, in compliance with local waste management regulations.

## Warranty

Products that you buy directly from our **Porodo** website or shop come with a 24-month warranty.

When you buy **Porodo** products from any of our approved sellers, you only get a 12-month warranty. If you want to extend this warranty, go to our website at **[porodo.net/warranty](https://porodo.net/warranty)** and fill out the form with your information. Don't forget to upload a picture of the product too. After we've checked and accepted your request, we'll send you an email to confirm that your product's warranty has been extended.

For more info, please check:  
**[porodo.net/warranty](https://porodo.net/warranty)**

## Contact Us

If you have any questions about this Privacy Policy, please contact us at:

**[info@porodo.net](mailto:info@porodo.net)**

Website: **[porodo.net](https://porodo.net)**

Service Support: **[support@porodo.net](mailto:support@porodo.net)**

Instagram: **[porodo](https://www.instagram.com/porodo)**