

PORODO
LIFESTYLE



Porodo Lifestyle
**RETRO Desk Lamp with White
Noise and Bluetooth Speaker**


SKU: PD-RDBTSCP-BKBW

Table of Contents


Package Contents	2
Schematic View	2
Specifications	3
Precautions	3
Instructions for Use	4
Installation Method	4
Lighting Settings	5
Clock Settings	5
Sleep Settings	5
Alarm Clock Settings	5
Snooze Settings	6
White Noise Settings	6
Bluetooth Settings	6
Backlight Brightness Adjustment	7
Charging	7
Warranty	8
Contact Us	8

Before installing and using the product, please carefully read this User Manual to guarantee correct usage and keep it secure for future reference.


Package Contents

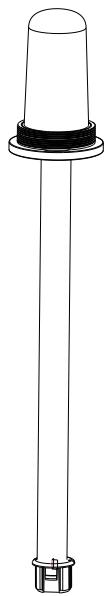


Safety Cover

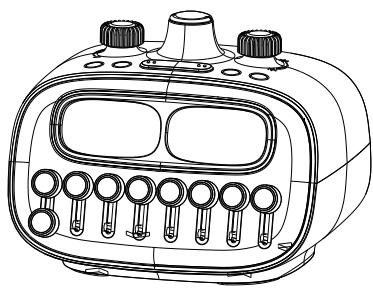


Stand

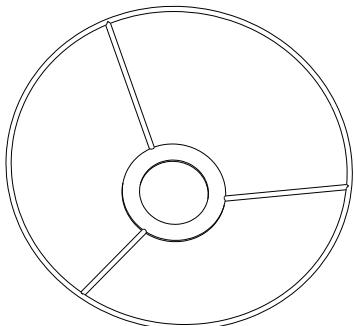

Lampshade Support

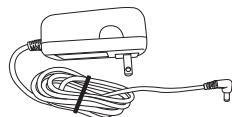


Power Adapter

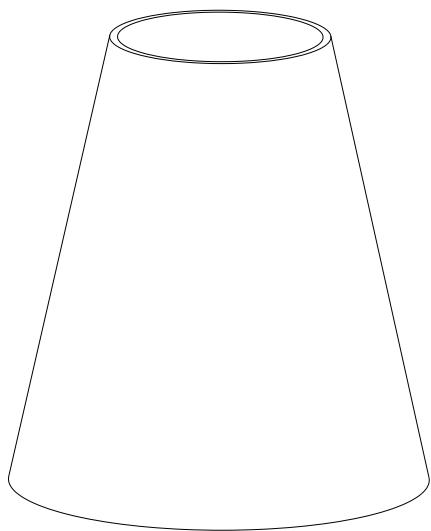

Lampshade

Schematic View

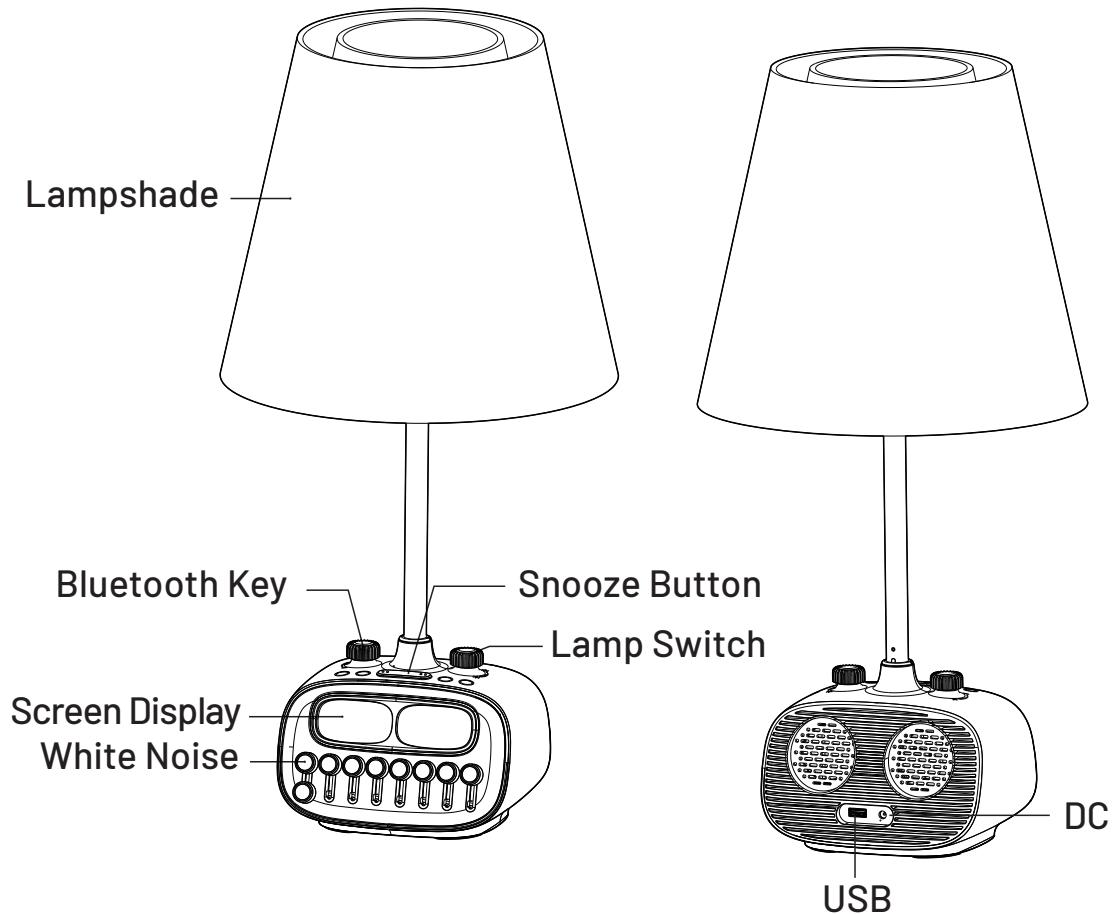

Specifications

LED Type	SMD2835x18
Luminous Flux	250-400LM
Color Temperature	3000K±280K
Color rendering index	>80Ra
Bluetooth Version	5.3
Bluetooth Name	BG1
Speaker Output	x2 5W
USB Output	5V/2.1A
Input Power	12V/2A DC Adapter
Power Plug	UK 3-Pin Plug
Lamp Size	170×135.3×591mm
Product Material	ABS + Metal

Precautions

1. Use a soft cotton cloth for surface cleaning of the product. Avoid using any corrosive solvents that could damage the finish.
2. The light source within the product is irreplaceable. Discontinue use when it shows signs of wear out.
3. If a malfunction occurs, do not attempt to disassemble the product yourself, as this could cause further damage.

K Instructions for Use

Plug in the power adapter for the first time to see the display show "00:00".


Notices:

1. Always use the original power supply provided with the product.
2. Avoid using cable extensions or splitters as they may cause the product to function abnormally.
3. Do not use an adapter that does not support direct 12V output as required by this product.
4. If the lights are flickering or sound is distorted, replace the power supply promptly to avoid damage.
5. Ensure that the adapter's metal points do not contact other metals, as this may lead to product damage and other hazards.
6. The external cable or cord of this device cannot be replaced. If damaged, the device should be discarded.
7. Do not place the device on slopes greater than 6 degrees to ensure stability.

K Installation Method




1. Begin by inserting the light pole into the base of the lamp.

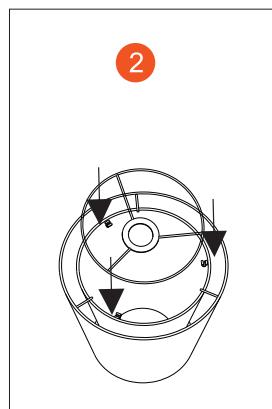


2. Place the lampshade bracket on top of the base.



3. Carefully position the lampshade onto the bracket.

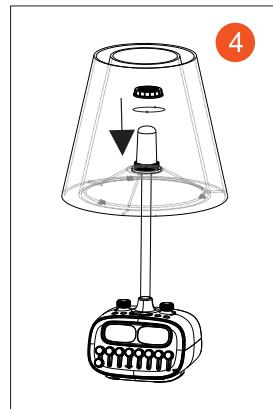

4. Tighten the fixing cover clockwise to secure the lampshade in place.

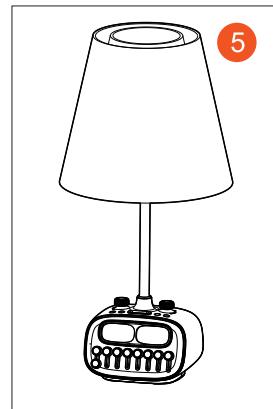

5. The assembly is now complete, and your lamp is ready for use.

Lighting Settings

1. Short-press the  button.
2. Upon powering on, the default brightness level is 15 from a total of 0 to 25 brightness level. The lamp also features a memory function that retains the last used brightness setting even after being turned off.
3. To adjust the brightness, turn the  button clockwise to increase brightness or counterclockwise to decrease it.

Clock Settings

1. Long press the clock button  for 2 seconds to enter the settings mode.
2. Short press the clock button  to cycle through hour and minute settings. Long press the plus (+) or minus (-) keys to quickly adjust the values.
3. After setting the hour, press the  again to proceed to the minute settings. To exit, set the time and then select 'exit'.
4. Short press the plus (+) key to toggle between 12-hour and 24-hour formats.

Sleep Settings

1. Briefly press the  to enter the sleep settings. Choose from preset durations: 30, 60, or 90 minutes.
2. After selecting the desired sleep time, press and hold the sleep button for 1.5 seconds to activate sleep mode. The sleep icon will illuminate, indicating that sleep mode is active.
3. If there is no interaction for 10 seconds after setting the sleep time, the device will automatically enter sleep mode, and the  icon will light up.

Alarm Clock Settings

1. Enable/Disable Alarm: Briefly press the alarm button  to turn the alarm clock   on or off.
2. Set Alarm Time: Hold the alarm button  for 2 seconds to set the alarm time and display Alarm 1(AL-1).
3. Adjust Time: Briefly press the alarm button  to select the hour or minute.

For Alarm 2 (AL-2), short press the plus (+) or minus (-) button to make incremental adjustments, or hold them to adjust quickly.

4. Save Settings: During the setting process, press and hold the alarm button  for 2 seconds to exit and save the changes.

Snooze Settings

1. Enable Snooze: Briefly press "SNOOZE" to activate the snooze function. For a long press, use "SNOOZE" to stop the alarm. Press any other button briefly to stop the alarm without activating snooze.

2. Canceling Snooze: While in snooze mode, press the "SNOOZE" button again to cancel snooze and stop the alarm. The alarm will repeat after 10 minutes if not canceled.

3. Automatic Stop: If no buttons are pressed, the alarm will automatically stop if it has been ringing without any operation for 10 minutes.

White Noise Settings

1. Long press the  for 2 seconds to turn on the white noise feature.

2. Choose from 8 types of natural sounds. Adjust the volume by pressing the volume buttons to increase or decrease the level.

3. Short press the  to pause or resume playback (Pause/Play).

4. Rotate the  clockwise to increase the volume or counterclockwise to decrease it.

Note: Volume levels range from 0 to 3, with an audible prompt when reaching the maximum or minimum volume.



Bluetooth Settings

1. Turn on white noise and then press the  button twice in succession. The display will show "BLUE".

2. Connect to the Bluetooth device named "BG1". A tone will sound to confirm a successful connection.

Short press the  button to play or pause.

3. Rotate the  to adjust sound levels. Turning it clockwise increases volume, and counterclockwise decreases it. The maximum and minimum volume levels will be indicated by a prompt tone.

4. To manually disconnect, press and hold the "+" or "-" button for 2 seconds.


5. The device will automatically disconnect if there is no connection established within 5 minutes.

Backlight Brightness Adjustment

Quickly press the "SNOOZE" button to cycle through the backlight brightness levels of the screen. The sequence follows low brightness, medium brightness, high brightness, and then off.

Charging

This product supports a 5V/2.1A power supply.

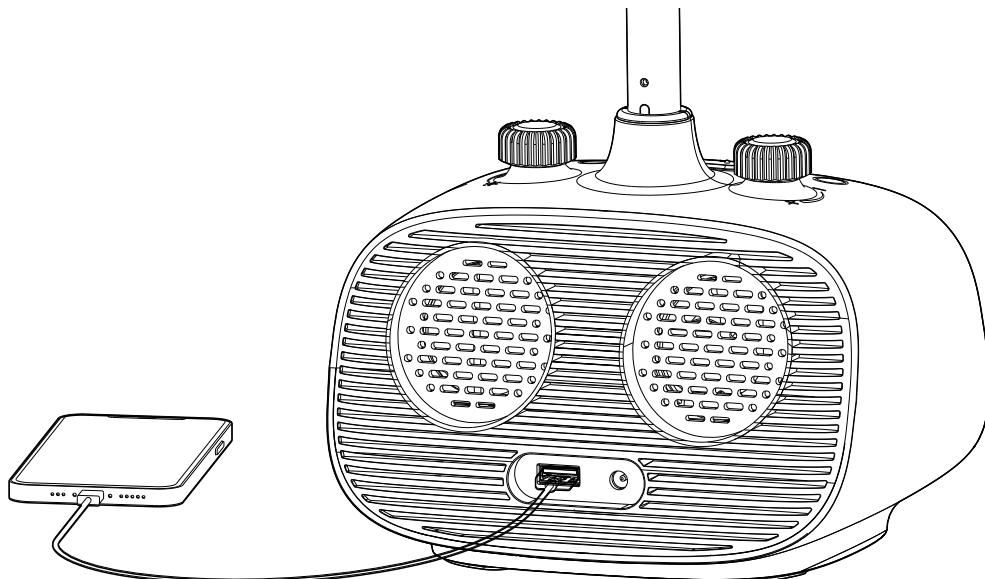

Warranty

Products that you buy directly from our **Porodo** website or shop come with a 24-month warranty.

When you buy **Porodo** products from any of our approved sellers, you only get a 12-month warranty. If you want to extend this warranty, go to our website at porodo.net/warranty and fill out the form with your information. Don't forget to upload a picture of the product too. After we've checked and accepted your request, we'll send you an email to confirm that your product's warranty has been extended.

For more info, please check:
porodo.net/warranty

Contact Us

If you have any questions about this Privacy Policy, please contact us at:

info@porodo.net

Website: **porodo.net**

Service Support: **support@porodo.net**

Instagram: **porodo**