



Porodo Soundtec

Aero Tune Open Wearable Earbuds

SKU: PD-STWLEP30

Table of Contents

 
Features	2
Schematic View	2
Specifications	3
Package Contents	4
Instructions for Use	4
Touch Sensor Instructions	4
Indicator Light Guide	5
Factory Reset Function	5
Charging case Guide	6
Safety Guidelines	6
Warranty	7
Contact Us	7

Before using the product, please carefully read this User Manual to guarantee correct usage and keep it secure for future reference.

Features

1. Features a modern Type-C port for fast and convenient charging, ensuring your earbuds are quickly ready to use.
2. Integrated touch-sensitive controls allow for effortless management of music, calls, and volume directly from the earbuds.
3. Equipped with Bluetooth 5.4 technology for enhanced connectivity, faster pairing, and improved range and stability.
4. Offers up to 8 hours of continuous playtime on a single charge, perfect for extended listening sessions.
5. Delivers high-fidelity sound quality for an immersive audio experience with every track.
6. Incorporates a high-quality microphone for clear voice calls and voice assistant interactions.
7. Engineered to produce deep and rich bass tones, enhancing the overall sound profile for bass-heavy music genres.


Schematic View

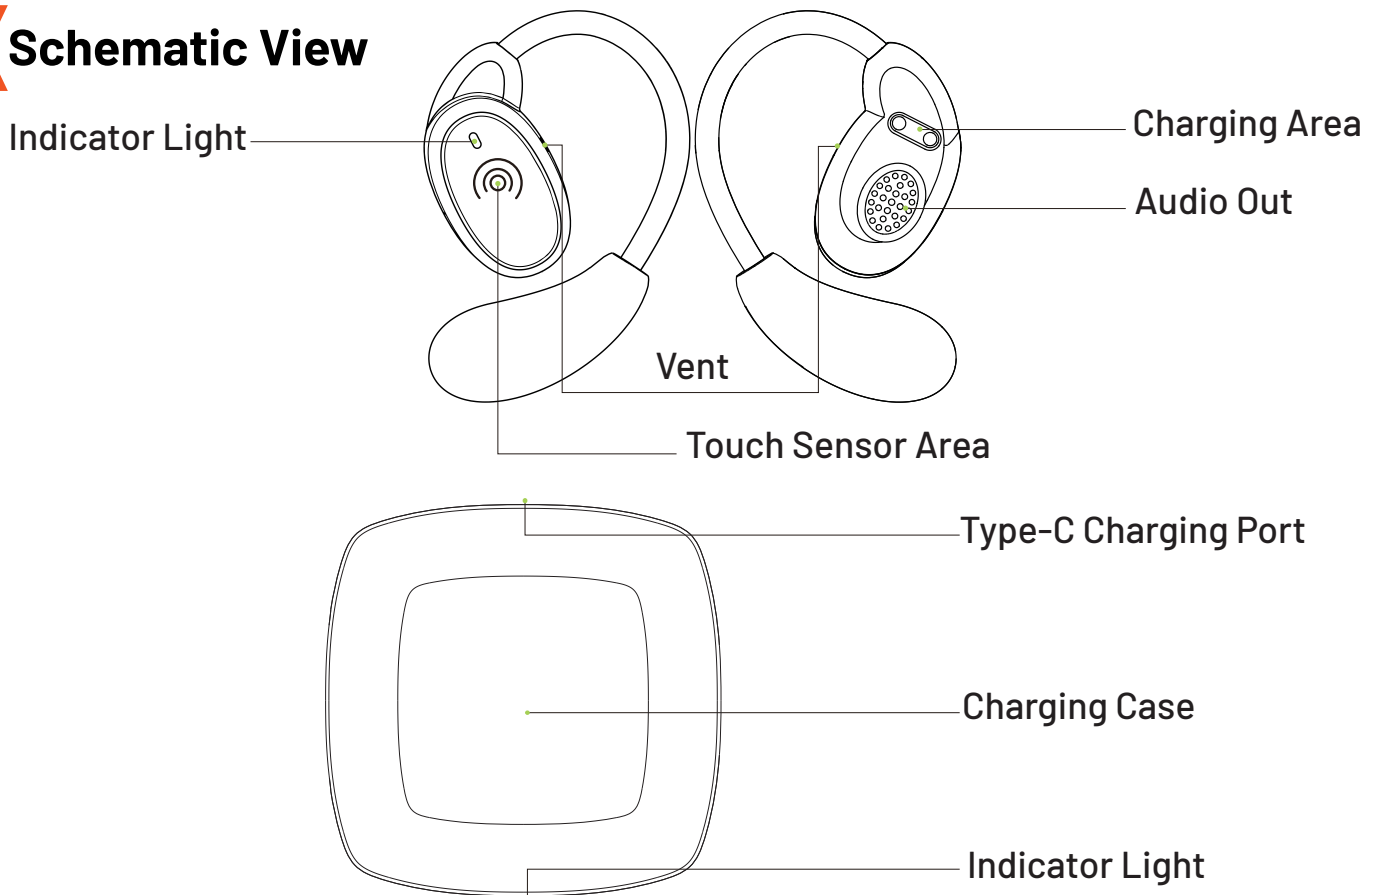


Specifications

Battery Capacity	400mAh (Charging Case), 50mAh (Earbuds)
Earbuds Voltage/Current	3.7V/40mA
Charging Case Voltage/Current	5V/1A
Recharge Time	1.5h
Chipset	JL 7003D4
Bluetooth	V5.4
Bluetooth Name	AERO TUNE
Transmission Distance	Up to 10m
Frequency	2.4GHz ISM
Playtime	Up to 8h at 50 % Volume
Call Time	Up to 6h
Charging Time	1.5h
Charging Case	3 Times Recharge
Charging Port	Type-C
Product operating temperature	-10°C to 45°C
Product storage temperature	-20°C to 65°C
Product impedance	16Ω±15 %
Sensitivity	118dB±1@3kHz
Earphone Size	49.48×33.6×13.5mm
Weight	6.8g (without storage box)
Transmission range	2480-2402MHz
Supported protocol	HSP/HFP/A2DP/AVRCP

 
Package Contents

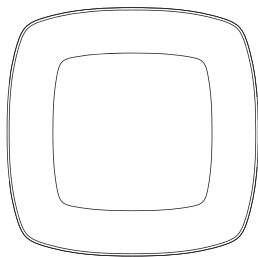

Charging Case

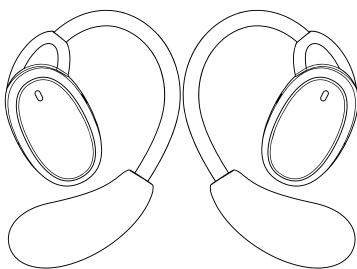 

Earphone

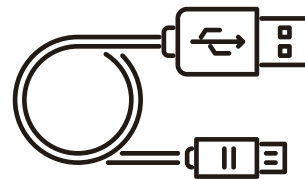 

Charging Cable

Instructions for Use

A. Power On

1. Open the charging case, and the earphones will power on automatically.
2. Alternatively, touch and hold for 3 seconds to manually power on.

 
B. Bluetooth Connectivity

1. Activate Bluetooth on your device.
2. Search for and select the Bluetooth device "AERO TUNE".
3. For the initial setup, manually connect to the device "AERO TUNE".


C. Power Off

4. Place the earphones back into the charging case to turn them off.
5. To manually power off, press and hold for 6 seconds.

Note: If left unconnected for 3 minutes, the earphones will automatically power off.

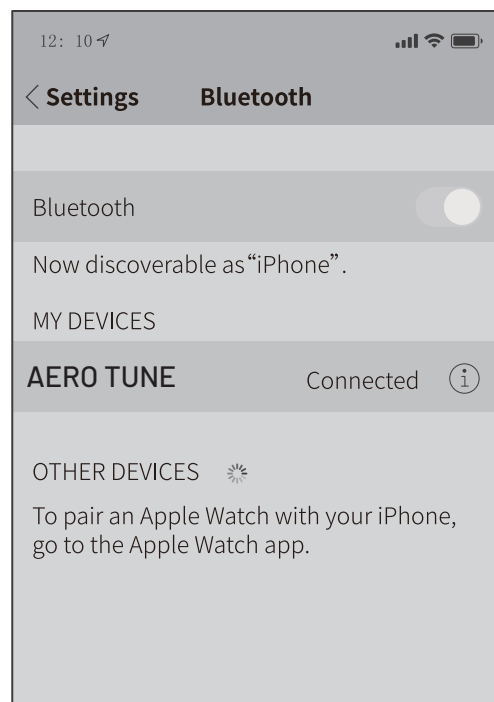


Touch Sensor Instructions

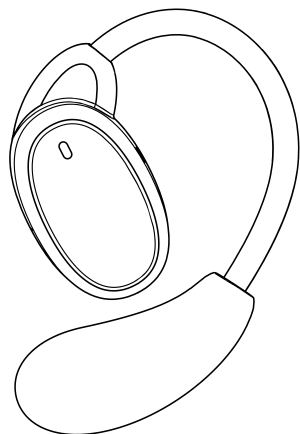 

L

 - Call Hang Up/Answer: Single tap to either answer an incoming call or to hang up an ongoing call.
- Call Rejection: Press and hold for 1 second to reject an incoming call.
- Play/Pause Music: Single tap to play or pause the music.
- Play Previous Song: Double tap to skip to the previous song.
- Voice Assistant Activation: Press and hold for 2 seconds to activate the voice assistant feature.

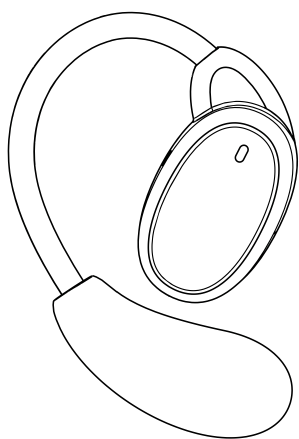

R

Call/Hang Up or Answer: Single tap to either answer an incoming call or hang up an ongoing call.

Call Rejection: Press and hold for 1 second to reject an incoming call.

Play/Pause Music: Single tap to toggle between play and pause.

Play Next Song: Double tap to skip to the next song.

Voice Assistant: Press and hold for 2 seconds to activate the voice assistant.


Note: Both earbuds can be independently connected to the mobile phone, allowing for seamless switching between them, and they reconnect automatically within seconds after powering on.

Indicator Light Guide

Device Status	Tone	Description
Powered On	"Ding dong"	Green light flashes
Powered Off	"Du"	Orange light flashes once
Connected	"Dong"	Green light flashes
Disconnected	"Dong"	Orange / Green lights flashes alternately
Low Battery	"Du" "Du"	-

Factory Reset Function

 1. Place the earphone into the charging case and leave the case open.
2. Press and hold the touch area on either the left or right earphone for 8 seconds.
3. An orange light will flash for 3 seconds indicating that the factory reset has been initiated.

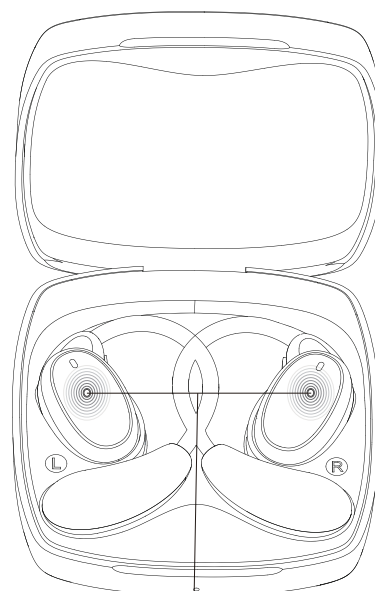

Press and hold the left or right earphone's touch sensor for 8seconds.

Charging case Guide

Device Status	Indicator Status
Charging	Red light remains on; when fully charged, the red light turns off.
Insert the earbuds into the case to charge.	Left Earbud: Blue light flashes while charging and turns off when fully charged. Right Earbud: Green light flashes while charging and turns off when fully charged.
Put the earbuds into the case.	Left Earbud: Blue light flashes once when put in or taken out of the charging case. Right Earbud: Green light flashes once when put in or taken out of the charging case.
Open or close the charging case.	When the earphones are turned on, the charging case displays the current battery level for 3 seconds.
Observe the battery indicator.	Red light flashes when the battery is below 20 %; green light remains on when above 20 % level.

Safety Guidelines

1. Please adhere strictly to the instructions provided in this manual.
2. Do not disassemble or modify the device for any reason, as this could lead to the earphones malfunctioning or becoming a fire hazard.
3. Avoid exposing the product to liquids; do not submerge or rinse it in water.
4. Use only a charger with the specified current and voltage (5V/1A) to charge the headset.
5. Using an incompatible charger can damage the battery and the earphone. Always use the designated charging cable provided.
6. Store and operate this product within normal temperature ranges. Avoid environments where the temperature falls below 0°C or exceeds 45°C.
7. Ensure the openings of the headset, such as the charging port and microphone, are not obstructed.

8. Please avoid using headphones at excessive volume or for prolonged periods to prevent dizziness and hearing damage.
9. Avoid using the device during thunderstorm conditions, as this may cause abnormal operation and disrupt the signal.

Warranty

Products that you buy directly from our **Porodo** website or shop come with a 24-month warranty.

When you buy **Porodo** products from any of our approved sellers, you only get a 12-month warranty. If you want to extend this warranty, go to our website at **porodo.net/warranty** and fill out the form with your information. Don't forget to upload a picture of the product too. After we've checked and accepted your request, we'll send you an email to confirm that your product's warranty has been extended.

For more info, please check:
porodo.net/warranty

Contact Us

If you have any questions about this Privacy Policy, please contact us at:
info@porodo.net

Website: **porodo.net**

Service Support: **support@porodo.net**

Instagram: **porodo**