

PORODO



Porodo
10.1" Ultra Professional Tablet

SKU: PD-TFHD10-BK

Table of Contents

| | |
|-------------------------|----|
| Package Contents | 2 |
| Charging Instructions | 2 |
| Install the Memory Card | 2 |
| Specifications | 2 |
| Instructions for Use | 3 |
| [A] Power On and Off | 3 |
| [B] Enable Flight Mode | 3 |
| [C] Device Layout | 3 |
| Button Instructions | 3 |
| Home Screen Description | 4 |
| Task Bar Guide | 4 |
| Indicator Light Guide | 4 |
| Connecting to Gmail | 5 |
| Connectivity | 5 |
| Browser Instructions | 6 |
| Play Store App | 7 |
| Access Media | 7 |
| [A] Gallery | 7 |
| [B] Video Playback | 7 |
| [C] Music Playback | 7 |
| Camera Function | 8 |
| Calendar | 9 |
| Clock | 9 |
| File Manager | 9 |
| Sound Recorder | 10 |
| Calculator | 10 |
| Care and Maintenance | 10 |
| Warranty | 11 |
| Contact Us | 11 |

Package Contents

1. Tablet
2. Adapter
3. USB Cable

Charging Instructions

1. Prior to the initial use of the device, it is necessary to charge the battery.
2. Utilize a travel adapter or connect the device to a PC using a USB cable to charge it.
3. The 'Battery Full' icon will appear on the device once it is fully charged and powered off.

Caution: Use only the original batteries and chargers provided. Employing unapproved chargers or cables can lead to battery explosions or damage to your device.

Install the Memory Card

To accommodate additional multimedia files when the tablet's memory is full, you will need to insert a memory card.

1. Insert the memory card with the gold contacts facing downwards.
2. Firmly push the memory card into the slot until you hear a click.

Specifications

| | |
|---------------|------------------------|
| Battery | 6000mAh/3.8V |
| Input | 5V/2A |
| Charging Port | Type-C |
| iOS | Android12 |
| CPU | T610 Octa-Core, 1.6GHz |
| RAM | 6GB |
| Storage | 128GB |
| screen Size | 10.1" |

| | |
|-------------------|-------------------------|
| Screen Resolution | 1920×1200, FHD |
| Camera | 8MP(Front), 13MP (Rear) |
| WiFi | 5 & 2.4GHz |
| Bluetooth | V5.0 |
| Audio Jack | Supported |
| SIM Card | 2* Nano SIM |

Instructions for Use

[A] Power On and Off

1. To power on your device, press and hold the power key.
2. To power off your device, press and hold the power key, then select the power off option.


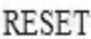


[B] Enable Flight Mode

To use only the non-network services of your device, switch to flight mode by navigating to "Settings" > "Network & Internet" > "Airplane mode" > "Turn on/off".

[C] Device Layout



Button Instruction


| Icon | Function | Description |
|---|-------------|---|
|  | Power Key | Press and hold the power button for 2 seconds to turn the device on or off. |
| | Lock | Press the power button briefly to lock the device. |
|  | Reset | Insert a pin into the reset hole to automatically restart the device. |
|  | Volume Keys | Adjust the volume using the volume buttons. |
|  | TF Card | Insert the Micro SD card while the tablet is powered off. |

Home Screen Description

The home screen consists of multiple panels. Scroll up or down through these panels to view indicator icons, widgets, application shortcuts, and other items.

Task Bar Guide

The task bar appears at the top of the screen. It displays commonly used option buttons, the battery level indicator, current time, and other status icons.

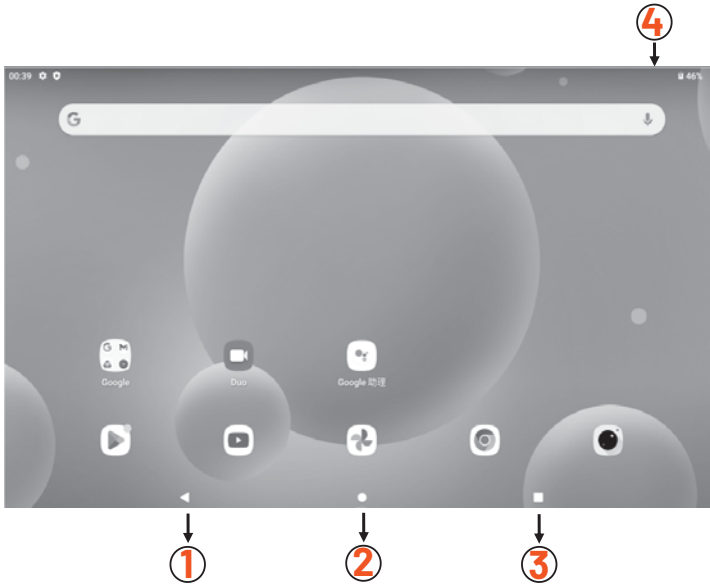

| | |
|---|--|
| 1 | Return to the previous screen. |
| 2 | Return to the home screen. |
| 3 | View the applications you recently accessed. |
| 4 | Tap the notification icon, then select the drop-down to open the notification panel. |

Indicator Light Guide

| Icon | Description | Icon | Description |
|------|---------------------------------------|------|-------------------------|
| | Indicates an active Wi-Fi connection. | | Flight mode is enabled. |
| | Data is currently being uploaded. | | Battery power level |
| | Data is currently being downloaded. | | |
| | The device is connected to a PC. | | |
| | An alarm is currently set. | | |
| | Music is being played on the device. | | |

Connecting to Gmail


You can receive new email messages from the Google Mail service directly to your inbox. To send or receive email on your device, you must first set up a Gmail account.

1. If you don't have a Google Account, tap "New" and follow the on-screen instructions to create one.
2. If you already have an account, tap "Existing", enter your email address and password, then select "Next". Once setup is complete, email messages will download to your device.

[A] Viewing Emails

1. When you open your email account, the number of unread messages appears in the title bar, and unread messages are displayed in bold.
2. To view an email message, tap on it.
3. To mark an email as important, tap the star icon below the date.
4. To remove the mark, tap the star icon again.

[B] Create and Send an Email

1. Tap the Compose icon .
2. In the To field, enter the recipient's email addresses, separated by commas. To add more recipients, tap "Cc/Bcc".
3. To attach files, tap the options button in the upper-right corner and select "Attach file".
4. Enter the subject and message.
5. Tap "Send" to send the email.

Connectivity

[1] USB Connection

You can connect your device to a PC using a micro USB cable, allowing it to function as a removable disk so you can access the file directory.

[2] Wi-Fi Connection

With Wi-Fi, you can connect to the internet or other network devices wherever an access point or wireless hotspot is available.

[3] Activate the Wi-Fi Feature

1. Go to Settings and select Wi-Fi.
2. Turn on the "Wi-Fi switch", then choose a network.

Browser Instructions



Tap Browser from the application list to access the web.

[A] Browser Webpages

1. Select "Browser" to launch a specified homepage.
2. To access a specific webpage, enter the web address in the URL input field and select "Go".
3. To zoom in, place two fingers on the screen and spread them apart. To zoom out, move your fingers closer together. You can also double-tap the screen.

[B] Add Windows


You can have multiple windows open at the same time.

1. To add a new window, tap the plus icon  at the title bar.
2. To open up a window, tap the title of the window.
3. To close the window, tap the close icon  at the title bar.


[C] Set Homepage

1. Tap the options button at the upper right.
2. Select "Settings" > "Set Homepage".
3. Enter the web address of the desired webpage.

[D] Add Bookmarks

While browsing a website, tap the bookmark icon  to add the current URL to your bookmark list for easy access later.

[E] View Bookmarks and History

Tap the history icon  to open the bookmark list and recent browsing history. Tap a bookmark or any entry to display the webpage.

[F] Customize Browser

To adjust browser settings, tap the options button in the upper right corner, then select "Settings".

Play Store App

The Play Store allows you to download a wide variety of applications directly to your device. A Google Account is required to use the Play Store.

1. From the application list, tap Play Store.
2. Sign in to your Google Account.
3. Search for and download applications as needed.
4. Follow the on-screen instructions.

Note: All applications available in the Play Store are developed by third-party providers. For information about the developers, refer to the descriptions provided for each application.

Access Media

[A] Gallery

To view or organize your images and video clips, edit and share your files with other devices, or set photos as wallpapers, select Photos from the application list.

Note: Entering this application may take a few extra minutes if you have a large number of files stored.

Supported File Formats

| Type | Format |
|-------|---|
| Image | JPG, JPEG, GIF, BMP, PNG |
| Video | H.720 264p 30 fps, H.720 263p 30 fps, MPEG-720 4p 30 fps, Flash 720p 30fps, RMVB 720p 30fps, H264 stereo 720p 30fps |

[B] Video Playback




1. Select a folder.
2. Choose a video to play.
3. Control playback using the on-screen virtual keys.

[C] Music Playback

With the Music app, you can play various music files.

1. The music player supports the following file formats: MP3, AAC, APE, WMA, OGG, WAV, M4A, and more.
2. To add music files to your device, begin by transferring music files to your device or memory card.

Play Music







1. Select a music file.
2. Control playback using the on-screen virtual keys.
3. Shuffle  : The current list of songs is randomly shuffled for playback.
4. Repeat List  : Replays the current list when it reaches the end.
5. Repeat Song  : Repeats the currently playing song.

Camera Function




The camera function allows you to capture photos and record videos.

[A] Capture a Photo

1. Open the application list and select "Camera".
2. To adjust the zoom, place two fingers on the screen and spread them apart to zoom in or move them closer together to zoom out.



| Icon | Description |
|--|---|
|  | Access camera settings. |
|  | Switch to video recording mode. |
|  | Take photos. |
|  | Tap to toggle between the front and rear camera lenses. |
|  | Activate smile detection for automatic photo capture. |
|  | Modify the color balance. |

[B] Record a Video

1. Open the application list and select "Camera". Tap  to switch to video mode.
2. Tap  to start recording. The duration of the recording is limited by the available storage space.
3. Tap  to stop recording. The video will be saved automatically in the DCIM folder.
4. After recording, tap the image viewer icon in the upper right corner to view the recorded videos.

Calendar

The Calendar feature allows you to view the calendar by day, week, or month, create events, and set alarms as reminders if needed.

1. To access the calendar, tap "Calendar" from the application list.
2. To create an event, tap the add icon .
3. Complete the fields, setting the category, date, time, and alarm as needed.
4. When finished, select "Done".
5. You can view the calendar in different formats: Day, Week, Month, and All.
7. To Delete an entry, tap the event to open it, then select the delete icon  and confirm by selecting "OK".

Clock

From the application list, tap "Clock", then select the alarm icon  to set an alarm.

1. Add an Alarm

1.1 Tap the add icon .

1.2 Use the numeric pad to set the alarm time, then select "AM" or "PM". When finished, tap "OK".

1.3 Tap the time to adjust it if needed.

2. Set Alarm Details

Configure the alarm time, repeat cycle, and alarm ringtone. Tap OK once finished.

3. Stop the Alarm

Tap Cancel to turn off the alarm. To silence it temporarily, tap Snooze, and the alarm will stop ringing for a few minutes.

4. Disable the Clock

Untick the clock to stop using the alarm.

5. Delete the Alarm




Tap Clock, then click the delete key to remove the alarm.

File Manager

The device's File Manager enables you to store and browse files and folders, including images, videos, documents, received attachments, and downloaded

files or applications. Using the File Manager, you can organize files by editing, moving, or copying them and send files to compatible devices as needed.

Sound Recorder

1. With the Recorder, you can capture voice memos. To access it, select Recorder from the application list.
2. To Record a Voice Memo: Tap the record icon  to start recording.
3. To Pause the Recording: Tap the pause icon  to temporarily stop the recording.
4. To Play the Recording: To listen to the voice memo you just recorded, tap the play icon .

Calculator

This feature allows you to use the device as a calculator, offering basic arithmetic functions. Tap the on-screen numeric and calculation keys to perform calculations.

Care and Maintenance

1. Use only manufacturer-approved accessories. Using general accessories may reduce your device's lifespan or cause malfunctions.
2. Keep the device dry. Exposure to humidity or liquids can damage device components and electronic circuits.
3. Avoid using or storing the device in dusty or dirty environments.
4. Do not store the device in excessively hot or cold areas.
5. Keep your device away from magnetic fields.
6. Avoid storing your device with metal objects such as coins, keys, or necklaces.
7. Handle your device with care. Do not drop it or subject it to impacts.

Warranty

Products that you buy directly from our **Porodo** website or shop come with a 24-month warranty.

When you buy **Porodo** products from any of our approved sellers, you only get a 12-month warranty. If you want to extend this warranty, go to our website at **porodo.net/warranty** and fill out the form with your information. Don't forget to upload a picture of the product too. After we've checked and accepted your request, we'll send you an email to confirm that your product's warranty has been extended.

For more info, please check:
porodo.net/warranty

Contact Us

If you have any questions about this Privacy Policy, please contact us at:
info@porodo.net

Website: **porodo.net**

Service Support: **support@porodo.net**

Instagram: **porodo**