



Porodo Lifestyle Fabric Shaver Lint and Bobbles Remover

SKU: PDLFST183WH


Table of Contents

Specifications	2
Product Overview	3
Operation and Charging	3
Warning and Safety Precautions	4
Cleaning and Maintenance	5
Disposal	5
Warranty	6
Contact Us	6

Specifications

Input	5V/1A
Rated Power	5W
Battery Capacity	600mAh
Working Time	1.5H
Charging Interface	USB-C
Product Size	84x84×79mm
Net Weight	154g
Motor speed	7200RPM
Lint Bin Capacity	50mL
Model Number	LFS183

Product Overview

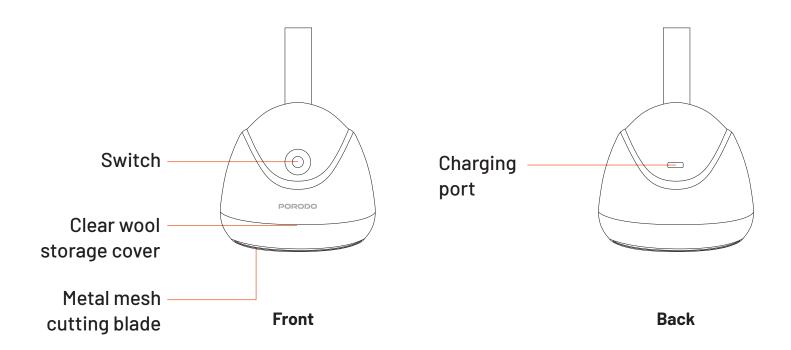



Operation and Charging

- 1. The switch light and motor will turn off simultaneously.
- 2. Power Indicator Light: The red light stays on during charging, and the white light stays on once fully charged.


Step 1: Before using the product for the first time, remove all accessories from the package and carefully read the product manual. To charge the trimmer, plug it into the power cord. The charging indicator light will be red, and once fully charged, the white light will turn on. The switch light will turn off simultaneously with the motor.

Step 2: To operate the product, press the power button to start the trimmer. Once you're done, press the power button again to turn it off.

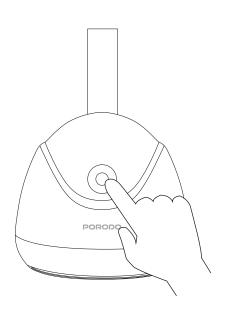

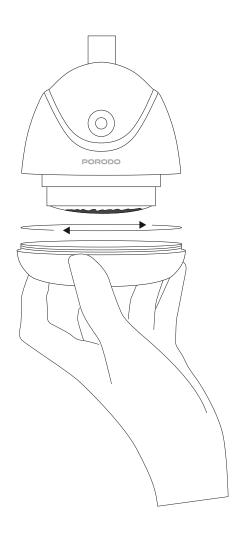

Step 3: After shaving, turn off the power supply. The cover can then be rotated and removed.

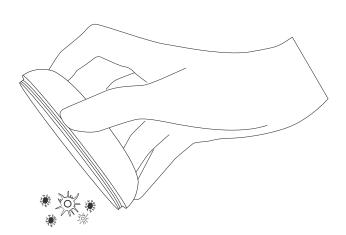

Step 4: To prevent debris from blocking the device, use the small additional brush to clean the fabric after emptying it.



Step 5: After cleaning, reinstall the cover in its original position.

Warning and Safety Precautions

- 1. Keep the equipment dry at all times to ensure safe operation.
- 2. Please read and follow the instructions carefully to prevent accidents or damage.
- **3.** Avoid using the power output, as it may cause overheating, malfunction, or even fire in extreme cases.
- 4. Do not operate the product if it is not functioning correctly.
- 5. Never insert foreign objects into the blade, as this could lead to injury, malfunction, or damage.

- 6. Do not attempt to disassemble the product without authorization, as this could cause permanent damage or failure.
- 7. Avoid using the product on wet clothing to prevent accidents and potential harm to the device.
- 8. Always place the product on a flat, stable surface to avoid damage in case of accidental drops.

Cleaning and Maintenance

- 1. Regularly clean the cover to remove any residual balls and prevent blockages.
- 2. Gently wipe the mosquito killer with a soft cloth and neutral detergent to clean the surface. Follow up with a dry cloth.
- **3.** Keep the mosquito killer away from open flames or direct sunlight to prevent discoloration or deformation.

Disposal

This product must not be disposed of as unsorted household waste. It is important to separate such waste for proper treatment and recycling, in compliance with local waste management regulations.





Products that you buy directly from our **Porodo** website or shop come with a 24-month warranty.

When you buy **Porodo** products from any of our approved sellers, you only get a 12-month warranty. If you want to extend this warranty, go to our website at **porodo.net/warranty** and fill out the form with your information. Don't forget to upload a picture of the product too. After we've checked and accepted your request, we'll send you an email to confirm that your product's warranty has been extended.

For more info, please check: porodo.net/warranty

Contact Us

If you have any questions about this Privacy Policy, please contact us at:

info@porodo.net

Website: porodo.net

Service Support: support@porodo.net

Instagram: porodo