



User Manual



Green Lion

3-Tier Egg Cooker

SKU: GN3TREGGCKGY

Model No: GL-EC33

Table of Contents

Safety Precautions	2
Schematic View	4
Before First Use	5
Instructions for Boiling Eggs	5
Specifications	6
Cleaning and Care	7
Disposal	7
Warranty	9
Contact Us	9

Safety Precautions

1. Always adhere to basic safety precautions when using electric appliances.
2. Before connecting the appliance to the mains power supply, ensure the voltage indicated on the rating plate matches that of the local network.
3. To avoid hazards, any repairs to this electrical appliance or its power cord must be conducted by authorized service personnel.
4. If the power supply cord, plug, or any part of the appliance is malfunctioning, has been dropped, or damaged, immediately cease using the product to prevent potential injury.
5. Supervise children to ensure they do not play with the appliance, as it is not a toy.
6. Improper repairs can pose serious risks. Keep the appliance and its power supply cord out of reach of children.
7. Before assembling, disassembling, or cleaning the appliance, ensure it is disconnected from the power supply and has cooled down completely.
8. For instructions on how to clean the appliance safely, please refer to the cleaning instructions of the manual.
9. To avoid the risk of electric shock, do not clean the appliance with water, and do not immerse it in any liquids.
10. This appliance is intended for domestic or similar applications, such as:
 - Staff kitchens in shops, offices, and other working environments,
 - Agricultural environments,
 - Use by customers in hotels, motels, and similar types of accommodation,
 - Bed-and-breakfast type environments.
11. Be careful when using the egg-piercer, as it can pose a risk of injury.
12. The exterior surfaces and the heating pan become hot during use and will remain so for some time afterwards.
13. Always grip the hot appliance by its handle.
14. Do not leave the appliance unattended while it is connected to the mains power supply.

15. Note: The steamer should be cleaned after each use.
16. Note: When using the steamer for the first time, slight smoke or odor may be emitted. This is normal and will soon subside. Ensure there is sufficient ventilation around the steamer.
17. Caution: Hot steam may be emitted from the lid.
18. Caution: Appliances may cause potential injury from misuse.
19. Be careful not to touch the top lid to avoid burns when grasping the lid handle.
20. You can only open the lid after the appliance is completely cooled down after power off to avoid burns.
21. If you need to open the lid during normal use, be sure to use heat-resistant gloves to avoid burns.
22. This appliance shall not be used by children. Keep the appliance and its cord out of reach of children.
23. Appliances can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning the use of the appliance in a safe way and if they understand the hazards involved.
24. Caution: Keep all packaging materials out of reach of children, as they pose potential dangers, such as suffocation risks.
25. Prior to each use, thoroughly inspect the main body, power cord, and any attached components for defects. If the appliance has been subjected to impact or excessive force on the power cord and appears damaged, discontinue use immediately. Even damage that is not visible may compromise the appliance's operational safety. In such instances, please contact a professional service center for assistance.
26. Do not leave the appliance unattended while it is in operation.
27. Keep the power cord away from hot parts of the appliance. Allow the appliance to cool down completely before winding the cord around it.
28. Always remove the plug from the wall socket in the following situations:

In case of malfunction, after using the appliance, and before cleaning

29. When disconnecting the appliance, do not pull on the power cord. Instead, always grasp the plug directly.

30. Ensure the appliance is positioned on a level, heat-resistant, and water-resistant surface during operation.

31. Avoid placing the appliance on or near heat sources such as hotplates or open flames, or beneath sensitive objects like wall cupboards. Hot steam emitted from the lid during operation can damage overhead furniture and fixtures.

32. No responsibility will be accepted for damage resulting from improper use or non-compliance with these instructions.

33. Always switch off the appliance and disconnect it from the power supply before changing accessories or approaching moving parts.

34. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent, or a similarly qualified person to prevent any hazards.

35. Do not touch the hot sections or heating components of the appliance. Exercise caution to avoid pouring water on the heating element.

Schematic View

1. Lid with Steam Vent

2. Steamer Trays with Handl

3. Steam Basket (×2)


4. Egg Tray (×2)

5. Steamer Base Unit

6. Reservoir

7. Power Indicator

8. Timer Control Knob

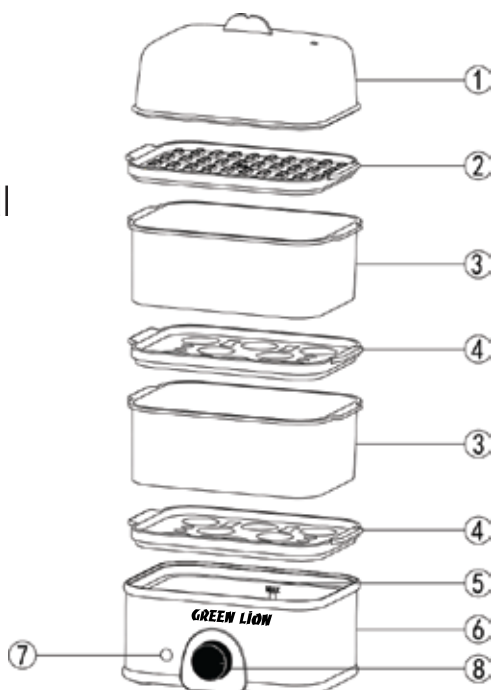

Before First Use

Before using the egg boiler for the first time, clean the water bowl, egg holder, and lid with a damp cloth to ensure they are free from any residues or contaminants.

Instructions for Boiling Eggs

1. Fill the reservoir with approximately 500ml of water, ensuring not to exceed the Max line to prevent spillage.
2. Place the eggs into the egg holder, position the holder onto the heating pan, and cover with the lid.
3. Insert the plug into a suitable wall socket.
4. Use the time control switch to select the desired degree of egg hardness.
5. Rotate the timer control switch clockwise to set the cooking time. The power indicator light will illuminate, indicating that the steamer is heating up.
6. Refer to the information provided in the table for recommended cooking times based on desired egg hardness.
7. When the cooking time is finished, the indicator light will turn off, and the timer will ring, signaling that cooking has stopped.

Note: If the eggs are ready before the timer ends, turn the timer control switch counterclockwise to "0".

8. Turn off the appliance and remove the plug from the wall socket.
9. Open the lid carefully; be cautious as hot steam will escape, and the surfaces will be very hot.
10. Using caution due to the high temperature, remove the egg holder with the eggs from the heating pan and immediately place it under cold running water to stop the cooking process.

Note: If the eggs are not removed promptly from the egg cooker, they will continue to harden as they retain heat.

11. Overheat Protection Function: This product is equipped with an advanced overheat

protection system. It activates during high-temperature situations, like when all the water in the heating pan evaporates and the temperature inside rises sharply. When this happens, the overheat protection will automatically cut off the power, and the indicator light will turn off. If this occurs, you should disconnect the power cord and let the device cool down completely. Once it cools, the heating pan will automatically heat up again, and the indicator light will turn back on.

Warning: In case the product does not reset after the power has been cut off due to abnormal functioning, send the appliance to a service center for inspection and repair.

12. When cooking is complete, turn the timer control to 0 minutes to switch off the egg cooker. Then, carefully unplug the device from the wall socket. When removing the eggs, be cautious as the body of the egg cooker may be very hot.

Recommended Water Volume and Cooking Time		
Egg Hardness	Water Volume	Cooking Time
Soft	70ml	6 to 8 minutes
Medium	80ml	10 to 12 minutes
Hard	90ml	14 to 16 minutes
Remark: The egg hardness mentioned above is based on medium-sized eggs. However, you can adjust the hardness to your preference, depending on how many eggs and what size you are boiling.		

Specifications

Model No.	GL-EC33
Material	Stainless Steel
Tray Material	PP
Rated Voltage	240-220V
Rated Frequency	60/50Hz
Rated Power	500-400W

Water Reservoir Capacity	500 ml
Tray Capacity	16 Eggs
Cooking Time	60-0 min
Power Plug	UK Plug
Cord Length	86 cm
Product Weight	1.165 kg
Product Dimensions	150*185*265 mm

Cleaning and Care

1. Always unplug the appliance from the wall socket and allow it to cool down before cleaning. Ensure that any remaining water or oil is emptied out.
2. To avoid the risk of electric shock, never clean the appliance with water directly nor submerge it in water.
3. To prevent damage or scratches to polished surfaces, avoid using abrasive materials or harsh cleaning solutions.
4. The heating pan should be wiped using only a damp cloth.
5. If there is a build-up of deposits on the heating pan, use a solution of water and vinegar to remove them.
6. After applying the solution, run the appliance through one boiling cycle with fresh cold water to eliminate any vinegar residue.
7. Rinse the egg holder thoroughly and wipe it dry.
8. The lid should be cleaned with a damp cloth.

Disposal Considerations

This symbol on the product or packaging indicates that the product must not be disposed of with household waste. Instead, it should be taken to a designated collection point for the recycling of electrical and electronic equipment. By disposing of the product in accordance with these regulations, you help protect the environment and the health of others from potential harm. For more information on recycling and disposal, please contact your

local authority or household waste disposal service.



Warranty

Products that you buy directly from our **Green Lion** website or shop come with a 24-month warranty.

When you buy **Green Lion** products from any of our approved sellers, you only get a 12-month warranty. If you want to extend this warranty, go to our website at and fill out the form with your information. Don't forget to upload a picture of the product too. After we've checked and accepted your request, we'll send you an email to confirm that your product's warranty has been extended.

For more info, please check:

<https://www.greenlion.net/warranty>

Contact Us

If you have any questions about this Privacy Policy, please contact us at:

Website: **<https://www.greenlion.net/>**

Sales: **sales@greenlion.net**

Service Support: **Support@greenlion.net**

Telegram: **[@greenlion_global](https://t.me/greenlion_global)**

Instagram: **[@greenlion_global](https://www.instagram.com/greenlion_global)**