



GREEN LION



Green Lion
Classic Toaster
with 6-Level Browning, Defrost
and Reheat Functions

SKU: GNCLTOSTRBG


Model No: GT-11

Table of Contents

Schematic View	2
Safety Instructions	2
Specifications	6
First Time Using	7
Instructions for Use	7
Tips for Best Results	8
The Defrost Function	9
The Reheat Function	9
Cleaning Instructions	10
Storage Guide	11
Disposal	11
Warranty	12
Contact Us	12

Schematic View

1. Bread Slots
2. Bread Lever
3. Browning Knob
4. Cancel Button
5. Reheat Function
6. Defrost Function
7. Crumb Tray

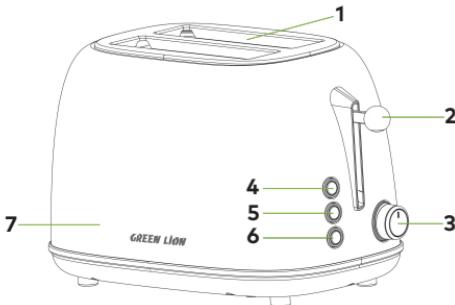

Safety Instructions

Carefully read all instructions before operating this appliance and keep them for future reference. Do not attempt to use this appliance for any purpose other than its intended use, as described in these instructions. Any misuse can result in severe injuries or damage caused by electric shock, heat, or fire.

1. All operations, repairs, and technical maintenance of the appliance or any of its parts, beyond what is described in these instructions, must only be performed by an authorized service center.
2. This appliance is for household and similar use only and is NOT intended for use in moving vehicles. Do not operate or store the appliance in humid or wet areas, or outdoors. Do not attempt to use the appliance with any parts or accessories not specified by the manufacturer.
3. Regularly inspect the entire appliance for proper operation, especially the power cord. The pins of the power cord should be clean, smooth and free of discoloration.
4. Do not operate the appliance if it or any part of it is damaged, to avoid the risk of fire, electric shock, or other harm. The appliance may be considered damaged if it has been subjected to excessive strain (e.g., overheating, mechanical or electrical shock, or exposure to moisture) or if there are visible cracks, excessively frayed components, or deformations.
5. If the appliance appears damaged, immediately unplug it and return

the entire unit, including all parts and accessories, to an authorized service center for examination and repair.

6. Bread, cakes, and pastries can catch fire when overheated! During operation, maintain a minimum distance of 20 cm on each side of the appliance from furniture, walls, boards, curtains, and other objects. Avoid using the appliance near flammable liquids (e.g., high-proof alcohol) or under heat-sensitive or moisture-sensitive materials, boards, or drop-lights to prevent damage from steam, condensate, or fire.

7. Before operating, always ensure the slots are free of foreign objects. Do not insert wrapped foods (e.g., kitchen foil) to avoid the risk of fire electric shock, or damage. Immediately unplug the appliance if any malfunction occurs (e.g., overheating or smoke emitting from the slots).

8. Supervise the appliance when used near children. Do not let young children play with any parts of the appliance. The appliance is not intended for use by children or infirm persons without proper supervision. For storage, always keep the appliance dry, clean, and out of reach of young children. Avoid placing any hard or heavy objects on the appliance or any of its parts.

9. Operate the appliance on a stable, level, dry, and adequately large table or counter. Do not place cloths or tissues beneath or on the appliance to avoid the risk of fire, electric shock, or overheating. Do not place objects (e.g., cold toast) on the appliance during operation. Always keep the table or counter clean and dry, and immediately wipe off any spilled liquids. Ensure the appliance is not placed near the edge of the table or counter, on inclined or wet surfaces, or in locations where it could fall.

10. Do not place the appliance or any of its parts on or near hot surfaces (e.g., heaters, gas burners, grills, or ovens).

11. During toasting, cakes and pastries may crumble, bend, and catch fire if overheated. Do not leave the appliance unattended when connected to the power supply. Always disconnect the appliance from the power supply when it is not in use, and before cleaning or moving it. Allow the appliance to cool completely before cleaning. Always grasp the appliance

by its side walls when moving or lifting it.

12. Toast only slices of simple cakes and pastries without any filling or glaze (e.g., jam, mayonnaise, or icing) and of appropriate size (12×12 cm 2/1 to 2.4 cm thick). Slices must not protrude from, stick in, or jam the slots. Do not use the toaster to toast or cook very dry cakes or pastries (e.g., cookies), filled rolls, or sandwiches.

13. Never use abrasive cleaners, scouring pads, or sharp objects (e.g., metal scouring pads) for cleaning. Clean the toaster with a damp sponge or cloth, then carefully dry the exterior. Avoid handling the appliance or any part of it roughly. Never place the appliance or any part of it in a dishwasher.

14. Do not immerse the toaster, power cord, or plug in water, and avoid allowing moisture to contact the appliance. Do not insert foreign objects into the slots or poke into the slots to prevent electric shock or damage to the heating elements.

15. If smoke emerges from the slots, or bread crumbles or bends in the slots, immediately stop the toasting process by pressing the cancel button and unplugging the toaster. Wait for it to cool completely before carefully removing jammed bread slices, ensuring not to damage the heating elements on either side of the slots.

16. Always operate the toaster with the crumb tray in place.

17. During operation, do not place any objects (e.g., cold bread slices) or tissue on the appliance or near the heating elements.

18. The exterior of the toaster may become hot during operation. Avoid touching the exterior while the appliance is in use. Keep your hands, face, arms, clothing, and other heat-sensitive objects away from the slots during operation.

19. Important: Ensure the crumb tray is in place before operating the toaster. Otherwise, crumbs may become charred on the bottom of the toaster and stick to its surfaces.

20. Important: Before each toasting process, ensure that the browning control is set to the appropriate level and not too high.

21. Warning: Before operating, ensure there are no foreign objects in

the slots. Do not insert foreign objects into the slots or poke inside them to avoid the risk of electric shock and damage to the heating elements. Never use force to remove jammed bread slices.

22. Always keep your hands, face, arms, clothing, and other heat-sensitive objects away from the slots during operation. When moving or lifting the toaster, always grasp it by the side walls.

23. Only toast slices of simple cakes and pastries without any filling or glaze (e.g., jam, mayonnaise, or icing) and of suitable size. Slices must not protrude from, stick in, or jam the slots. Do not use the toaster to toast or cook very dry cakes or pastries (e.g., cookies), filled rolls, or sandwiches.

24. During toasting, cakes and pastries may crumble, bend, and catch fire if overheated. Do not leave the appliance unattended when connected to the power supply. Immediately unplug the appliance if any malfunction or problem occurs (e.g., overheating or smoke emitting from the slots).

25. The maximum browning setting when using the bun warmer is 4–3.

26. Never place the appliance or any part of it in an automatic dishwasher.

27. For household use only: This appliance is intended for household and similar applications, such as:

- Staff kitchen areas in shops, offices, and other working environments.
- Farmhouses.
- By clients in hotels, motels, and other residential-type environments.
- Bed-and-breakfast-type environments.

28. Ensure that the voltage rating of your mains power supply corresponds to the voltage requirements of the appliance (220V–240V, 60/50Hz AC). Always connect the appliance directly to a separately protected mains power supply wall socket with a properly connected protective conductor (earth/ground). Before operating, completely unwind the power cord. Do not use an extension cord or multi-socket outlet.

29. The installation of a residual current safety switch with a maximum rated residual operating current of 30 mA in the electrical circuit is recommended. If you are unsure, consult a qualified electrician for further assistance.

30. Always switch off the appliance using the cancel button and unplug it when not in use or before moving or cleaning it. Do not leave the appliance unattended while connected to the power supply.

31. Do not place the appliance or any of its parts on or near hot surfaces such as heaters, gas burners, grills, or ovens. Do not position the appliance on top of the power cord. If the power cord becomes warm during operation or shows signs of potential damage, it must be replaced by an authorized service center. Do not attempt to repair the power cord yourself.

32. Do not immerse the toaster or its power cord in water or any other liquid. Avoid spilling or dripping liquids on the toaster or its power cord to prevent fire and electric shock. If liquids are spilled on the exterior of the appliance, immediately press the cancel button, unplug the power cord, and dry the appliance thoroughly.

33. Do not place the appliance or any of its parts in an automatic dishwasher.

Specifications

Model	GT-11
Material	Metal + PP
Rated Power	685-815W
Rated Voltage	220-240V
Rated Frequency	50/60Hz
Capacity	2 Bread Slots
Slots Width	38 mm
Toasting Modes	Cancel-Reheat-Defrost
Temperature	Up to 200
Browning Levels	6 Levels
Standard Toasting Time	70s-110s-130s-150s-180s-210s
Defrost Toasting Time	100s-140s-160s-180s-210s-240s
Reheat Toasting Time	30s
Power Cord	UK Plug 75 cm
Product Weight	1.35 kg
Product Dimensions	292×180×192 mm

First Time Using

1. Unpack the appliance carefully and check for any damaged or missing parts.

Caution: Carefully remove all packaging and shipping materials, including those in the slots and under the on/off handle. Do not remove any warning or model labels on the appliance. Ensure that no foreign objects, such as packing materials, remain in the slots before operating the toaster.

2. Important: The toaster operates with an electronic control system. The on/off handle will only engage in the toasting position if the toaster is connected to the power supply and switched on.

3. When using the toaster for the first time, you may notice a slight smoke haze due to the initial heating of some components. This is normal and not a cause for concern.

4. To prevent any residual odors or tastes from affecting your food set the appliance to browning level 6 and heat it once without placing any cakes or pastries in the slots (refer to "Instructions for Use").

5. If a burnt smell occurs during later use, clean the toaster as described in the "Cleaning Instructions" section.

6. Warning: If the burnt smell persists even after thorough cleaning send the appliance to an authorized service center for inspection and repair.

Instructions for Use

1. Safety Warnings

1.1 Always fully unwind the power cord before connecting the appliance to the power supply.

1.2 Ensure that there are no foreign objects (e.g., shipping materials) in the slots.

1.3 Never insert foreign objects such as knives, spoons, or other utensils into the slots to prevent risks of fire, electric shock, burns, or damage.

- 1.4 Handle the toaster with care, especially when removing jammed bread slices.
2. Important Note: Ensure the crumb tray is properly in place before operating the toaster. Failure to do so may result in crumbs becoming charred at the bottom of the toaster and sticking to its surfaces.
3. Prepare the toaster for use by fully unwinding the power cord and place the toaster on a stable, dry, and heat-resistant surface.
4. Connect the power plug to an appropriate power outlet (refer to "Safety Instructions").
5. Use a sharp knife to slice the food (bread or similar cakes and pastries) into evenly sized slices, ensuring they do not exceed 12x12 cm and are between 2/1 and 2.4 cm thick. Aim for smooth cuts and remove any loose crumbs.
6. Place one slice of bread into each slot of the toaster.
7. Turn the browning control knob to select the desired browning level from 1 (light) to 6 (very dark). For the first use, a medium browning level such as 3 or 4, is recommended (refer to "Tips for Best Results").
8. Carefully press down the on/off handle until it locks into the Browning position. The CANCEL button will illuminate to indicate that the toasting process has begun.

Note: The on/off handle will not lock into the Browning position unless the toaster is connected to the power supply.

Tips for Best Results

1. You can cancel the toasting process at any time by pressing the CANCEL button.
2. The required browning level depends on your personal preference and the type or freshness of the bread or pastries. For example, a lower browning level is sufficient for toasting raisin pastries and fine white bread, whereas rye bread requires a higher browning level to achieve similar results.
3. To crisp rolls, cut them in half with a sharp knife and activate the Single-Side Toasting Function. Ensure the slices are no thicker than 2.4 cm and will not get stuck in the slots. Alternatively, use the rolls tray. Place it on

the toaster, then position the rolls on top.

4. For smaller bread slices, lift the on/off handle to the HIGH LIFT position approximately 2 cm above the idle position to remove them easily.

5. Always make even, smooth cuts. Use a sharp bread knife, remove crumbs and trim protruding edges, especially when crisping halved rolls.

Danger: Never insert your fingers into the slots while the toaster is connected to the power supply. Always switch off, unplug the appliance, and allow it to cool before attempting to remove jammed bread or crumbs.

6. If bread becomes stuck or jammed in the slots, press the CANCEL button unplug the toaster, and allow it to cool. Carefully remove the bread slices without using force, ensuring not to touch the heating elements to avoid damage.

7. The LED display remains illuminated until the power cord is unplugged from the outlet.

8. Empty the crumb tray after each use to prevent crumbs from charring and sticking (refer to "Cleaning Instructions"). Do not operate the toaster without the crumb tray in place.

9. If any function button (such as Defrost or Reheat) is pressed, the toaster will automatically return to normal operation once the selected function program is complete.

The Defrost Function

The Defrost function extends the toasting time to accommodate frozen bread.

1. Insert the frozen bread slices into the slots and select the desired browning level.

2. Carefully press down the on/off handle until it locks into the Browning position.

3. Press the Defrost button. The power indicator for the button will turn on.

The Reheat Function

The Reheat function shortens the toasting time to crisp up toast.

1. Insert the bread slices into the slots.

2. Carefully press down the on/off handle until it locks into the Browning position.

3. Press the Reheat button. The power indicator for the button will turn on.

Cleaning Instructions

1. Warning: Always switch off the toaster by pressing the Cancel button unplug the power cord, and allow the toaster to cool down before removing the crumb tray, cleaning, or moving the appliance.
2. Do not immerse the toaster or its power cord in any liquids, or drip liquids onto the toaster to avoid the risk of electric shock and damage.
3. Do not place any part of the appliance in an automatic dishwasher.
4. Avoid using abrasive cleaners, cleaning pads, or any hard or sharp objects (e.g., metal scouring pads) for cleaning.
5. Clean the toaster and power cord with a damp sponge or tissue, and ensure the appliance is carefully dried after cleaning.
6. Do not handle the appliance or any of its parts forcefully. Never insert foreign objects into the slots.
7. Switch off the toaster by pressing the Cancel button, unplug the power cord, and allow the toaster to cool down.
8. Pull out the crumb tray and empty it. You may clean the crumb tray and rolls tray with warm dishwater. Thoroughly dry the trays after cleaning and allow them to air dry for a few minutes.
9. Grasp the toaster by both sides, hold it over a sink or large bowl, and turn it upside down. Gently shake the toaster to remove the crumbs, turning it in all directions.
10. Wipe the exterior of the toaster with a damp, soft cloth, being careful not to spill or drip water or any other liquids inside the toaster. If necessary clean the power cord in the same way. Then thoroughly dry both the toaster and the power cord with a dry, soft cloth.
11. Insert the crumb tray back into the bottom of the toaster.

Caution: Do not insert the crumb tray if it is still wet or damp.

Storage Guide

1. Store the appliance on a clean, dry surface where it will not tilt or fall, and ensure that no other objects can fall onto it.
2. Keep the appliance in a location safe from frost, excessive mechanical or electrical strain, heat, moisture, direct sunlight, and out of the reach of young children.
3. Do not place any hard or heavy objects on the appliance or any of its parts.
4. Always switch off the appliance by pressing the Cancel button and unplug the power connector when the appliance is not in use.
5. If the appliance is not used for an extended period, clean it thoroughly before storing (refer to "Cleaning Instructions"). If necessary, wind the power cord around the cord storage at the bottom of the appliance.

Disposal



This product must not be disposed of as unsorted household waste. It is important to separate such waste for proper treatment and recycling in compliance with local waste management regulations.



Warranty

Products that you buy directly from our **Green Lion** website or shop come with a 24-month warranty.

When you buy **Green Lion** products from any of our approved sellers, you only get a 12-month warranty. If you want to extend this warranty, go to our website at <https://www.greenlion.net/warranty> and fill out the form with your information. Don't forget to upload a picture of the product too. After we've checked and accepted your request, we'll send you an email to confirm that your product's warranty has been extended.

For more info, please check:

<https://www.greenlion.net/warranty>

Contact Us

If you have any questions about this Privacy Policy, please contact us at:

Website: <https://www.greenlion.net/>

Sales: sales@greenlion.net

Service Support: Support@greenlion.net

Telegram: [@greenlion_global](https://t.me/greenlion_global)

Instagram: [@greenlion_global](https://www.instagram.com/greenlion_global)