



**Green Lion**  
**GLB-05 Electric Lunch Box**

SKU: GNELB850MLBG

# Table of Contents

Features	2
Safety Precautions	2
Cleaning and Maintenance	6
Product Overview	6
Instructions for Use	7
Specifications	7
Troubleshooting	8
Warranty	9
Contact Us	9

## Features

Equipped with a sturdy handle, making it simple to carry your lunch box wherever you go.

The lid securely locks to prevent spills and keep food fresh.

The inner container can be easily removed for hassle-free cleaning and refilling.

All parts are dishwasher safe, ensuring easy and thorough cleaning after each use.

Features a durable silicone sealing ring to keep your food fresh and prevent leaks.

Made from BPA-free plastic, ensuring safe, non-toxic food storage.

## Safety Precautions

**Warning:** This appliance is suitable for use by children aged 8 years and older and by individuals with reduced physical, sensory, or mental capabilities, provided they have received supervision or instructions on how to safely use the appliance and understand the risks involved.

1. Children should not play with the appliance.
2. Cleaning and maintenance should not be performed by children unless they are over 8 years old and supervised.
3. Ensure the appliance and its cord are kept out of reach of children under 8 years.
4. Ensure the appliance is undamaged and in good condition after unpacking. If you suspect damage from transportation, do not use the appliance and contact the supplier immediately.
5. Verify that the appliance's rating matches the local power supply specifications. Ensure the rating plate is correctly positioned on the bottom of the appliance.
6. Operate the appliance only for its intended domestic purposes. Disconnect the appliance from the power supply once you are finished using it.

7. Do not use this appliance outdoors.
8. If there is a visible crack on the heating plate, immediately turn off the power supply. This appliance is designed exclusively for heating and cooking food and should only be used with appropriate cookware.
9. Do not submerge the appliance in any liquids.
10. This appliance is appropriate for use in various professional environments, including:
  - 10.1 Staff kitchens in commercial spaces such as shops and offices.
  - 10.2 Farmhouses.
  - 10.3 Hotel and motel rooms, and other residential settings.
  - 10.4 Bed and breakfast establishments.
11. To prevent electric shock, never immerse the cord, plug, or the entire unit in water or any other liquid.
12. Always supervise the use of this appliance when it is operated near children.
13. Use the appliance only for its intended purposes. Do not attempt to heat the surroundings with this appliance.
14. Ensure the power socket is easily accessible to facilitate quick disconnection in emergencies.
15. Avoid using the appliance near high heat sources.
16. Always unplug the appliance from the power supply before cleaning.
17. The appliance is designed for indoor use only. Ensure it is used in a dry environment.
18. Use only accessories recommended by the manufacturer.  
Unapproved accessories may pose risks and could damage the appliance.
19. Never move the appliance by pulling the cord. Ensure the cord does not get tangled or caught and avoid bending it sharply.
20. Position the appliance on a stable, flat surface.
21. Always allow the appliance to cool down completely before cleaning or storing.

22. Unplug the appliance from the electrical outlet when not in use and before cleaning. Allow it to cool before dismantling any parts for cleaning.
23. Do not use the appliance if the cord or plug is damaged, or if the appliance malfunctions or shows any signs of damage. Return it to an authorized service facility for inspection, repair, or electrical or mechanical adjustment.
24. To minimize the risk of injury, use only accessories recommended by the manufacturer.
25. Always place the appliance on a stable, dry, and flat surface.
26. Do not use the appliance outdoors.
27. Do not let the cord hang over sharp edges of a table or counter, or touch hot surfaces.
28. Ensure that the voltage on the nameplate matches your local supply before use.
29. If the power cord is damaged, replace it with a proper cord from the manufacturer or a repair department.
30. Keep the appliance away from flammable materials.
31. Do not plug in the appliance with wet hands to prevent electric shock.
32. Do not use water to clean or immerse the appliance.
33. Repairs or modifications should only be carried out by professional staff.
34. Do not use the appliance in unstable or moist environments as it may cause damage or malfunction.
35. Do not place the appliance in a high-temperature disinfectant for cleaning.
36. Do not use the microwave to heat the appliance.
37. Do not place the appliance in the refrigerator.
38. Do not leave food inside for extended periods while using electric dry heating.
39. Always unplug the appliance when it is not being used.
40. Ensure the cord does not touch any hot surface of the hot plate.

- 41. This appliance should not be operated with an external timer or a remote-control system.
- 42. Never leave the appliance unattended while it is connected to the power supply. Always unplug it after each use.
- 43. Do not place the appliance on or near any source of heat.
- 44. Always use the appliance on a flat, stable surface.
- 45. Do not leave the appliance exposed to weather conditions like rain or sunlight.
- 46. Ensure the power cord does not come into contact with hot surfaces.
- 47. Never use the appliance without any food inside.
- 48. This appliance is intended for home use only and should not be used for commercial or industrial purposes.
- 49. Do not immerse the appliance body, plug, or power cord in water or other liquids. Always clean with a damp cloth.
- 50. Do not wrap food in plastic or film when using the appliance, as this could cause damage and create a fire hazard.
- 51. Use this appliance solely for heating food.
- 52. Do not cover the interior of the appliance with foil, as it can cause severe damage.
- 53. Avoid moving or transporting the appliance while it is connected to the mains electricity.
- 54. Ensure the cord does not hang where it can be grabbed by children.
- 55. When disposing of the appliance, make it inoperable by cutting off the power cord.
- 56. Always grip the plug to remove it from the socket. Never pull the cord to unplug the appliance.
- 57. Keep the appliance away from flammable materials like curtains, clothing, etc.
- 58. Do not use the appliance if the power cord or plug is damaged or if the appliance is faulty. Replace any damaged cords with a new one provided by the manufacturer or an authorized service.

- 59. Disconnect the power cord from the electricity supply before performing any maintenance or cleaning.
- 60. Ensure hands are completely dry before touching the plug or power connections.
- 61. If using extension leads, they must be appropriate for the appliance's power to ensure safety. Inadequate extension leads can cause malfunctions.

## Cleaning and Maintenance

- 1. Always unplug the lunch box after use.
- 2. Clean the lunch box immediately after use to prevent odors.
- 3. Do not use petrol, cleanser powder, hard brushes, or stainless steel wire balls to clean the lunch box.
- 4. You may use a little warm water to clean the inside or wipe it with a soft, warm cloth.
- 5. If the lunch box will not be used for a long time, clean it, pack it in its gift box, and use a dry filler to prevent moisture and damage.
- 6. If there are any issues with the lunch box, send it to the company's repair department or contact them. Personal repair or dismantling is prohibited.

## Product Overview



## Instructions for Use

1. Before use, wash and dry the plates. Then, place the food onto the plates.
2. Insert the plate into the lunch box, then securely close the lunch box lid.
3. Plug in the device.
4. The power indicator will light up, and the device will start heating the food.

**Note:** Heating time depends on the amount of food and its initial temperature. Typically, 40-25 minutes is sufficient. For cold or refrigerated food, the heating time may be longer.

5. Unplug the device before enjoying your meal.

**Warning:** To prevent damage, press the air valve with your fingertip to open it during operation.

## Specifications

Model No.	GLB-05
Material	Food Grade PP
Container	Stainless Steel 304
Voltage	220-240V
Power	55-60W
Capacity	850 ml
Temperature	50°C
Heating Time	10-15 Mins
Power Cord	UK Plug
Cable Length	80 cm
Product Size	258×187×97 mm
Product Weight	732 g



## Troubleshooting

Problem	Possible Causes	Solution
No heating, and the indicator does not light up.	1. The power is not plugged in. 2. The power cord is damaged.	Check the plug, power cord, and ensure the power cable is plugged in.
No heating, but the indicator lights up.	Heating Element is Damaged	Send the device to the appropriate repair department.
The temperature is too low after heating is finished.	1. The heating time is too short. 2. The ambient temperature or the temperature of food is too low.	Extend the heating time.



## **Warranty**

Products that you buy directly from our **Green Lion** website or shop come with a 24-month warranty.

When you buy **Green Lion** products from any of our approved sellers, you only get a 12-month warranty. If you want to extend this warranty, go to our website at **<https://www.greenlion.net/warranty>** and fill out the form with your information. Don't forget to upload a picture of the product too. After we've checked and accepted your request, we'll send you an email to confirm that your product's warranty has been extended.

For more info, please check:

**<https://www.greenlion.net/warranty>**

## **Contact Us**

If you have any questions about this Privacy Policy, please contact us at:

Website: **<https://www.greenlion.net/>**

Sales: **[sales@greenlion.net](mailto:sales@greenlion.net)**

Service Support: **[Support@greenlion.net](mailto:Support@greenlion.net)**

Telegram: **[@greenlion\\_global](https://t.me/greenlion_global)**

Instagram: **[@greenlion\\_global](https://www.instagram.com/greenlion_global)**