



**GREEN LION**



**Green Lion**  
**STEAM 1800W**  
**Garment Steamer**

SKU: GNGS1800WBG

Model No: BX166

## Table of Contents

Overview	2
Heat Protection Features	2
Warnings	2
Precautions	2
Specifications	4
Circuit Diagram	4
Schematic View	5
Instructions for Use	5
Cleaning Instructions	6
Troubleshooting	7
Disposal	7
Warranty	8
Contact Us	8

## Overview

This machine is a handheld garment steamer primarily designed for hanging ironing, with cleaning as a secondary function. It is suitable for use in homes, the clothing industry, weddings, curtain maintenance, sofa cleaning, and hotels, among other scenarios. The steamer is effective on various fabrics such as silk, wool, synthetic fibers, cotton, and blends, quickly removing wrinkles without damaging the fabric. Additionally, it offers cleaning, sterilization, and dust removal capabilities. Maintenance and repair are simple and convenient.

## Heat Protection Features

**Thermostat:** The thermostat maintains the product's temperature at a safe, rated level by regulating the current flow.

**Thermal Fuse:** If the internal thermostat malfunctions, the thermal fuse acts as a protective device. When the machine's temperature rises to a critical level, the thermal fuse automatically cuts off the power supply to prevent danger.

## Warnings

1. Do not point the nozzle of the product at people or animals to avoid burns from the steam.
2. When attaching or removing accessories, ensure the machine is in a steam-free and cooled state to avoid steam-related injuries.
3. Do not immerse the product in water or other liquids, and do not rinse it under running water.
4. Carefully read the instructions before installing or using the machine.
5. Do not disassemble or attempt to repair the machine yourself.

## Precautions

Before using the product, please carefully read this User Manual to guarantee correct usage and keep it secure for future reference.


1. Use the machine exclusively for the purposes specified in this manual. Do not use it for any other purposes.
2. The water used in the machine must be clean. For delicate fabrics, it is recommended to use pure water.
3. Before using the machine, ensure that the working voltage matches the power supply voltage in your home. Install a 30mA leakage protection switch, and use a socket with a rated current of at least 10A.
4. Fully unwind the power cord before use. Avoid sharing the same power source with other high-power appliances, and do not use a power strip to prevent fire hazards caused by overloading.
5. Add water to the machine before use, ensuring it does not exceed the maximum water level. Attach the required accessories before turning on the power switch.
6. Do not add cleaning agents or other solutions to the water tank.
7. This machine is not suitable for individuals with physical, sensory, or mental impairments or those lacking relevant experience and knowledge unless supervised or instructed by a responsible person.
8. Children must not use or play with this machine.
9. During operation, keep the heated nozzle away from people, animals, household appliances, and other objects. Turn off the power switch when not in use to prevent steam injuries or damage.
10. Avoid touching the heated nozzle while the machine is in use.
11. Clean the machine using a soft cloth and a neutral detergent. Do not use gasoline, alcohol, banana water, or other solvents. Ensure that no liquids enter the machine.
12. Do not store the machine in humid or harsh environments exposed to strong sunlight or corrosive gases for extended periods.
13. If the power cord is damaged, it must be replaced by the manufacturer, a service center, or a qualified professional to avoid hazards.
14. If any part of the machine, such as the safety protection device or power cord, is damaged, discontinue use immediately. Do not attempt unauthorized repairs. Contact the manufacturer's service center for assistance.

15. This machine is intended for indoor use only.
16. Exercise caution to avoid hazards from steam spatter.
17. Unplug the power cord before filling the water tank or cleaning the machine.
18. Be cautious of burns and steam-related risks.


## Specifications

Model	BX166
Material	PP + Stainless Steel
Rated Power	1800W
Rated Voltage	220-240V
Rated Frequency	50-60Hz
Water Tank Capacity	350 ml
Temperature	150 to 230°F
Steam Output	32 g/min
Fast Heating Time	35 sec
Continuous Steam Time	20 mins
Power Cord	UK Plug 1.7 m
Product Weight	775 g
Product Dimensions	110×140×260 mm

## Circuit Diagram

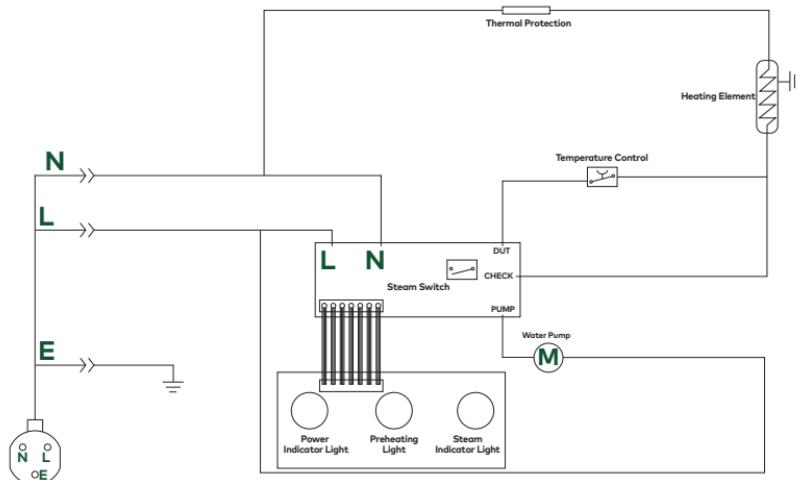

## Schematic View

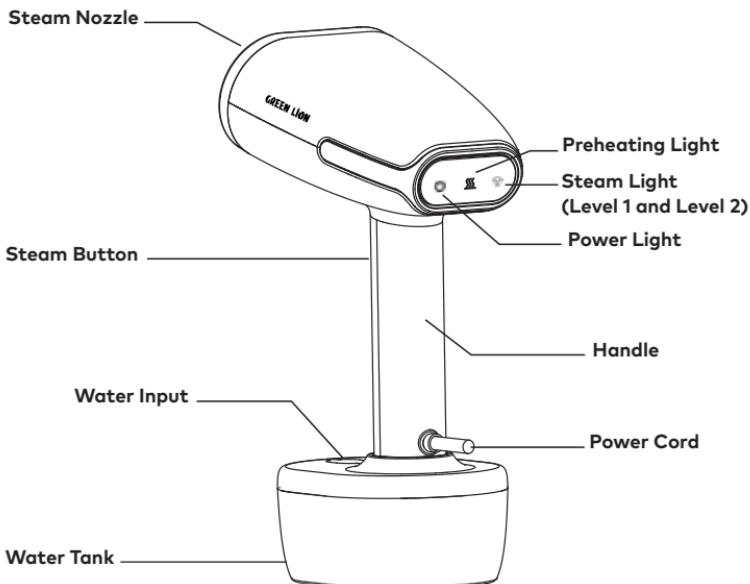

## Instructions for Use

### [A] Filling the Water Tank

Rotate the water tank to the unlocked position and remove it from the main unit. Pull out the water plug and fill the tank with pure water, ensuring it does not exceed the maximum water mark.

### [B] Accessories Installation

When necessary, hold the machine's handle with one hand and attach the brush to the steam nozzle with the other hand. A "click" sound will indicate that it is securely installed.

### [C] Using the Steamer

1. After filling the water tank, plug in the power cord and turn on the power. Press the power button. The preheating indicator will flash as the machine begins to warm up.

2. After 30 seconds, the indicator light will stay on steadily, signaling that preheating is complete.
3. Press the button again. The steam light will flash, and the machine will release a small amount of steam, allowing you to begin ironing.
4. Press the button gently again, and the steam light will stay steady, indicating second-gear steam spraying.
5. After ironing, press and hold the power button for 2 seconds. The indicator light will turn off, and the machine will stop working. When ironing is finished, unplug the machine.

#### **[D] Note**

1. When the product is first turned on, the sound may be relatively loud due to the pumping mechanism as water is drawn into the internal heating element. This is normal.
2. During the first use, a small amount of water droplets and steam may be released before the product's temperature stabilizes. It is recommended to spray on a discarded piece of fabric for a short time to allow the steam to stabilize before using it on garments.
3. During subsequent uses of the steam spray function, a small amount of white particles may be emitted. This is also normal.

## Cleaning Instructions

1. Turn off the switch, unplug the appliance, and allow it to cool for more than 60 minutes.
2. Ensure the water tank is emptied after each use.
3. Dry the product with a towel and store it in a dry space.
4. Always ensure the steam outlet is clean and free from blockages.
5. After long-term use, dirt may appear on the steam outlet and panel. Use a clean wool towel dipped in a water and vinegar mixture (1:1) to remove surface dirt.

## Troubleshooting

Problem	Solution
The garment steamer does not generate steam.	Check that the water level and tank are properly loaded. Verify whether the indicator light is on. Keep the garment steamer in an upright position.
Water is leaking from the tank.	Ensure the water does not exceed the maximum water level. Confirm that the water tank filling plug is installed correctly.
The steam engine produces a loud hum or a pumping sound during operation.	Check the water level. If there is no water or the water level is low, add water to the tank.

## Disposal

This product must not be disposed of as unsorted household waste. It is important to separate such waste for proper treatment and recycling, in compliance with local waste management regulations.



## **Warranty**

Products that you buy directly from our **Green Lion** website or shop come with a 24-month warranty.

When you buy **Green Lion** products from any of our approved sellers, you only get a 12-month warranty. If you want to extend this warranty, go to our website at <https://www.greenlion.net/warranty> and fill out the form with your information. Don't forget to upload a picture of the product too. After we've checked and accepted your request, we'll send you an email to confirm that your product's warranty has been extended.

For more info, please check:

<https://www.greenlion.net/warranty>

## **Contact Us**

If you have any questions about this Privacy Policy, please contact us at:

Website: <https://www.greenlion.net/>

Sales: [sales@greenlion.net](mailto:sales@greenlion.net)

Service Support: [Support@greenlion.net](mailto:Support@greenlion.net)

Telegram: [@greenlion\\_global](https://t.me/greenlion_global)

Instagram: [@greenlion\\_global](https://www.instagram.com/greenlion_global)