



Green Lion
Vintage Iron with
Instant Heat Technology

SKU: GNVNTGIRNBK

Model No: BX144

Table of Contents

Specifications	2
Safety Instructions	2
Instructions for First Use	4
Schematic View	4
Dry Ironing	5
Mode Setting Guide	5
After Ironing	5
Cleaning and Maintenance	5
Warranty	6
Contact Us	6

Specifications

Model No	BX144
Material	Stainless steel + ABS +PBT
Rated Power	1000W
Voltage	240-220v, 60-50Hz
Function	Dry
Sole Plate	Non-Stick
Sole Plate Size	10.8×20.8cm
Cord Length	1.7m UK plug
Product Size	11.0×10.8×24.3cm
Product Weight	500g

Safety Instructions

1. The appliance should not be used by children and persons with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they are supervised or have been given instruction concerning the use of the appliance.
2. Children should be supervised to ensure that they do not play with the appliance.
3. Instructions include the operating times and speed settings for accessories.
4. The instructions provide details on how to clean surfaces.
5. Switch off the appliance and disconnect it from the power supply before changing accessories or contacting the parts of the device.
6. This appliance is intended for use in household and similar applications, such as staff areas in shops and other similar environments, farmhouses, by clients in hotels, motels, and other residential-type environments, and bed-and-breakfast type environments.

7. Ensure that the power source is compatible with the value specified on the rating label.
8. Use the iron only for its intended purposes as described in the instruction manual.
9. Always supervise the iron when it is used near children.
10. Do not leave the iron unattended while it is connected to the power supply or placed on an ironing board. Burns can occur from contact with hot metal parts, hot water, or steam.
11. Keep the iron out of reach of children.
12. Always unplug the iron from the mains electrical supply before:
 - * Cleaning
 - * Filling with water or emptying the water tank
 - * Immediately after use
13. Never operate the iron if it has a damaged power cord or plug, or if it has been dropped or damaged in any way. To avoid the risk of electric shock, do not disassemble the iron. Instead, take it to a qualified serviceman for professional repair and inspection.
14. Avoid allowing the cord to come into contact with hot surfaces.
15. To minimize the risk of electric shock, never immerse the iron in water or any other liquids.
16. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent, or a similarly qualified person to prevent any hazards.
17. Never leave the iron unattended while it is connected to the power supply.
18. Disconnect the iron by removing the plug from the socket before filling the water reservoir.
19. Always place the iron on a stable surface during use.
20. Ensure that the surface on which the iron's stand is placed is stable.
21. Do not use the iron if it has been dropped, shows visible signs of damage, or is leaking.

Instructions for First Use

1. The iron has been pre-greased, and as a result, it may emit a slight smoke when switched on for the first time. This will stop after a short period.
2. Before using for the first time, remove any stickers or protective foil from the soleplate.
3. Clean the soleplate with a soft cloth.
4. Keep the soleplate smooth by avoiding hard contact with metal objects (such as clothes racks, buttons, and zippers).

Schematic View



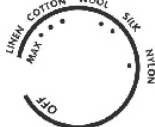



- A. Body
- B. Up Cover
- C. Thermostat Dial
- E. Skirt
- D. Power Indicator Light
- F. Soleplate



Dry Ironing

1. Before using the iron, sort clothes according to their care labels.
2. Start by ironing clothes that require a lower temperature (such as synthetic fabrics, silk, etc.), as the iron heats up faster than it cools.
3. Follow with clothes that require higher temperatures (such as wool, cotton, and linen).
4. Stand the iron upright and set the thermostat dial to the "MIN" position.
5. Plug in the iron and adjust the temperature by turning the thermostat dial.
6. Wait until the indicator light goes off, indicating that the desired temperature has been reached.

Mode Setting Guide

Caution  : Please note that the symbol  on the label indicates that this item should not be ironed.			
Instructions on the Label	Type of Fabric	Thermostat Setting	
	Nylon Silk	<div>MIN</div> <div>↑</div> <div>MAX</div>	
	Wool		
	Cotton		
	Linen		

Caution: If the fabric contains various types of fibers, always select the lowest ironing temperature suitable for the fiber composition.

After Ironing

Unplug the iron from the outlet socket.

Cleaning and Maintenance

1. Before cleaning, remove the plug from the socket and allow the iron to cool down completely.

2. Wipe the soleplate with a damp cloth and a non-abrasive (liquid) cleaner.
3. If fibers are stuck to the soleplate, use a damp cloth with vinegar to clean them off.
4. Do not use strong acids or alkalis to avoid damaging the soleplate.
5. Stand the iron on its end and let it cool down thoroughly.

Warranty

Products that you buy directly from our **Green Lion** website or shop come with a 24-month warranty.

When you buy **Green Lion** products from any of our approved sellers, you only get a 12-month warranty. If you want to extend this warranty, go to our website at <https://www.greenlion.net/warranty> and fill out the form with your information. Don't forget to upload a picture of the product too. After we've checked and accepted your request, we'll send you an email to confirm that your product's warranty has been extended.

For more info, please check:
<https://www.greenlion.net/warranty>

Contact Us

If you have any questions about this Privacy Policy, please contact us at:

Website: <https://www.greenlion.net/>

Sales: sales@greenlion.net

Service Support: Support@greenlion.net

Telegram: [@greenlion_global](https://t.me/greenlion_global)

Instagram: [@greenlion_global](https://www.instagram.com/greenlion_global)