

LéPRESSO



LePresso

**Breakfast Trio Toaster,
Drip Coffee, and Kettle**

SKU: LPCFFM0009-BK

Table of Contents

[A] Toaster	2
A.1 Safety Instructions	2
A.2 Toaster's Schematic View	4
A.3 Toaster's Initial Setup	4
A.4 Instructions for Using the Toaster	4
A.5 Caution	6
A.6 Cleaning the Toaster	6
[B] Drip Coffee Machine	7
B.1 Safety Instructions	7
B.2 Coffee Machine's Schematic View	9
B.3 Coffee Machine's Initial Setup	10
B.4 Instructions for Using the Coffee Machine	10
B.5 Cleaning the Coffee Machine	11
B.6 Descaling	11
B.7 Tips for Making Coffee	12
[C] Kettle	12
C.1 Safety Instructions	12
C.2 Kettle's Schematic View	15
C.3 First Time Using the Kettle	15
C.4 Instructions for Using the Kettle	15
C.5 Boil-Dry Protection Feature	16
C.6 Cleaning the Kettle	16
C.7 Descaling	17
Specifications	18
Disposal	19
Warranty	19
Contact Us	19

Before installing and using the product, please carefully read this User Manual to guarantee correct usage and keep it secure for future reference.

[A] Toaster



A.1 Safety Instructions

 
1. Read all instructions before use.
2. Keep out of the reach of children, infants, and pets.
3. Ensure the appliance is connected to a power supply that matches the voltage specified on the rating label.
4. Avoid touching hot surfaces and use only the handles or knobs for operation.
5. To prevent electrical shock, do not immerse the cord, plug, or any part of the appliance in water or any other liquid.
6. Supervision is necessary when the appliance is operated near children.
7. Unplug the appliance from the outlet when not in use and before cleaning.
8. Do not operate any appliance with a damaged cord or plug, or if it appears to be malfunctioning.
9. If the main cord is damaged, it must be replaced by an authorized service agent.
10. Do not allow the cord to hang over the edge of a table or counter, or touch hot surfaces.
11. Avoid placing the appliance on or near a hot gas or electric burner, or inside a heated oven.

- 12.** Do not use the appliance for anything other than its intended use.
- 13.** Oversized foods, metallic foil packages, and utensils must not be inserted into the toaster as they may create a fire hazard or risk of electric shock.
- 14.** Keeping the bread in the oven for prolonged time may cause the bread to burn. Do NOT place the toaster under or near flammable materials such as curtains, and it must be monitored continuously.
- 15.** Using accessories not authorized by the manufacturer can result in injury.
- 16.** Avoid taking out the food from the toaster while it is operating to prevent accidental injuries.
- 17.** Always allow the bread to cool slightly after toasting before removing it to avoid burns.
- 18.** This appliance is equipped with a grounded plug. Please ensure that the wall outlet in your home is properly grounded.
- 19.** The appliance is not designed to be operated using an external timer or a separate remote-control system.
- 20.** Children aged 8 years and older, as well as individuals with reduced physical, sensory, or mental capabilities, or those lacking experience and knowledge, may use this appliance if they are supervised or properly instructed on its safe use and understand the potential hazards.
- 21.** Children should not play with the appliance. Cleaning and maintenance must not be performed by children unless they are at least 8 years old and supervised.
- 22.** Keep the appliance and its power cord out of reach of children younger than 8 years.
- 23.** When toasting small bread slices measuring less than 85mm in length, take extra care to prevent burns when removing the slices.
- 24.** Do not use the appliance outdoors.
- 25.** This appliance is intended for household and similar environments, including:

- * Staff kitchen areas in shops, offices, and other workplaces.
- * Farmhouses.
- * Guest use in hotels, motels, and other residential facilities.
- * Bed and breakfast establishments.

26. Retain these instructions for future reference.

A.2 Toaster's Schematic View

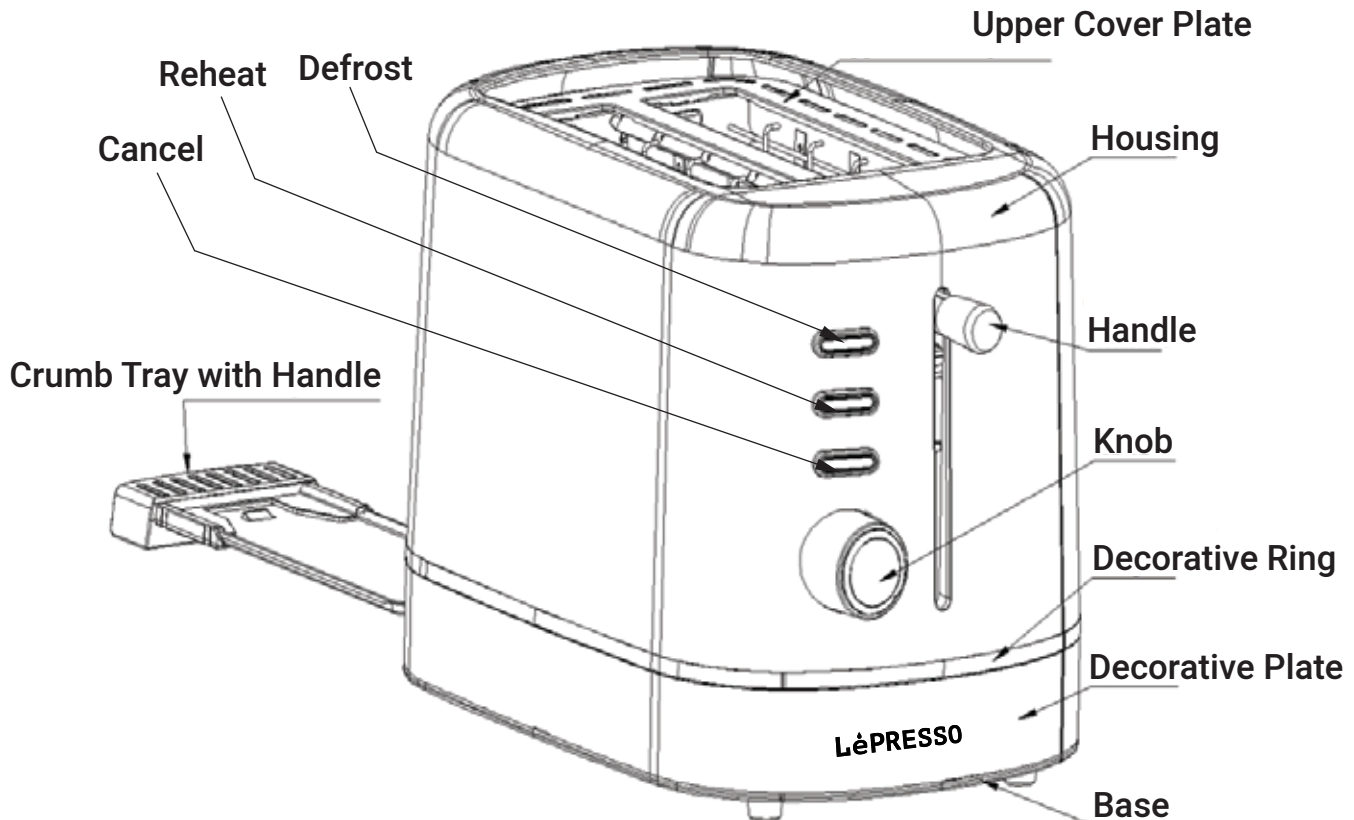

A.3 Toaster's Initial Setup

As there may be manufacturing residue or oil remaining on the toaster or heating element, it is normal for the appliance to emit an odor during the first use. This is expected and will not occur after a few uses. For the first time using the toaster, it is strongly recommended to operate the appliance without inserting a bread.

A.4 Instructions for Using the Toaster

1. Insert a slice of bread into the bread slot. A maximum of two slices can be inserted at a time.

Note: Only standard-sized bread slices should be used.

2. Ensure the crumb tray is properly placed before using the toaster.
3. Plug the power cord into an electrical outlet.
4. Adjust the control knob to the desired browning level.

Note:

a. The toaster offers seven levels, with the lowest setting producing a slightly toasted bread and the highest setting producing a dark toast. Setting "4" typically results in a golden color.

b. Toasting one slice will produce a darker shade compared to toasting two slices simultaneously at the same setting.

c. Continuous toasting may result in the second cycle producing a slightly darker shade than the first, even when using the same setting.

5. Push the handle downwards until it locks into position.

6. The "Cancel" indicator will light up, signaling that the toasting process has started.

7. Once the bread reaches the selected browning level, the handle will automatically spring up to its initial position, allowing you to safely remove the toasted breads.

8. The handle can only be fixed in the place when the toaster is connected to the power supply.

9. Cancel Function: During toasting, you may observe the progress of the browning. If the toast reaches your desired level, you can stop by cancelling the process.

Note: Never lift the handle to cancel the toasting process. Always use the CANCEL button.

10. Defrost Function: If the bread has been taken out of the refrigerator, set the knob to the desired browning level. Press the handle down vertically until it locks into place, then press the DEFROST button. The DEFROST indicator will illuminate, and the bread will be toasted to the set browning level.

11. Reheat Function: To reheat previously toasted bread, turn the knob to the reheating position. Press the handle down vertically until it locks. In reheating mode, the toasting time is fixed.

A.5 Caution

1. Always remove any protective wrapping before toasting.
2. If the toaster starts to emit smoke, press the Cancel button immediately to stop the toasting process and unplug the machine.
3. Avoid toasting food with extremely runny ingredients, such as butter.
4. Warning: Do NOT attempt to remove jammed bread while the toaster is plugged in. Always unplug the toaster before attempting to remove any jammed bread to prevent the risk of electric shock and damage to internal mechanisms or heating elements.
5. The bread slot is designed for regular bread slices only. For irregularly shaped bread, such as round or oversized slices, use a dedicated toast rack.
6. To achieve consistent browning, wait at least 30 seconds between each toasting cycle to allow the color control settings to reset.

A.6 Cleaning the Toaster

1. Disconnect the toaster from the power supply before beginning the cleaning process.
2. Wipe the exterior of the toaster using a soft, dry cloth once it has cooled completely.

Warning: Avoid using metal polishes or abrasive materials.

3. Remove the crumb tray located at the bottom of the toaster by pulling its handle.
4. Empty the tray thoroughly. If the toaster is used frequently, clean the crumb tray at least once a week to prevent the accumulation of bread crumbs.
5. Ensure the crumb tray is properly closed before using the toaster again.
6. When the toaster is not in use or during storage, place the power cord neatly under the base of the toaster.

[B] Drip Coffee Machine



B.1 Safety Instructions

- 1.** Read all instructions carefully before using the electrical appliance.
- 2.** Keep the appliance out of the reach of children, infants, and pets.
- 3.** Ensure that the outlet voltage matches the voltage specified on the rating label of the coffee maker.
- 4.** Do not operate the appliance if the cord or plug is damaged or if it is in an abnormal condition. If the main cord is damaged, it must be replaced by the manufacturer, a qualified service agent, or a certified professional.
- 5.** Avoid touching hot surfaces. Always use handles or knobs.
- 6.** To prevent fire, electric shock, or injury, do not immerse the cord, plug, or appliance in water or any other liquid.
- 7.** Unplug the appliance from the wall outlet when it is not in use or before cleaning. Allow the appliance to cool completely before removing, attaching, or cleaning components.
- 8.** Do not use accessories that are not recommended by the manufacturer, as this may lead to fire, electric shock, or personal injury.
- 9.** The container provided is intended solely for use with this appliance and must not be used on a stovetop or range.

- 10.** Do not clean the container with abrasive materials such as steel wool pads, cleansers, or similar products.
- 11.** Avoid draping the power cord over the edge of counters or in contact with hot surfaces.
- 12.** Position the coffee maker away from hot surfaces and open flames to prevent damage.
- 13.** Always remove the plug from the wall outlet by holding the plug itself, never by pulling on the cord.
- 14.** Use the appliance only as intended and keep it in a dry environment when not in use.
- 15.** Ensure supervision when the appliance is operating near children to prevent accidents.
- 16.** Avoid burns by steering clear of steam during use.
- 17.** Switch the appliance to "Off" and unplug it from the wall outlet when not in use.
- 18.** Never operate the coffee maker without water in the reservoir.
- 19.** Discontinue use of the carafe if it is cracked or damaged, as it is fragile and can break easily.
- 20.** The container should never be placed on a stove or any type of cooker.
- 21.** Do not place hot containers on wet or cold surfaces to avoid breakage.
- 22.** Do not use a container if it has a cracked, loose, or weakened handle to prevent accidents.
- 23.** Avoid cleaning the container with abrasive materials such as steel wool or scouring pads.
- 24.** Be cautious of scalding when the cover is removed during brewing cycles.
- 25.** Some parts of the appliance may become hot during use. Handle the appliance only by the knobs or handles.
- 26.** Do not leave the carafe on the warming plate when empty as it may crack.
- 27.** Do not place a hot container on surfaces that are too cold or too hot.

28. This appliance should not be used by individuals with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless under close supervision.

29. Ensure children are supervised to prevent them from playing with the appliance.

30. This appliance is suitable for use in homes and similar environments such as:

- * Staff kitchen

- * Areas in shops and offices

 
- * Farmhouses

- * Hotels, motels, and other residential settings, including bed and breakfast establishments

31. Do not use the appliance outdoors.

32. Retain these instructions for future reference.

B.2 Coffee Machine's Schematic View

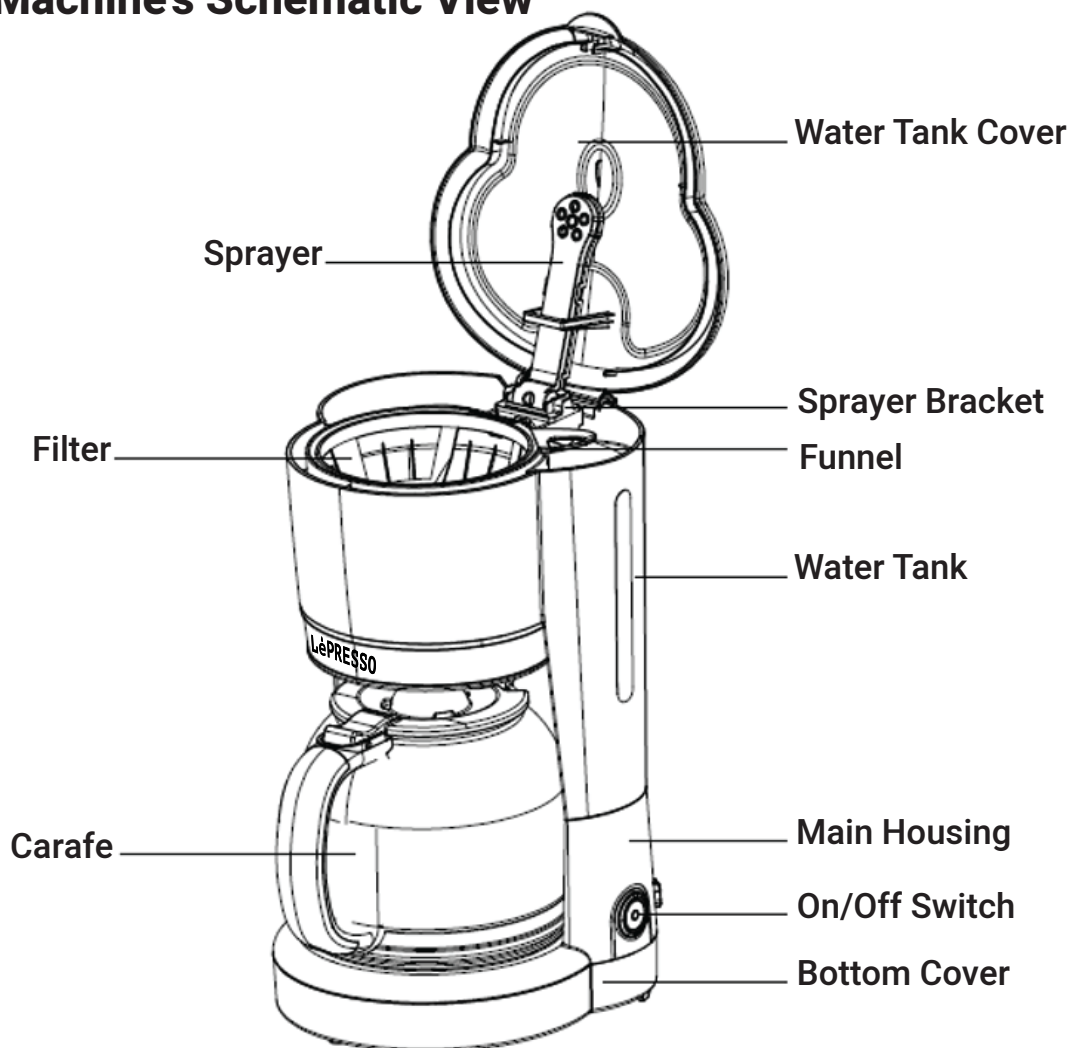

B.3 Coffee Machine's Initial Setup

- 1.** Before using the appliance for the first time, ensure all accessories are present and the unit is undamaged.
- 2.** Fill the unit with clean water up to the maximum level and run it several times without coffee powder.
- 3.** Dispose of the water and clean all detachable parts with warm water.

B.4 Instructions for Using the Coffee Machine

- 1.** Open the water tank lid and fill it with cold drinking water, ensuring the water level does not exceed the MAX mark as shown on the gauge.
- 2.** Extend the funnel holder, place the funnel, then insert a paper filter into the funnel, ensuring it fits properly.
- 3.** Add the coffee powder to the paper filter. Typically, a cup of coffee requires a level spoon of coffee powder. Ensure the funnel holder is securely closed until a click is heard.
- 4.** Place the carafe on the warming plate horizontally.
- 5.** Connect the power cord to the outlet.
- 6.** Start the machine by pressing the switch; the indicator light will turn on.
Note: You may remove the carafe briefly to serve coffee, as long as it does not exceed 30 seconds; otherwise, coffee may drip onto the warming plate.
- 7.** After brewing is complete, usually when the coffee stops dripping, remove the carafe to pour and serve the coffee.
Note: The coffee volume will be slightly less than the water added as some water is absorbed by the coffee grounds.
- 8.** If not serving immediately, the coffee maker can keep the coffee warm for up to 40 minutes before it automatically shuts off.
- 9.** Always switch off and unplug the coffee maker after use. Be cautious when handling the hot carafe.

B.5 Cleaning the Coffee Machine

Warning: Always disconnect the appliance from the electrical outlet and allow the warming plate to cool completely before cleaning. Do not submerge the unit or power cord in water or any other liquid.

1. After each use, clean all detachable parts in warm, soapy water.
2. Use a soft, damp cloth to clean the exterior surface of the appliance to remove any marks.
3. Water may accumulate above the funnel during use, causing drips. Wipe this area with a clean, dry cloth after each use to manage any dripping.
4. To clean the warming plate, gently wipe it with a damp cloth. Avoid using abrasive cleaners as they can damage the surface.
5. After cleaning, reassemble all parts and store the appliance for the next use.

B.6 Descaling

To maintain your coffee maker's efficiency, regularly remove mineral deposits caused by water.

1. We suggest using a solution of white vinegar and cold water; two tablespoons (30ml) of white vinegar in a carafe of cold water is optimal.
2. Fill the tank to the maximum level as shown on the water gauge with the vinegar solution.
3. Place the glass carafe on the warming plate.
4. Ensure the paper filter (without coffee) and funnel are correctly installed.
5. Turn on the coffee maker to start the descaling process with the vinegar solution.
6. Once the brewing for a single cup is complete, turn off the machine.
7. Let the solution sit for 15 minutes before repeating steps 3 to 5.
8. Restart the coffee maker and run it until the water tank is empty to flush out the solution.
9. Operate the coffee maker with clean water at least three times to rinse.

B.7 Tips for Making Coffee

1. Maintaining a clean coffee maker is crucial for brewing exceptional coffee. Clean your coffee maker regularly as directed in the "Care and Cleaning" section and always use fresh, cold water.
 2. Keep unused coffee powder in a cool, dry place. Once opened, reseal the package tightly and store in the refrigerator to preserve freshness.
 3. For the best coffee flavor, purchase whole coffee beans and grind them finely just before brewing.
 4. Avoid reusing coffee powder as it significantly diminishes the coffee's flavor. Freshly ground coffee provides the best taste right after brewing.
 5. Clean the coffee maker if you notice oiliness due to over-extraction, which occurs when oil is extracted from the coffee grounds during brewing.
- Note:** Using heavily roasted coffee beans might lead to more frequent oiliness in the brew.

[C] Kettle



 
C.1 Safety Instructions

1. Read all instructions carefully before use.
2. Keep out of the reach of children, infants, and pets.
3. Before plugging the kettle into the power source, ensure the voltage displayed on the appliance matches your home's voltage.

- 4.** Ensure the cord does not hang over the edge of a table or counter, and avoid contact with hot surfaces.
- 5.** Do not place the kettle on or near a hot gas or electric burner or inside a heated oven.
- 6.** Do not operate the kettle if it is empty to prevent damage to the heating elements.
- 7.** Always place the kettle on a stable and flat surface, out of children's reach, to prevent tipping and potential harm.
- 8.** To avoid fire, electric shock, or injury, do not immerse the cord, plugs, or the kettle itself in water or other liquids.
- 9.** Avoid contact with steam from the spout while the water is boiling or immediately after it has finished boiling.
- 10.** Pour boiling water slowly and steadily, taking care not to tip the kettle too quickly.
- 11.** Be cautious when refilling the kettle while it is still hot.
- 12.** This appliance can be used by children aged 8 years and older if they have received proper supervision or instructions on how to use it safely and understand the associated risks. Cleaning and maintenance should not be performed by children unless they are over 8 years old and supervised. Keep the appliance and its cord out of reach of children under 8 years of age.
- 13.** Appliances can be used by individuals with reduced physical, sensory, or mental abilities or those without experience and knowledge, provided they have received proper supervision or instructions on safe use and understand the risks involved.
- 14.** Children should be supervised to ensure they do not play with the appliance.
- 15.** Do not touch the hot surface. Use the handle or the button instead.
- 16.** The base is intended for use only with this appliance.
- 17.** Exercise extreme caution when moving an appliance that contains hot water.

- 18.** The appliance is not a toy. Do not allow children to play with it.
- 19.** The kettle is for household use only. Do not use it outdoors.
- 20.** Using accessories not recommended by the manufacturer may result in fire, electric shock, or injury.
- 21.** Unplug the kettle from the power outlet when not in use and before cleaning. Allow the kettle to cool before attaching or removing parts, and before cleaning.
- 22.** To disconnect, set any control to the "off" position, then remove the plug from the wall outlet.
- 23.** If the supply cord is damaged, it must be replaced by the manufacturer, its service agent, or a similarly qualified person to avoid any risk.
- 24.** Do not use the appliance for any purpose other than its intended use.
- 25.** The kettle should only be used with the provided stand.
- 26.** If the kettle is overfilled, boiling water may spill out.
- 27.** Always ensure the lid is securely closed and do not open it while the water is boiling. Scalding may occur if the lid is removed during the boiling process.
- 28.** This appliance is intended for use in household and similar environments, such as:
 - * Staff kitchen areas in shops, offices, and other work environments;
 - * Farmhouses;
 - * By guests in hotels, motels, and other residential-type settings;
 - * Bed and breakfast establishments.
- 29.** The appliance must not be immersed in water.
- 30.** If the kettle is overfilled, boiling water may be ejected.
- 31.** The appliance is only to be used with the stand provided.
- 32. Caution:** Ensure the appliance is turned off before removing it from the stand.
- 33. Warning:** Avoid spilling fluid on the connector.
- 34. Warning:** Misusing the product may result in injury.
- 35. Warning:** The heating element remains hot even after use.
- 36.** Keep these instructions for future reference.

C.2 Kettle's Schematic View

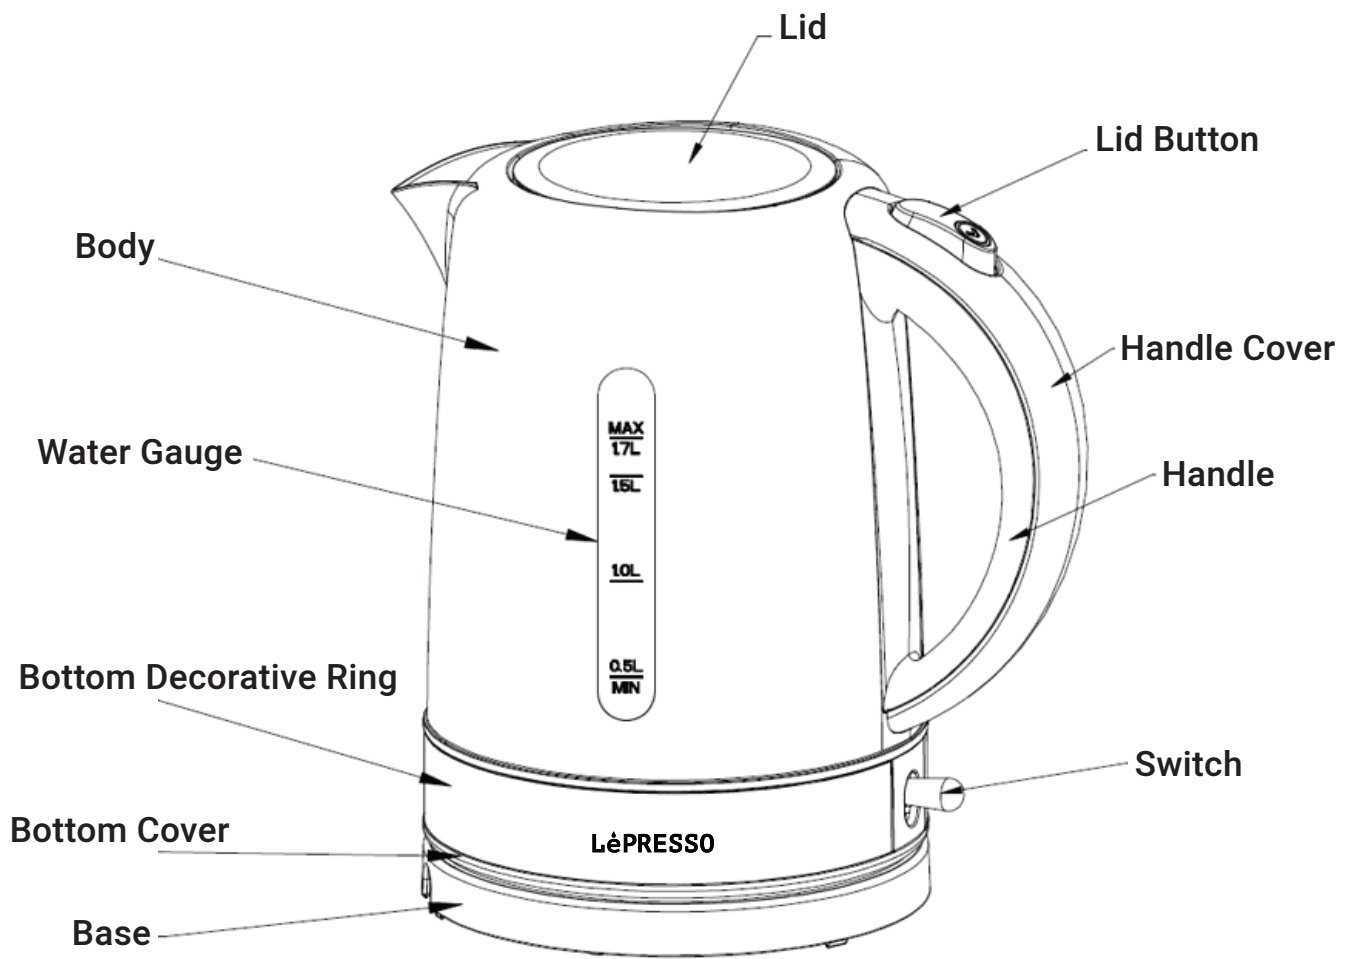

C.3 First Time Using the Kettle

If you are using the kettle for the first time, it is recommended to clean it before use by boiling the maximum capacity of water once, then discarding the water twice. Wipe the surface with a damp cloth.

Note: The maximum capacity of the kettle is 1.7L.

C.4 Instructions for Using the Kettle

1. Place the kettle on a flat surface.
2. To fill the kettle, remove it from the power base and open the lid by pressing the lid release button.
3. Fill the kettle with the desired amount of water, ensuring the water level is between the Min and Max marks.
4. Close the lid securely. Too little water may cause the kettle to switch off before the water boils.

Warning: Do not overfill the kettle. Water may spill from the spout when boiling.

5. Ensure the lid is firmly in place before plugging the kettle into the power outlet.
6. Position the kettle on the power base.
7. Plug the power cord into a power outlet.
8. Press the switch down, and the indicator will light up, signaling that the kettle is boiling.
9. The kettle will automatically turn off once the water has boiled.
10. If necessary, wait 30 seconds before pressing the switch again to re-boil the water.
11. You can also stop the boiling process at any time by lifting the switch or removing the kettle from the power base.
12. The kettle will not re-boil until the switch is pressed again. The kettle can be stored on the power base when not in use.

Caution:

1. Ensure the switch is free of obstructions and the lid is firmly closed. The kettle will not turn off if the switch is restricted or if the lid is open.
2. Pour carefully, as boiling water may cause scalding. Also, do not open the lid while the water is still hot.
3. Always disconnect the power supply when not in use.

C.5 Boil-Dry Protection Feature

If the kettle is accidentally operated without water, the boil-dry protection function will automatically turn off the power. In this case, allow the kettle to cool before filling it with cold water and re-boiling.

C.6 Cleaning the Kettle

Warning: Always disconnect the appliance from the power outlet and allow it to cool completely before cleaning.

- 1.** Never immerse the kettle, power cord, or power base in water, and avoid allowing moisture to contact these parts.
- 2.** Wipe the exterior of the kettle with a damp cloth or cleaner. Never use harsh or toxic cleaners.
- 3.** Remember to clean the filter regularly. To make cleaning easier, detach the filter by pressing the tab inside the kettle, then replace it after cleaning.
- 4.** Do not use chemical, steel, wooden, or abrasive cleaners on the outside of the kettle to prevent damage to the finish.
- 5.** When not in use or for storage, the power cord can be wound underneath the kettle.

C.7 Descaling

Your kettle should be descaled periodically, as mineral deposits from tap water can accumulate at the bottom, reducing its efficiency.

- 1.** You can use a commercially available descaling material and follow the instructions on the package, or alternatively, use white vinegar following these steps:
- 2.** Fill the kettle with 3 cups of white vinegar, then add water to cover the bottom of the kettle completely.
- 3.** Leave the solution in the kettle overnight.
- 4.** Discard the mixture, then fill the kettle with clean water to the maximum level, boil the water, and discard it.
- 5.** Repeat this process several times until the vinegar odor has been completely removed.
- 6.** Any remaining stains inside the spout can be cleaned by rubbing with a damp cloth.

Specifications

Toaster	
Voltage	220-240V / 50-60Hz
Power	720-850W
Capacity	2 Slices
Body Material	Plastic, Stainless Steel
Features	Reheat, Defrost, Browning Levels, Removable Crumb Tray
Drip Coffee Maker	
Voltage	220-240V / 60-50Hz
Power	900W
Capacity	1.5L
Body Material	Plastic, Stainless Steel
Features	Nylon Filter, Auto Shut Off, Keep Warm Function
Kettle	
Voltage	220-240V / 50-60Hz
Power	1850-2200W
Capacity	1.7L
Body Material	Plastic, Stainless Steel
Features	Stainless Steel Elements, Strix Controller, Overheating Protection, Light Indicator

Disposal



Please remember to follow local regulations and dispose of non-working electrical equipment at an appropriate waste disposal center.

Warranty

Products that you buy directly from our **LePresso** website or shop come with a 24-month warranty.

The 24-month warranty applies to products purchased directly from our **LePresso** website or store. If **LePresso** products are bought from any of our verified retailers, then the product is eligible for only a 12-month warranty. To extend your product's warranty, visit our website <https://www.lepresso.com/warranty> and fill in your details in the provided form along with an uploaded picture of the product to process your request. Once approved, you will receive a confirmation email of the extended product warranty. Upload the required information within 48 hours of purchase to be eligible for a 24-month warranty period.

For more info, please check:

<https://www.lepresso.com/warranty>

Contact Us

If you have any questions or concerns about our Shipping and Returns Policy, please contact us at: info@lepresso.com

Website: <https://www.lepresso.com/>

Instagram: [lepresso_official](#)