

LèPRESSO



LePresso

**Duo Brew Coffee and Tea Maker  
With a Glass Jar and  
Keep-Warm Mode**


SKU: LPCFFM0021

# Table of Contents


<b>Schematic View</b>	<b>2</b>
<b>[A] Coffee Maker</b>	<b>2</b>
<b>[B] Tea Maker</b>	<b>2</b>
<b>Safety Instructions</b>	<b>3</b>
<b>Instructions for Use</b>	<b>4</b>
<b>[A] Using the Machine for the First Time</b>	<b>4</b>
<b>[B] To Make Coffee or Tea</b>	<b>4</b>
<b>Cleaning and Maintenance</b>	<b>5</b>
<b>Descaling</b>	<b>5</b>
<b>Environmental Tip</b>	<b>6</b>
<b>Caution</b>	<b>6</b>
<b>Disposal</b>	<b>7</b>
<b>Specifications</b>	<b>7</b>
<b>Warranty</b>	<b>8</b>
<b>Contact Us</b>	<b>8</b>

# Schematic View

## [A] Coffee Maker

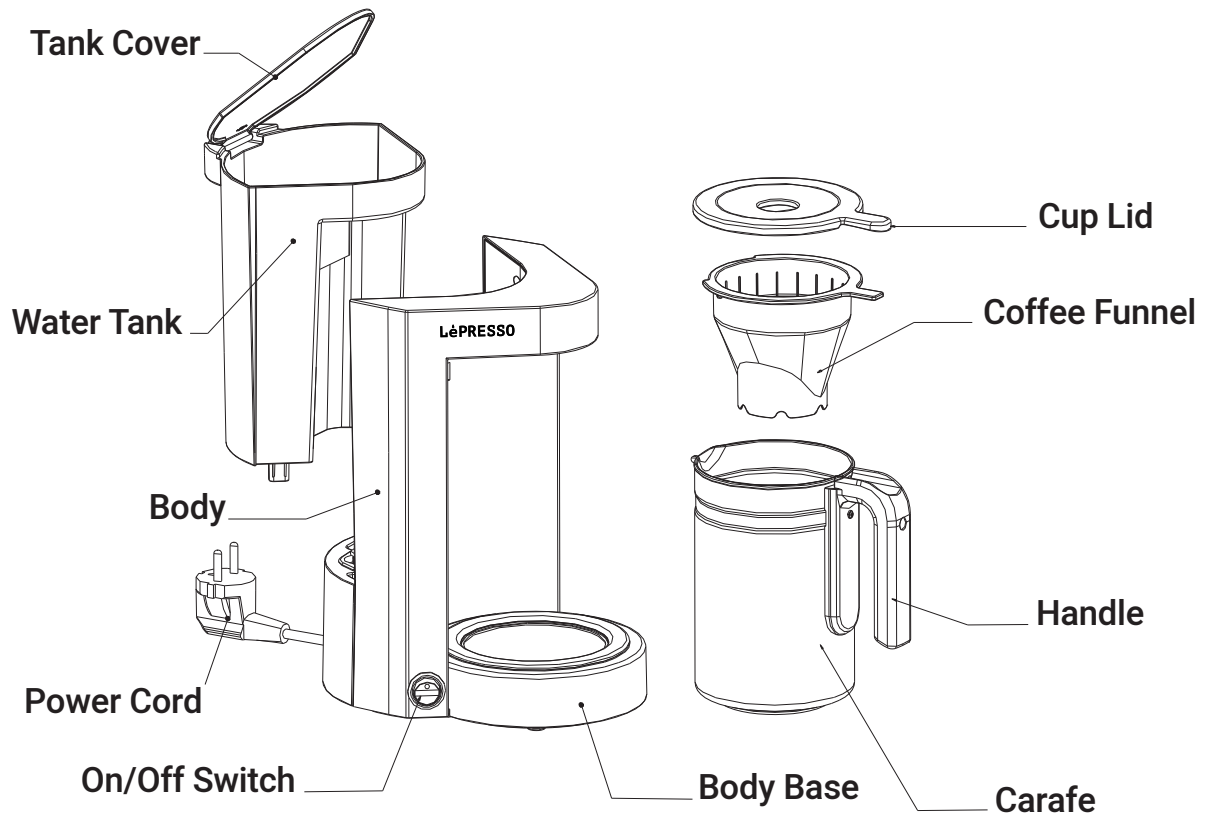

## [B] Tea Maker

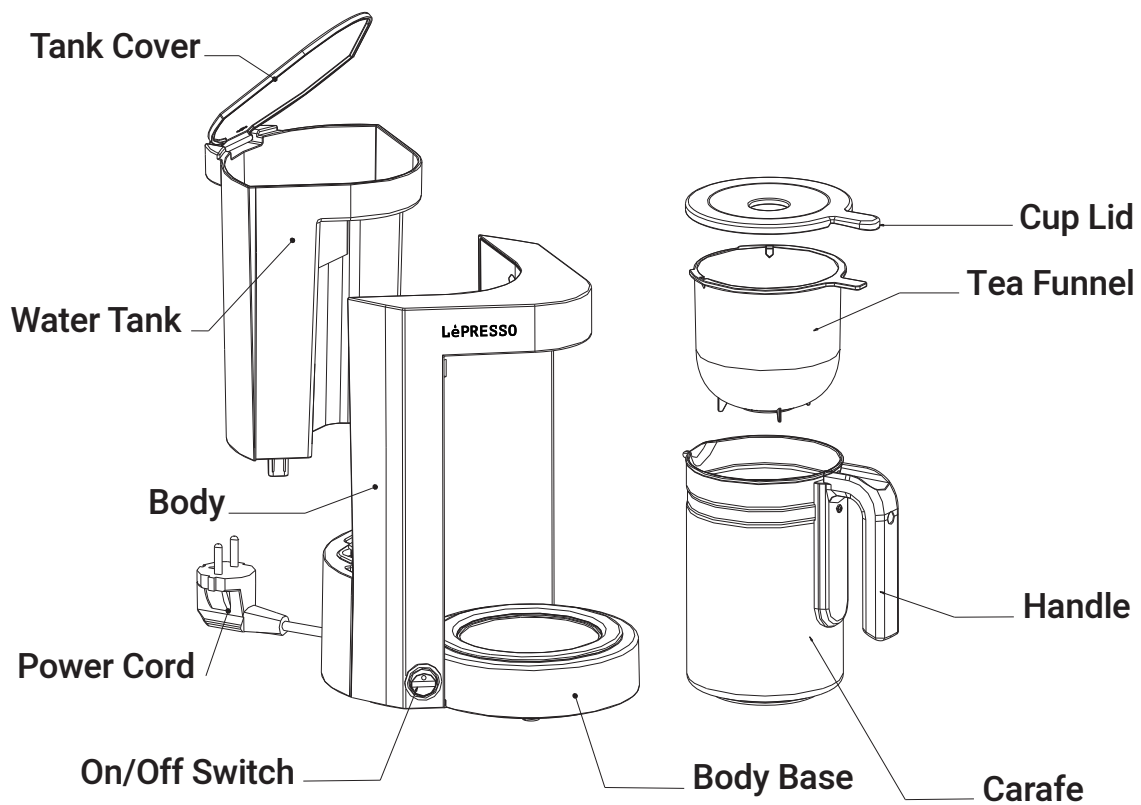

# Safety Instructions

When using electrical appliances, always follow basic safety precautions to minimize the risk of fire, electrical shock, or personal injury.

- 1.** Read all instructions carefully before use.
- 2.** Ensure that the outlet voltage matches the voltage specified on the rating label of the tea and coffee maker combination.
- 3.** Do not immerse the appliance, cord, or plug in water or any other liquid.
- 4.** Unplug the appliance when not in use and before cleaning.
- 5.** Do not operate the appliance if the cord or plug is damaged, or if the appliance is in an abnormal condition. If the power cord is damaged, it must be replaced by a service agent, or a qualified professional.
- 6.** The use of accessories not recommended by the manufacturer may result in fire, electric shock, or personal injury.
- 7.** Do not allow the cord to hang over the edge of a table or counter, or allow it to come into contact with hot surfaces.
- 8.** To disconnect, remove the plug from the wall outlet by holding the plug. Never pull on the cord.
- 9.** Do not use the appliance for purposes other than its intended use, and always place it in a dry environment.
- 10.** Do not leave the tea and coffee maker unattended while it is operating. Keep it out of reach of children.
- 11.** Take care to avoid burns from steam.
- 12.** Do not touch hot surfaces. Use only the handles or knobs.
- 13.** Never use the appliance if the carafe shows any signs of cracks. Only use the carafe with this appliance, as it is fragile.
- 14.** Never operate the tea and coffee maker combination without water in the reservoir.
- 15.** Always place the appliance on a stable, flat surface.

- 16.** Do not use the appliance outdoors.
- 17.** The coffee maker should not be placed inside a cabinet while in use.
- 18.** Keep away from children, infants, and pets.
- 19.** Keep these instructions for future reference.

## Instructions for Use

Please read these operating instructions carefully before using the tea and coffee maker combination. By following them closely and paying special attention to the safety instructions, you will ensure that this appliance continues to make perfect tea and coffee for years to come.

### **[A]** Using the Machine for the First Time

- 1.** Before making coffee or tea, it is recommended to run the tea and coffee maker combination once with water only (without coffee or tea).
- 2.** Insert the plug into the socket.
- 3.** Fill the carafe with cold water. Open the tank cover, pour water into the water tank, and then close the cover securely.
- 4.** Place the carafe back in its original position.
- 5.** Start the brewing process by pressing the On/Off switch.

### **[B]** To Make Coffee or Tea

- 1.** Open the tank cover and fill the water tank with the desired amount of water, based on the number of cups of coffee or tea you wish to prepare.
- 2.** Ensure that the water level does not exceed the "Max" level mark inside the water tank.
- 3.** Close the tank cover.
- 4.** The water level displayed in the carafe will indicate the number of cups.
- 5.** To make coffee: Open the coffee compartment lid and add ground

coffee to the permanent filter or a suitable paper filter. (Use 7-6 g of medium-fine ground coffee per cup).

**6.** To make tea: Add ground tea to the tea funnel. (Use 3-2 g of medium-fine ground tea per cup).

**7.** Ensure the carafe is placed properly in its position.

**8.** Turn the appliance on. The pilot light will illuminate to indicate that the unit is powered on.

**9.** Once the brewing process is complete, turn off the appliance and remove the carafe.

## Cleaning and Maintenance

**1.** Always disconnect the appliance from the power source before cleaning.

**2.** Never immerse the appliance in water.

**3.** Clean the appliance with a damp cloth only.

**4.** The carafe can be cleaned with warm water, mild dishwashing liquid, and a soft brush. Do not clean the carafe in a dishwasher.

## Descaling

To ensure that your tea and coffee maker combination continues to produce perfect coffee or tea, regular descaling is necessary. The frequency of descaling depends on the water hardness in your area and how often the appliance is used. If you use your tea and coffee maker combination once or twice a day, follow these descaling guidelines:

Soft water: Every 6 months.

Medium water: Every 3-2 months.

Hard water: Every 8-6 weeks.

If you notice that the brewing time for a pot of coffee has significantly increased, it's a sign that the appliance may need descaling. The harder the water in your area, the more frequently the tea and coffee maker

combination should be descaled. You can check the water hardness at your local water supply office.

## Environmental Tip

When the appliance is no longer functional, it should be disposed of in a way that minimizes environmental impact. Please follow your local regulations for disposal, and in most cases, you can take the appliance to a local recycling center. Coffee grounds and filters can be disposed of in a compost bin.

## Caution

- 1.** Ensure that the electrical voltage matches the voltage specified on the label at the bottom of the appliance.
- 2.** Always use cold water.
- 3.** Make sure the carafe is properly positioned when brewing coffee or tea.
- 4.** After each brewing process, turn off the appliance and allow it to cool for about 5 minutes before refilling with cold water.
- 5.** Always turn off the appliance after use.
- 6.** Disconnect the appliance from the power source before cleaning.
- 7.** Keep the appliance out of reach of children.
- 8.** To turn off the appliance, use the On/Off switch.
- 9.** The control lamp will go out when the appliance is turned off.
- 10.** This appliance is not intended for use by individuals (including children) with reduced physical, sensory, or mental capabilities, or by those lacking experience or knowledge, unless they are supervised or instructed by someone responsible for their safety.
- 11.** Children should be supervised to ensure they do not play with the appliance.
- 12.** The appliance must not be immersed in water.

**13.** This appliance is intended for use in households and similar environments, including:

- Staff kitchens in shops, offices, and other workplaces
- Farmhouses
- Hotels, motels, and other residential-type environments
- Bed and breakfast-type establishments

## Disposal



Do not dispose of this product as unsorted municipal waste. It is important to collect such waste separately for proper treatment and recycling.

## Specifications

Rated Voltage	220-240V
Rated Frequency	50-60Hz
Rated Power	730-870W
Water Tank Capacity	750mL
Power Plug	UK 3-Pin
Brewing Temperature	≥75°C
Keep Warm Temperature	≥72°C



## Warranty

Products that you buy directly from our **LePresso** website or shop come with a 24-month warranty.

The 24-month warranty applies to products purchased directly from our **LePresso** website or store. If **LePresso** products are bought from any of our verified retailers, then the product is eligible for only a 12-month warranty. To extend your product's warranty, visit our website <https://www.lepresso.com/warranty> and fill in your details in the provided form along with an uploaded picture of the product to process your request. Once approved, you will receive a confirmation email of the extended product warranty. Upload the required information within 48 hours of purchase to be eligible for a 24-month warranty period.

For more info, please check:

<https://www.lepresso.com/warranty>

## Contact Us

If you have any questions or concerns about our Shipping and Returns Policy, please contact us at: [info@lepresso.com](mailto:info@lepresso.com)

Website: <https://www.lepresso.com/>

Instagram: [lepresso\\_official](https://www.instagram.com/lepresso_official)