

LéPRESSO



LePresso


**Brew Time Drip Coffee System
with Multiple Brewing Modes**

SKU: LPCFFM0023

Table of Contents

Schematic View	2
Safety Precautions	2
Instructions for Use	4
[A] Using for the First Time	4
[B] Function Description	4
Specifications	5
Cleaning and Maintenance	5
Descaling	5
Time Setting	6
Environmental Tip	7
Caution	7
Disposal	7
Warranty	8
Contact Us	8

Schematic View

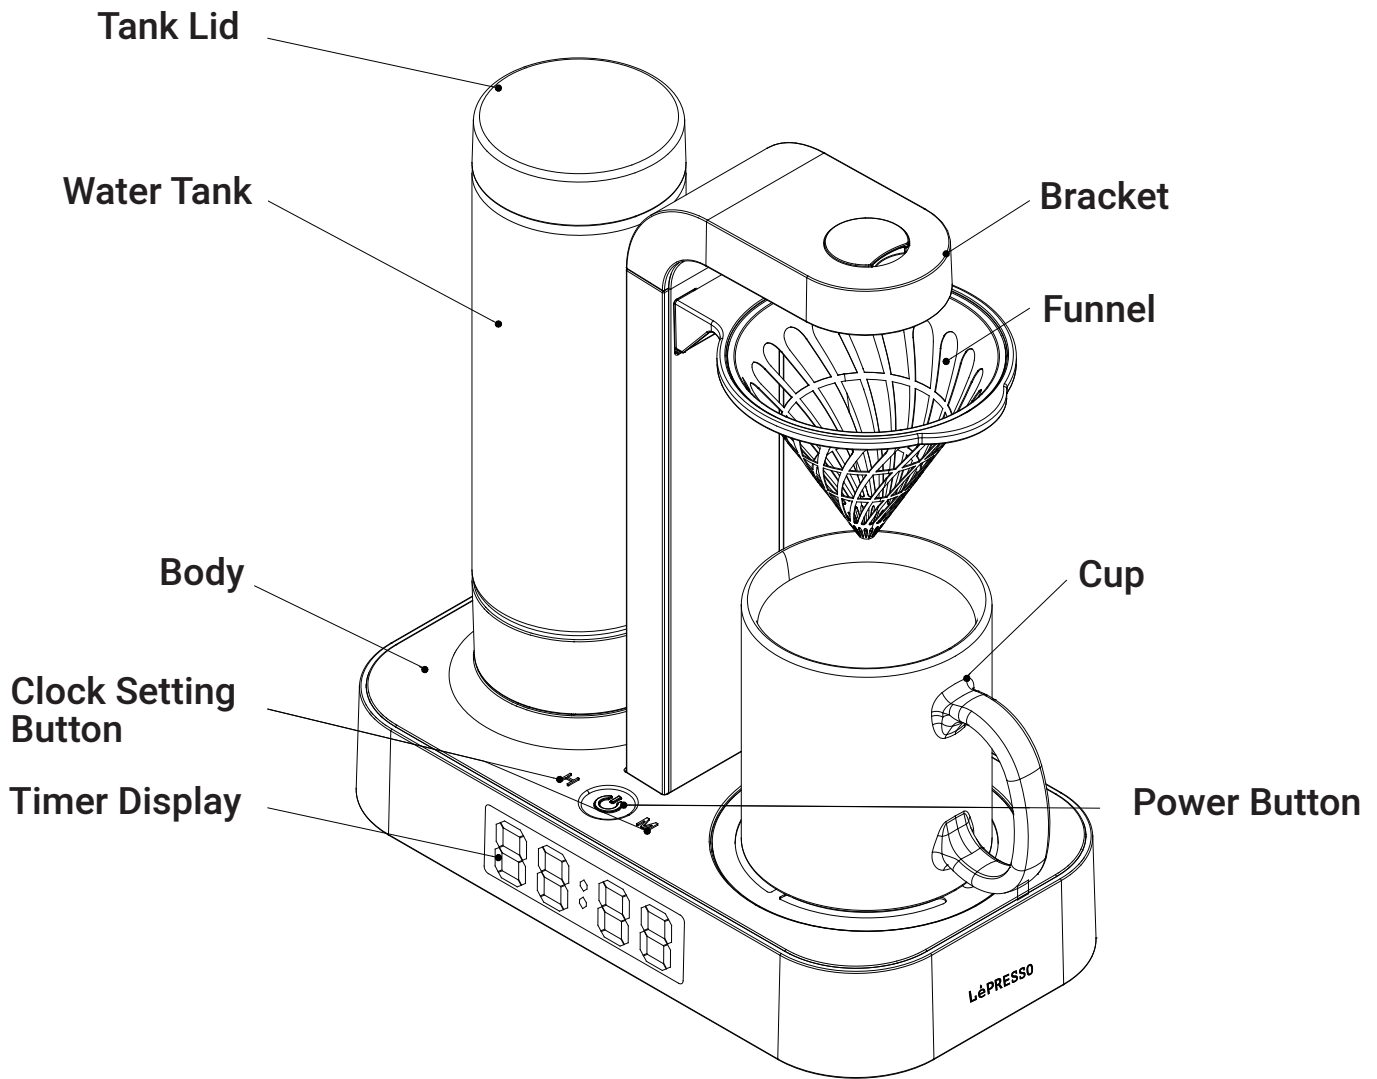

Safety Precautions

When using electrical appliances, always follow basic safety precautions to minimize the risk of fire, electric shock, or personal injury.

1. Read all instructions carefully before use.
2. Ensure the outlet voltage matches the voltage specified on the coffee maker's rating label.
3. Do not immerse the appliance, cord, or plug in water or any other liquids.
4. Unplug the appliance from the outlet when not in use and before cleaning.
5. Do not operate the appliance if the cord or plug is damaged, or if it is in an abnormal condition. If the power cord is damaged, it must be replaced

by a service agent, or a qualified technician.


- 6.** The use of unauthorized accessories is not recommended, as it may cause fire, electric shock, or personal injury.
- 7.** Do not allow the cord to hang over the edge of a table or counter, or come into contact with hot surfaces.
- 8.** To disconnect the appliance, always remove the plug from the wall outlet. Never pull on the cord.
- 9.** Use the appliance only for its intended purpose and ensure it is placed in a dry environment.
- 10.** Do not leave the coffee maker unattended while it is in use. This appliance is not intended for use by children.
- 11.** Be cautious of hot steam to avoid burns.
- 12.** Do not touch hot surfaces. Always use the handles or knobs.
- 13.** Do not use the appliance if the stainless steel jug shows any cracks. Only use the provided stainless steel jug with this appliance, and handle it with care, as it is fragile.
- 14.** Never operate the coffee maker without water inside.
- 15.** Place the appliance on a stable, flat surface.
- 16.** Do not use the appliance outdoors.
- 17.** This appliance is not intended for use by individuals (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been supervised or instructed on how to use the appliance by a responsible person.
- 18.** Keep away from children, infants, and pets.
- 19.** Children should be supervised to ensure they do not play with the appliance.
- 20.** Keep these instructions for future reference.
- 21.** Do not place the coffee maker in a cabinet while it is in use.
- 22.** This appliance is intended for household use only.

Instructions for Use

Please read these operating instructions carefully before using the coffee maker. By following them and paying special attention to the safety guidelines, you will ensure the coffee maker continues to produce perfect coffee.

[A] First-Time Use

1. Before brewing coffee for the first time, run the coffee maker with water only (without coffee grounds or filter paper).
2. Insert the plug into a power socket.
3. Unlock the tank lid and fill the water tank with cold water.
4. Place the cup in the correct position.
5. Start the brewing process by briefly pressing the ON/OFF button.

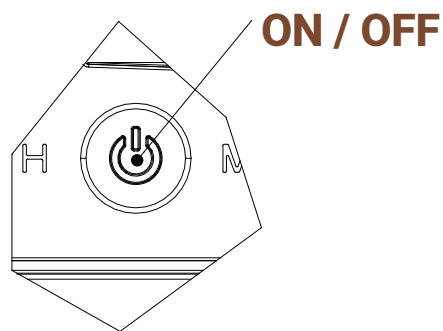

[B] Function Description

1. Unlock the cover and fill the water tank with the desired amount of water.
2. Ensure that the water does not overflow from the tank.
3. Place 15g of ground coffee into the appropriate paper filter before brewing.
4. Make sure the cup is correctly positioned under the coffee outlet.
5. Press the power button to turn on the appliance; the pilot lamp will illuminate to indicate the unit is on.
6. The appliance will automatically switch off after brewing.
7. Wait for one minute before removing the carafe from the machine, or first remove the filter basket and then the cup to prevent any drips onto the machine.

Specifications

Rated Voltage	220-240V
Rated Frequency	50-60Hz
Rated Power	600W
Water Tank Capacity	500mL
Cup Capacity	250mL
Power Plug	UK 3-Pin
Brewing Temperature	92°C to 98°C

Cleaning and Maintenance

1. Disconnect the appliance from the power source before cleaning.
2. Never immerse the appliance in water.
3. Clean the appliance with a damp cloth only.

Descaling

To ensure your coffee maker continues to produce perfect coffee, it is important to descale it periodically. The frequency of descaling depends on the hardness of the water in your area and how often you use the coffee maker. If you use your coffee maker once or twice a day, follow these guidelines for descaling:

- Soft water: every 6 months.
- Medium water: every 2–3 months.
- Hard water: every 6–8 weeks.


If the brewing time increases significantly, it is recommended to descale the coffee maker. The harder the water, the more frequently descaling will be needed. You can check the water hardness with your local water supplier.

Descaling Procedure:

1. Unlock the cover and fill the water tank with the desired amount of water.
2. Ensure the water does not overflow from the tank.
3. Remove the funnel.
4. Place a large cup (at least 600mL) in the correct position.
5. Press and hold the ON/OFF button for more than 3 seconds. The appliance will turn on, and the pilot lamp will flash to indicate that the unit is operating.
6. The appliance will automatically switch off after completing the descaling cycle.

Time Setting

1. The clock can be powered either by the plug or by three AAA batteries (3 pieces).
2. To activate the clock function, insert the plug into the socket or install the three AAA batteries. Once powered, the clock function will be displayed.
3. The appliance has a built-in clock function, which is independent of the coffee maker's main operation. To set the time, use the dedicated "H" (hour) and "M" (minute) buttons.

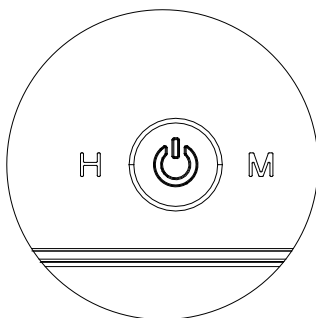

- a. Press and hold both the "H" and "M" buttons for more than 3 seconds to start the time-setting function.
- b. Press the "H" button briefly to increase the hours by 1.
- c. Press the "M" button to adjust the minutes.
- d. Once the correct time is set, press the ON/OFF button to confirm and exit the time-setting mode.

Clock Memory: The clock will continue to keep time even without being plugged in or having batteries, once the time has been set

Environmental Tip

When the appliance is no longer functioning, it should be disposed of in an environmentally responsible manner. Follow local disposal regulations in your area. In most cases, you can take the appliance to your local recycling center. Coffee grounds and filters can be disposed of in a compost container.

Caution

1. Ensure the electrical voltage matches the voltage specified on the label at the bottom of the appliance.
2. Use only cold water.
3. Make sure the cup is properly positioned when brewing coffee.
4. After each brewing cycle, switch off the appliance and allow it to cool down for about 5 minutes before refilling with cold water.
5. Always switch off the appliance after the brewing process is complete.
6. Disconnect the appliance from the power source before cleaning.
7. Keep the appliance out of reach of children.
8. To switch off the appliance, press the Off button.
9. The control lamp will go out to indicate that the machine is off.

Disposal



Do not dispose of this product with unsorted household waste. It must be collected separately for special treatment and recycling.

Warranty

Products that you buy directly from our **LePresso** website or shop come with a 24-month warranty.

The 24-month warranty applies to products purchased directly from our **LePresso** website or store. If **LePresso** products are bought from any of our verified retailers, then the product is eligible for only a 12-month warranty. To extend your product's warranty, visit our website **<https://www.lepresso.com/warranty>** and fill in your details in the provided form along with an uploaded picture of the product to process your request. Once approved, you will receive a confirmation email of the extended product warranty. Upload the required information within 48 hours of purchase to be eligible for a 24-month warranty period.

For more info, please check:

<https://www.lepresso.com/warranty>

Contact Us

If you have any questions or concerns about our Shipping and Returns Policy, please contact us at: **info@lepresso.com**

Website: **<https://www.lepresso.com/>**

Instagram: **[lepresso_official](#)**