

LéPRESSO



LePresso

**TÜRK Coffee Maker  
with Dual Mode**

SKU: LPCFFM0025

# Table of Contents

<b>Safety Precautions</b>	<b>2</b>
<b>Specifications</b>	<b>4</b>
<b>Instructions for Use</b>	<b>4</b>
<b>Tips for Brewing Coffee</b>	<b>5</b>
<b>Brewing Instructions</b>	<b>6</b>
<b>Cleaning and Maintenance</b>	<b>8</b>
<b>Descaling</b>	<b>9</b>
<b>Transportation Guide</b>	<b>9</b>
<b>Warranty</b>	<b>10</b>
<b>Contact Us</b>	<b>10</b>

Before installing and using the product, please carefully read this User Manual to guarantee correct usage and keep it secure for future reference.

## Safety Precautions

- 1.** Ensure that the voltage indicated on the product's nameplate matches the voltage in your area.
  - 2.** The machine should only be operated when plugged into a properly grounded electrical socket that complies with local regulations.
  - 3.** Avoid using extension cords that may supply incorrect voltage, as this could damage the machine.
  - 4.** Repairs to the appliance or its power supply should only be performed by authorized service personnel to ensure safety.
  - 5.** To prevent the risk of electric shock, do not clean the machine or the power cord with water.
  - 6.** The machine should only be operated when dry.
  - 7.** Avoid touching the plug with wet hands.
  - 8.** The appliance should be used by individuals who are informed, supervised, and instructed on how to operate it safely, understanding the risks involved.
  - 9.** This product should not be used by persons with physical or mental disabilities, children, or individuals with inadequate experience and knowledge, unless supervised by a responsible adult.
  - 10.** Always keep children under supervision when the appliance is in use and ensure that they do not play with it.
  - 11.** Keep the appliance and its power cord out of reach of children under 8 years of age, infants, and pets.
- Warning:** Keep children away from packing materials, as they can pose a choking hazard.
- 12.** This appliance is intended for use in the following places:
    - Kitchen areas in shops, offices, and other work environments.
    - Motels, hotels, and other residential locations used by clients.

- Sleeping areas and breakfast halls.

**13.** Do not use the appliance outdoors. Avoid exposure to temperatures at or below freezing.

**14.** Always use this appliance on a hard, flat, and level surface. Do not place it on the edge of a table or countertop, as even a small impact could cause the appliance to fall. Remember, your appliance may contain hot coffee.

**15.** Do not use this machine on or near hot surfaces, heat sources, flames, or steam (e.g., on top of a hot oven or heater stove).

**16.** Ensure the power cord does not hang over the edge of the table or countertop and come into contact with other appliances.

**17.** Do not leave the machine unattended during operation. It has a safety system to prevent boiling without water.

**18.** Always add water to the coffee pot before starting the brewing process. Never begin boiling the coffee without water.

**19.** Only place water, coffee, or sugar in the coffee pot. The coffee pot should not be used with any external heater (e.g., oven, microwave, etc.).

**20.** Serve brewed coffee in a cup, not directly from the coffee pot.

**21.** When handling or carrying the coffee pot, always use the handle.

**22.** Unplug the appliance when not in use, before cleaning, and allow the coffee pot to cool.

**23.** Always unplug the coffee maker when it is not in use for a long period or when malfunctioning, to prevent any danger.

**24.** Make sure to unplug the machine during cleaning and maintenance.

**25.** Be sure to remove any protective foils from the touch panel and side surfaces of the product before using it. The foil must be removed to ensure proper functioning of the touch panel keys during use.

**26.** Do not immerse the machine in water or place them in the dishwasher.

**27.** High temperatures in the dishwasher may damage the plastic components of the product. Instead, clean the body of the product using a damp cloth.

- 28.** Rinse the coffee pot with water and then wipe both the inner and outer surfaces dry with a soft cloth.
- 29.** Do Not Place in a Cabinet While in Use: Never place the ice coffee maker in a closed cabinet or enclosed space while it is in operation. Ensure that the appliance has adequate ventilation during use to prevent overheating and ensure safe operation.
- 30.** Safety Precaution If the supply cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons in order to avoid a hazard.
- 31.** Do not attempt to replace the supply cord yourself. Always contact a professional for any repairs or replacements to ensure safe operation and to prevent electrical hazards.

## Specifications

Rated Voltage	220-240V
Rated Power	700W
Rated Frequency	50-60Hz
Capacity	250mL (1 to 4 Cups)
Temperature	96°C
Power Plug	UK 3-Pin Plug
Net Weight	0.987Kg
Dimensions	14×17×24cm

## Instructions for Use

### **[A]** Before First Use

- 1.** Clean the main body of the appliance with a dry cloth.
- 2.** Fill pot with water up to the MAX level, run the machine.
- 3.** Discard the water and allow the appliance to cool.

### **Warning**

- 1.** Be aware that the coffee machine becomes hot during use. Avoid touching any hot surfaces. Use this appliance solely for making coffee.
- 2.** Do not use any other liquids or solutions for boiling or heating in this machine.

**Note:** The coffee pot of this Turkish coffee machine can make up to four cups of coffee per cycle.

## **[B]** Using the Coffee Maker

1. When you plug in your machine, the status light will turn green and a beep sound will be heard.

2. This coffee machine features two brewing functions: Variable Frequency Brewing Mode and Low Heat Brewing Mode.

2.1 When the Variable Frequency Mode is activated by pressing the switch, the indicator light will change from green to red, indicating rapid brewing.

2.2 In Low Heat Mode, the light changes from green to blue, signaling slow, low-temperature brewing.

3. To prepare Turkish coffee, fill the coffee pot with water according to the number of servings required.

**Note:** Use a teaspoon to measure the exact amount of coffee and sugar needed, ensuring to prevent clumping.

**Warning:** Do not exceed the maximum fill level marked on the coffee pot.

4. Place your appliance in the machine and press the start button. The status light will indicate a mode change from red to green or blue to green.

5. Once brewing is complete, the machine will emit a warning beep, and the status light will turn green.

6. After brewing, serve the coffee directly from the pot. Ensure you clean the coffee pot after every use.

7. Wash the inner surface with water, and dry both the inner and outer surfaces with a soft cloth.

## Tips for Brewing Coffee

Below you will find recommended measurements for preparing delicious Turkish Coffee:

**[A]** 60ml ( $\pm 5\%$ ) of water with one spoon of coffee powder

**[B]** 120ml ( $\pm 5\%$ ) of water with two spoons of coffee powder

**[C]** 180ml ( $\pm 5\%$ ) of water with three spoons of coffee powder

**[D]** 250ml ( $\pm 5\%$ ) of water with four spoons of coffee powder

### Note

1. Each coffee spoon included with your machine holds approximately 7-5 grams.
2. The amounts listed are intended for a single serving.
3. Adjust the coffee strength to your preference by varying the amount of coffee.
4. For the best results, use fresh coffee to achieve a delicious and foamy Turkish coffee.

## Suggested Ingredient Scale

	Water	Coffee	Sugar Content
Black coffee	250ml	1 Scale Spoon	No Sugar
Coffee with a little sugar	250ml	1 Scale Spoon	Half a cube sugar or half a teaspoon ground sugar
Coffee with a moderate amount of sugar	250ml	1 Scale Spoon	One cube sugar or a teaspoon ground sugar
Sweet coffee	250ml	1 Scale Spoon	One and half cube sugar or two teaspoon ground sugar

## Brewing Instructions

1. Plug in the appliance. The machine will automatically power on and the status light will turn green.
2. Based on the recommended measurements, first add the coffee, then the sugar, and finally water into the coffee pot. Gently stir the mixture using a spoon as illustrated in Figure 1.

**Note:** Ensure the interior of the coffee pot is clean before use to enhance the flavor of your coffee.

3. This appliance can brew coffee for up to four people at one time. Be careful not to fill the coffee pot beyond the MAX level mark with the water-coffee-sugar mixture to prevent overflow or inadequate brewing as shown in Figure 2.



**4. Positioning the Coffee Pot:** Securely place the coffee pot into the designated spot on the appliance as indicated in Figure 3.

**Note:** Ensure that the coffee pot is correctly positioned; otherwise, the appliance will not commence brewing.

**5. Starting the Brew:** Press the start button located on the front panel. Refer to Figure-4 for the button's exact location.

**6.** Upon activation, the appliance will emit a warning beep, signaling the start of brewing. The status light will change from red to green or blue to green, depending on the selected mode, as shown in Figure 5.



**7. Using Low-Temperature Mode:**

This mode is designed for gradual brewing, enhancing flavors and aromas.

Cups	Time
1	1 to 1.5min
2	2 to 3min
3	3 to 4min
4	4 to 5min

**Note:** The duration of brewing may vary depending on ambient and water temperatures, as well as the mains voltage. During subsequent uses, the brewing process may be quicker as the appliance heats up more efficiently.

**8.** Once the brewing process is complete, the appliance will emit a warning beep and the status light will change from red to green or blue to green, depending on the mode used. Disconnect the appliance from the power source to turn it off.

**Note:** The brewing duration may vary depending on ambient and water temperatures. In subsequent uses, the machine may heat more quickly.

**9.** Pour the coffee into a cup. To minimize the presence of foam and coffee grounds in your cup, gently shake the coffee pot before pouring. Refer to



Figure 6 for the pouring technique.

**10. Cancelling the Brew:** If you need to stop the brewing process at any time, simply press the start button again.



## Cleaning and Maintenance

**Warning:** Before cleaning, disconnect the appliance from the power source and allow the coffee pot to cool completely.

1. Remove the coffee pot from the appliance and rinse it under tap water.
2. Use a dry cloth to wipe the bottom, exterior, and sides of the pot thoroughly.
3. Wipe the main body and the external surfaces of the coffee pot, particularly around the energy transmission base, using only a dry cloth.

**Warning:**

**[a]** Do not immerse coffee maker in water.

**[b]** Do not put the appliance in the dishwasher.

4. Avoid using harsh chemical cleaners (such as bleach or hydrochloric acid) or abrasive materials (like metal utensils, hard sponges, or wire brushes) on any part of the appliance or its accessories. Only use cleaning products specifically recommended for this type of appliance.

**5. Cleaning Surfaces in Contact with Food:** To maintain hygiene and prevent contamination, clean all surfaces that come into contact with food or liquids, such as the drip tray, carafe, and coffee filter holder, after each use. Use a soft cloth or sponge with warm water and mild detergent. Do not immerse the appliance in water or any other liquid to prevent electrical components from being damaged. Avoid abrasive cleaners or scouring pads, which could scratch or damage the surfaces.

For a deeper clean, follow the detailed cleaning instructions in the manual. Regular cleaning will help maintain the appliance's performance and hygiene.

## Descaling

The buildup from the water used over time may accumulate inside the coffee pot, potentially reducing the performance of your appliance. To clean your appliance's coffee pot, you can use a descaling product designed specifically for electrical kitchen appliances, or you may opt for environmentally friendly solutions such as white vinegar. To clean with white vinegar, fill the base of the coffee pot with enough vinegar to cover it, ensuring thorough contact with areas affected by scale.

## Transportation Guide

- 1.** During handling and transportation, ensure your appliance remains in its original packaging to protect it from damage.
- 2.** Maintain the appliance in its normal position during transportation to prevent internal damage.
- 3.** Avoid dropping the appliance or exposing it to impacts.

## Warranty

Products that you buy directly from our **LePresso** website or shop come with a 24-month warranty.

The 24-month warranty applies to products purchased directly from our **LePresso** website or store. If **LePresso** products are bought from any of our verified retailers, then the product is eligible for only a 12-month warranty. To extend your product's warranty, visit our website **<https://www.lepresso.com/warranty>** and fill in your details in the provided form along with an uploaded picture of the product to process your request. Once approved, you will receive a confirmation email of the extended product warranty. Upload the required information within 48 hours of purchase to be eligible for a 24-month warranty period.

For more info, please check:

**<https://www.lepresso.com/warranty>**

## Contact Us

If you have any questions or concerns about our Shipping and Returns Policy, please contact us at: **[info@lepresso.com](mailto:info@lepresso.com)**

Website: **<https://www.lepresso.com/>**

Instagram: **[lepresso\\_official](#)**