

LèPRESSO



LePresso

**FOUR FROTH Milk Frother
with Temperature Control**

SKU: LPCFFM0027

Table of Contents

Safety Instructions	2
Specifications	4
Schematic View	4
Instructions for Use	5
Settings	6
Troubleshooting	8
Tips	8
Cleaning and Maintenance	10
Warranty	10
Contact Us	10

Safety Instructions

- 1.** Read all instructions, safeguards, and warnings before use. Failure to follow these instructions may result in injury or property damage.
- 2.** Keep out of the reach of children, infants, and pets.
- 3.** Use the appliance only on a countertop. Always place it on a stable, non-flammable, and level surface.
- 4.** This product is designed for household use only. Do not use it for commercial purposes or for anything other than its intended use.
- 5.** Ensure the power outlet voltage matches the voltage indicated on the rating label located under the appliance base.
- 6.** Do not operate the appliance when the pitcher is empty.
- 7.** Prevent liquid spills on the connector to avoid damage.
- 8.** To reduce the risk of fire, electric shock, or personal injury, do not immerse the power cord, plug, pitcher, or appliance base in water or any other liquid.
- 9.** Unplug the appliance when not in use and before cleaning. After using a heating program, allow the appliance to cool down completely before handling, disassembling, or cleaning.
- 10.** Regularly inspect the appliance and power cord. Do not use the appliance if the power cord or plug is damaged, or if the appliance malfunctions, is dropped, or is damaged in any way.
- 11.** Do not let the power cord hang over the edge of tables or counters, and do not allow it to touch hot surfaces.
- 12.** Do not place the appliance on or near a hot gas or electric burner, or in a heated oven.
- 13.** Fill the pitcher with milk only. Never fill it with oil or other liquids. Do not exceed the maximum fill lines for your desired setting, as hot liquid may overflow.

 
- 14.** Always operate the appliance with the lid securely in place. Do not remove the lid while frothing to avoid the risk of burns.
- 15.** Keep hands and utensils away from moving parts. Avoid contact with the inside of the pitcher during operation to prevent injury or damage.
- 16.** Some parts of the appliance become hot during use. Always use the handle to lift or carry the pitcher.
- 17.** Use caution when handling the appliance if it contains hot liquids to avoid spills or burns.
- 18.** To disconnect, press the Start/Cancel button to turn off the unit, then unplug the base from the power source. When unplugging, always hold the plug and pull it out of the outlet. Do not pull by the cord.
- 19.** Do not use the appliance outdoors. Avoid exposing the appliance to sun, wind, rain, or snow.
- 20.** Do not leave the appliance unattended during use.
- 21.** This appliance is not intended for use by children or individuals with reduced physical, sensory, or mental abilities. Close supervision is required when the appliance is used near children or such individuals. Children must not play with the appliance.
- 22.** Only use accessories recommended by the manufacturer. Using unauthorized accessories may cause fire, electric shock, or injury.
- 23.** Use the appliance exclusively with the base provided.
- 24.** Extension cords may be used with caution, provided the following guidelines are observed:
 - 25.** The electrical rating of the extension cord should be equal to or greater than the rating of the appliance.
 - 26.** Arrange the cord so it does not hang over countertops or tables to prevent it from being pulled or causing tripping hazards.

Specifications


Rated Power	500W
Rated Voltage	220-240V
Rated Frequency	50-60Hz
Heating Capacity	270mL (MAX)
Frothing Capacity	140mL (MAX)
Power Cord	UK 3-Pin Plug
Dimensions	157×108×210mm

Schematic View


1. Lid



 
2. Stirring Shaft



 
3. Frothing Paddle



 5. Fill Line Indicators (Interior)

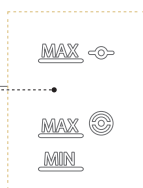

 4. Pitcher

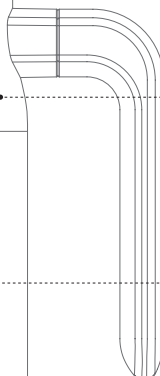


6. LED Display



7. Control Panel



 
8. Base

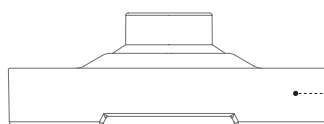

Instructions for Use

Set up Guide

 1. Remove the lid from the pitcher.
 2. Position the square end of the frothing paddle (stirring paddle for mode 3) over the shaft at the bottom of the pitcher.
 3. Rotate the paddle until it aligns with the shaft, then push it down until it is secure.
 4. For cold foam, thin foam, or thick foam, fill the pitcher to a level between the MIN and MAX ☉ lines.
 5. To warm milk or chocolate, fill the pitcher to a level between the MIN and MAX ☹ lines.
- Warning:** Overfilling may cause the milk frother to overflow during use. Avoid exceeding the MAX line.
6. Place the lid on the pitcher.
 7. Place the pitcher securely on the base.
 8. Connect the power cord to a 240-220V outlet.

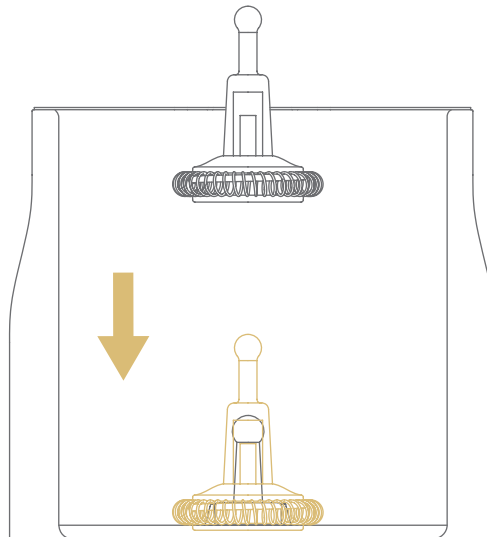

Notice: Do not attempt to froth if the liquid level is below the MIN fill line as indicated on the inside of the pitcher.





Warning: Do not remove the lid while the frothing paddle is in operation to avoid the risk of electric shock, personal injury, and/or property damage.

Settings





A. After connecting to the power supply, the indicator light on the control panel will light up, and the LED screen will display flashing numbers.

B. Mode and Temperature Selection





B.1 [Mode 1] Warm Thick Foam

1. Press the mode button  to select mode 1 .
2. The indicator light for this mode will turn on, while the other mode lights will turn off, and the temperature will default to 65°C.
3. Press the temperature button  to choose a temperature between 55°C and 70°C. The options are 60°C, 65°C, or 70°C.
4. Press the on/off button  to start the machine.
5. The machine will enter working status. The actual temperature of the detected liquid will be displayed on the LED screen, and the machine will begin working after 4 seconds.
6. After 90-60 seconds of operation, the machine will automatically stop once the desired temperature is reached.
7. The machine will then enter the heat preservation state.




B.2 [Mode 2] Warm Thin Foam

1. Press the mode button  to select mode 2 .
2. The indicator light for this mode will turn on, while the other mode lights will turn off. The temperature will default to 65°C.
3. Press the temperature button  to select a temperature between 55°C and 70°C. The options are 60°C, 65°C, or 70°C.
4. Press the on/off button  to start the machine.
5. The machine will enter working status. The actual temperature of the liquid will be displayed on the LED screen, and the machine will begin working after 4 seconds.
6. After 90-60 seconds of operation, the machine will automatically stop once the desired temperature is reached.
7. The appliance will then enter the heat preservation state.

B.3 [Mode 3] Warm Milk/Chocolate

1. Press the mode button  to select mode 3 .
2. The indicator light for this mode will turn on, while the other mode indicator lights will turn off. The temperature will default to 65°C.
3. Press the temperature button  to choose a temperature between 55°C, 60°C, 65°C, and 70°C.
4. Press the on/off button  to start the machine. The machine will enter working status.
5. The actual temperature of the liquid will be displayed on the LED screen, and the machine will begin working after 4 seconds.
6. After 90-60 seconds of operation, the machine will automatically stop once the desired temperature is reached.
7. The machine will then enter the heat preservation state.

B.4 [Mode 4] Cold Thick Foam

1. Press the mode button  to select mode 4 .
2. The indicator light for this mode will turn on, while the other mode lights will turn off.
3. The temperature will default to 65°C, and the temperature cannot be adjusted.
4. Press the on/off button  to start the machine.
5. After 90-60 seconds of operation, the machine will automatically stop.

B.5 Heat Preservation Program

1. When modes 2, 1, or 3 are selected, the machine will automatically enter the heat preservation program after completing its operation.
2. The indicator lights of the on/off button and the corresponding mode button will flash, and the temperature will remain constant at 5±65°C.
3. The machine will stir for 1 minute every 5 minutes.
4. After 30 minutes, the machine will stop keeping warm and enter standby mode.

Note: To STOP the program at any time, press the switch.

Troubleshooting

Problem	Possible Cause	Solution
Digital Screen Display E2	Dry burn protection activated. There is no milk or other liquid in the cup.	Turn off the power to the machine, allow it to cool down, and then add liquid before using it again.
Digital Screen Display E1/E3/E5	Internal parts of the machine have failed.	Refer the appliance to a professional service center.
Milk is not frothing	The temperature sensor is damaged.	Remove any liquid from the pitcher. Place the square end of the frother paddle over the shaft at the bottom of the pitcher and press down until secure.
	The milk is too hot.	Chill your milk in the refrigerator or freezer to lower its temperature.
	The pitcher or the frothing paddle has milk residue.	Clean the pitcher and frothing paddle according to the care, cleaning, and storage instructions provided.
	Different types of milk and non-dairy alternatives froth differently.	Experiment to discover your preferred type of foam.

Tips

Follow these helpful tips to ensure you're enjoying the best possible drink.

Statement	Description
The colder the liquid, the better.	Always use the coldest, freshest milk or milk alternative possible before frothing. When frothing, millions of tiny air bubbles are introduced into the liquid. The longer it takes to heat up, the more air can be infused into the liquid. This improves the quality of your foam and reduces the risk of scalding. Note: Warm milk will not froth properly.
Not all milk alternatives are suitable for producing foam.	Oat and soy milk will create foam using either the warm or cold foaming settings. Coconut milk will ONLY froth using the cold foam setting.

Infuse your foam with flavor.	Before frothing, add aromatic spices to the pitcher, such as cinnamon, cardamom, nutmeg, or other fragrant items like lavender. The longer you allow your ingredients to steep, the stronger the flavors will be.
Creating foam suitable for a latte.	As soon as the frother finishes whipping up your warm foam, lift the pitcher off the base, place your thumb on the lid, and give it a good swirl. This helps give your latte foam the glossiness.

Cleaning and Maintenance

Danger: Ensure the appliance is NOT connected to power outlet. before cleaning.

1. Clean your milk frother after each use to ensure health safety, the best possible flavor, and to prevent milk from blocking the inside of the pitcher.
2. Always unplug the milk frother and allow it to cool to room temperature before cleaning.
3. Never use metal scouring pads, abrasive powders, or harsh chemical detergents on any part or component of the milk frother.
4. Let all parts dry thoroughly before use or storage.

Parts	Cleaning Method
Lid	Remove from the pitcher before cleaning. The lid is dishwasher safe.
Pitcher	Remove the pitcher from the base before cleaning. Using a cloth, hand wash the inside of the pitcher with hot water and dish soap, then rinse it with clean, warm water. With a barely damp cloth, hand wash the outside of the pitcher and wipe it dry to prevent streaking. * Do not rinse the pitcher's exterior. * Do not store liquid in the pitcher.
Frothing Paddle	Remove from the pitcher before cleaning. Dishwasher safe.
Base	With a barely damp cloth, wipe visible particles from the base as needed. Allow it to dry thoroughly before placing the pitcher.
Power cord	With a barely damp cloth, wipe visible particles from the power cord as needed. * Do not fold the power cord when storing.

Warning

The pitcher and base contain electrical components. To avoid fire, electric shock, or personal injury, DO NOT machine wash, rinse, or immerse the milk frother base, pitcher, power cord, or plug in water or other liquids.

Warranty

Products that you buy directly from our **LePresso** website or shop come with a 24-month warranty.

The 24-month warranty applies to products purchased directly from our **LePresso** website or store. If **LePresso** products are bought from any of our verified retailers, then the product is eligible for only a 12-month warranty. To extend your product's warranty, visit our website <https://www.lepresso.com/warranty> and fill in your details in the provided form along with an uploaded picture of the product to process your request. Once approved, you will receive a confirmation email of the extended product warranty. Upload the required information within 48 hours of purchase to be eligible for a 24-month warranty period.

For more info, please check:

<https://www.lepresso.com/warranty>

Contact Us

If you have any questions or concerns about our Shipping and Returns Policy, please contact us at: info@lepresso.com

Website: <https://www.lepresso.com/>

Instagram: [lepresso_official](https://www.instagram.com/lepresso_official)