

#### LéPRESSO



# LePresso

**Conical Burr Grinder** 

SKU: LPCFFM0032

## Table of Contents

Safety Precautions	2
Before the First Use	2
Charging Instructions	2
Product Overview	3
Specifications	4
Instructions for Use	4
Cleaning and Maintenance	4
Disposal	5
Warranty	5
Contact Us	6

## **Safety Precautions**

- 1. If the power cord is damaged, it must be replaced by an authorized service agent, or similarly qualified persons to avoid a hazard.
- 2. Never move the appliance by pulling the cord. Ensure the cord does not become tangled.
- 3. The appliance must be placed on a stable, level surface.
- 4. Do not leave the device unattended while it is connected to the power supply.
- 5. This appliance is intended for household use only and should be used solely for its intended purpose.
- 6. To protect against electric shock, do not immerse the cord, plug, or appliance in water or any other liquid.
- 7. The appliance can be used by children aged 8 years and older, and by persons with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, provided they have been given supervision or instruction on the safe use of the appliance and understand the risks involved.
- 8. Children should not play with the appliance. Cleaning and user maintenance should only be performed by children over 8 years old under supervision.
- 9. Always switch off the appliance and disconnect it from the power supply before changing accessories or approaching any moving parts.
- **10.** Disconnect the device from the power supply if it is left unattended and before assembling, disassembling, or cleaning.
- 11. Do not allow children to use the appliance without supervision.
- 12. Warning: The chopping blades are very sharp. Avoid physical contact during emptying and cleaning to prevent serious injury.
- 13. Do not place the appliance in the cabinet while in operation.
- 14. Place the appliance on a stable, flat surface.
- 15. Do not use the appliance outdoors.

- 16. This appliance is intended for household and similar uses, including:
- Staff kitchen areas in shops, offices, and other work environments
- Farms
- · Hotels, motels, and other residential accommodations
- Bed and breakfast environments

#### **Before the First Use**


Remove the appliance and accessories from the box. Take off any stickers, protective foil, or plastic from the device.

### **Charging Instructions**

- 1. Insert the charging cable into the device's charging socket, connect the adapter (or a phone charging adapter) to the other end of the cable, and plug it into a mains wall socket to begin charging.
- 2. The indicator light will turn red, signaling that the unit is charging. When fully charged, the indicator light will turn blue. Do not use the device while it is charging.

3. The device will be fully charged after 3 hours and can then be used effectively. During charging, it is normal for the device's body to slightly heat up.

4. Do not leave the product unattended while charging. Clean the lid before the first use.

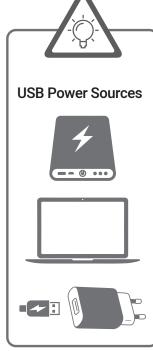

## **Product Overview**

- 1. On/Off switch
- 2. Motor unit
- 3. Grinding bowl
- 4. Ceramic blade
- 5. Roller
- **6.** Fine-Coarse setting nut
- 7. Bowl
- 8. Charge input
- 9. Charge cable





### **Specifications**

Coffee Powder Container	160g
Bean Container	25g
Battery Capacity	1200mAh
Input Voltage	5V 1A
Input Power	5W
Charging Port	Type-C
Charging Time	3 Hours
Rated Power	14W
Product Material	Ceramic

## Instructions for Use

- 1. Turn the fineness and thickness adjustment screw to the desired setting.
- 2. Pour the desired amount of coffee beans into the container.
- 3. Insert the grinding bowl into the appliance and close it tightly until you hear a click.

**Note:** This unit is equipped with a safety switch, and the device will not operate if the cover is not properly installed.

- 4. Press and hold the on/off button for 3 seconds to start the device. It will operate for 3 minutes.
- 5. Press the on/off button again to stop the operation at any time.
- 6. The ground material in the collection chamber is now ready for use.
  Tips: Ideal for grinding nuts, sugar, and spices.

## Cleaning and Maintenance

Warning: Unplug and turn off the appliance before handling or cleaning.

- 1. Clean the motor unit and lid using a slightly damp cloth.
- 2. Do not place any parts in the dishwasher.
- 3. Never immerse the motor unit in water.
- 4. Ensure that all parts are thoroughly dried before storage.

## Disposal

At the end of its service life, this appliance must not be disposed of with regular household waste. It should be taken to an authorized collection point for the recycling of electrical and electronic appliances. The symbol displayed on the appliance, instruction manual, and packaging serves to highlight this important matter. The materials used in the construction of this appliance are recyclable. By recycling electrical and electronic

equipment, you contribute to the protection of the environment. For further information regarding collection points, please consult your local authorities.



#### Warranty

Products that you buy directly from our **LePresso** website or shop come with a 24-month warranty.

The 24-month warranty applies to products purchased directly from our **LePresso** website or store. If **LePresso** products are bought from any of our verified retailers, then the product is eligible for only a 12-month warranty. To extend your product's warranty, visit our website **https://www.lepresso.com/warranty** and fill in your details in the provided form along with an uploaded picture of the product to process your request. Once approved, you will receive a confirmation email of the extended product warranty. Upload the required information within 48 hours of purchase to be eligible for a 24-month warranty period.

For more info, please check:

https://www.lepresso.com/warranty



#### **Contact Us**

If you have any questions or concerns about our Shipping and Returns Policy, please contact us at: info@lepresso.com

Website: https://www.lepresso.com/

Instagram: lepresso\_official