

LéPRESSO



LePresso

Drip Coffee Maker

SKU: LPCFFM0041

Table of Contents

Important Safeguards	2
Before the First Use	4
Specifications	4
Make Drip Coffee	4
Clean and Maintenance	5
Cleaning Mineral Deposits	6
Troubleshooting	6
Important Safety Notice	7
Correct Disposal of this Product	7
Warranty	8
Contact Us	8

Important Safeguards

Before using the appliance, please ensure the following precautions are followed:

- 1.** Do not immerse the appliance or its power cord in water or any other liquids.
- 2.** This appliance can be used by children aged 8 and above, provided they have received supervision or instruction on how to safely use the appliance and understand the associated hazards.
- 3.** Cleaning and maintenance should only be performed by children aged 8 or older and under supervision. Keep the appliance and its cord out of reach of children under 8 years of age.
- 4.** The appliance can be used by individuals with reduced physical, sensory, or mental capabilities, or those lacking experience and knowledge, only if they have been given proper supervision or instruction on safe usage and the associated risks.
- 5.** Children should not play with the appliance.
- 6.** The appliance should not be used by anyone (including children) with reduced physical, sensory, or mental capabilities unless they have received supervision or instruction from a responsible person ensuring their safety.
- 7.** Children should be supervised at all times to ensure they do not play with the appliance.
- 8.** This appliance is designed for use in household and similar environments, including:
 - Staff kitchen areas in shops, offices, or other working environments
 - Farmhouses
 - By clients in hotels, motels, and other residential-type environments
 - Bed and breakfast type environments

- 9.** If the supply cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons to avoid hazards.
- 10.** Before using the appliance, ensure that the voltage of the wall outlet corresponds to the coffee maker's rating plate.
- 11.** The appliance must be properly earthed.
- 12.** Close supervision is necessary when the appliance is used near children.
- 13.** Do not place the coffee maker on hot surfaces or near fire to avoid damage.
- 14.** Always remove the plug from the wall outlet before cleaning or when the appliance is not in use. Allow the appliance to cool completely before attaching components or cleaning.
- 15.** Do not operate the appliance if the cord or plug is damaged, or if it malfunctions, has been dropped, or damaged in any way. Return the appliance to an authorized service center for repair.
- 16.** Do not use accessories that are not recommended by the manufacturer, as they may cause injury or damage to the appliance.
- 17.** Place the appliance on a flat surface or table, and avoid hanging the power cord over the edge.
- 18.** Ensure that the power cord does not touch the hot surfaces of the appliance.
- 19.** Some parts of the appliance may get hot during operation. Avoid direct contact with hot surfaces.
- 20.** Never leave the empty carafe on the warming plate for extended periods as it may crack.
- 21.** Do not use the appliance outdoors.
- 22.** Misuse may cause injury.
- 23.** The heating element surface remains hot after use, so handle with caution.
- 24.** Do not store the coffee maker in a cabinet when it is in use.
- 25.** Please save this instruction manual for future reference.

Schematic View

To ensure that the first cup of coffee tastes excellent, follow these steps to rinse the coffee maker with warm water:

- 1.** Pour 1500 ml of water into the water tank.
- 2.** Place a nylon filter in the funnel (without adding any coffee grounds), then secure the water tank cover.
- 3.** Place the drip carafe on the warming plate.

Specifications

Rated Voltage	220-240V~
Rated Frequency	60/50Hz
Rated Power	900W
Water Tank Capacity	1.5L
Power Cord	UK 3-Pin Plug

Make Drip Coffee

- 1.** Open the water tank cover and pour the proper amount of drinking water into the tank, following the indicated mark.
- 2.** Add ground coffee to the nylon filter using a measuring spoon. One spoon of ground coffee typically makes a cup of premium coffee, but you can adjust the amount to suit your taste.
- 3.** Place the nylon mesh filter into the funnel.
- 4.** Position the drip carafe on the warming plate, ensuring the center line of the carafe aligns with the center of the funnel.

5. Press the ON/OFF switch. The red indicator will light up, and coffee will begin to drip automatically. Note: You may remove the carafe to serve the coffee at any time, but avoid leaving it off for more than 30 seconds, as the coffee may overflow from the funnel.

6. Once brewing is finished, the coffee maker will switch to warming mode. You can turn off the power once the brewing process is complete.

7. After the brewing process is complete, turn off the power switch immediately.

Warning: Do not leave the coffee maker unattended while brewing. Always monitor the machine as you may need to manually operate it at times.

Clean and Maintenance

1. Turn off the power and allow the coffee maker to cool down completely before cleaning.

2. Clean the housing of the coffee maker with a moisture-proof sponge. Regularly clean the water tank, drip insulation board, funnel, filter screen, and drip carafe. After cleaning, dry them thoroughly.

Note: Do not use alcohol or solvent-based cleaners. Never immerse the coffee maker housing in water.

3. Open the water tank cover, remove the funnel, and filter screen. Rotate the funnel counterclockwise to remove it, then rinse the funnel and filter screen with clean water.

4. Clean all attachments in water and allow them to dry completely.

Cleaning Mineral Deposits

To ensure your coffee maker continues to operate efficiently, it is important to clean away mineral deposits from the water every three months or based on the water quality in your area. Adjust the frequency according to how often the appliance is used.

Cleaning Steps:

- 1.** Fill the carafe with a mixture of one part white vinegar and three parts cold water.
- 2.** Pour the vinegar-water mixture into the water tank. Do not place coffee grounds into the machine.
- 3.** Brew the vinegar-water solution, following the "Before the First Use" instructions.
- 4.** If necessary, repeat the process until no yellow liquid is produced.
- 5.** Finally, brew with tap water until there is no vinegar smell remaining.

Troubleshooting

Problem	Possible Cause	Solution
Carafe leakage or water leaking from the lid of the jug.	The jug is not properly located.	Align the centerline of the jug with the leakage opening of the funnel.
The coffee drops too slowly or overflows from the edge of the jug.	Coffee powder is too fine or contains too much fat.	Use coarser coffee powder.
Removable funnel not working properly.	The nylon filter is too dirty.	Clean the nylon filter with clear water.
Coffee residue in the jug.	The heating tube contains incrustation.	Refer to cleaning mineral deposits.
Water leaks from the bottom of the coffee maker.	There is a water leak in the unit.	Do not use the coffee maker again; contact a certified service center.

The coffee maker cannot work anymore.	The coffee maker is heating in an abnormal state, activating its automatic safety protective system.	The coffee maker should be able to rework after standing still for 30 seconds; if not, contact a certified service center.
Coffee temperature is lower than expected.	Lack of water.	Fill the unit with enough water.

Important Safety Notice

Do not attempt to repair the appliance yourself if the cause of failure is unclear. It is recommended to contact a certified service center.

Correct Disposal of this

This marking indicates that the product should not be disposed of with other household waste throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems, or contact the retailer where the product was purchased. They can help with the environmentally safe recycling of this product.



Warranty

Products that you buy directly from our **LePresso** website or shop come with a 24-month warranty.

The 24-month warranty applies to products purchased directly from our **LePresso** website or store. If **LePresso** products are bought from any of our verified retailers, then the product is eligible for only a 12-month warranty. To extend your product's warranty, visit our website <https://www.lepresso.com/warranty> and fill in your details in the provided form along with an uploaded picture of the product to process your request. Once approved, you will receive a confirmation email of the extended product warranty. Upload the required information within 48 hours of purchase to be eligible for a 24-month warranty period.

For more info, please check:

<https://www.lepresso.com/warranty>

Contact Us

If you have any questions or concerns about our Shipping and Returns Policy, please contact us at: info@lepresso.com

Website: <https://www.lepresso.com/>

Instagram: [lepresso_official](https://www.instagram.com/lepresso_official)