



LéPRESSO



LePresso

**BARISTO Espresso Machine**

SKU: LPCFFM0045



# Table of Contents

<b>Specifications</b>	<b>2</b>
<b>Safety Instructions</b>	<b>2</b>
<b>Product Overview</b>	<b>6</b>
<b>Operate your coffee maker</b>	<b>7</b>
<b>1. Before first use</b>	<b>7</b>
<b>2. First Use or After a Long Period of Non-Use</b>	<b>8</b>
<b>3. Extracting Coffee</b>	<b>9</b>
<b>4. Pre-set the Volume</b>	<b>10</b>
<b>Reset Factory Settings</b>	<b>12</b>
<b>Alarms and Malfunction</b>	<b>12</b>
<b>Descaling</b>	<b>13</b>
<b>Power Off</b>	<b>15</b>
<b>Cleaning and Maintenance</b>	<b>15</b>
<b>Troubleshooting</b>	<b>16</b>
<b>Disposal</b>	<b>18</b>
<b>Warranty</b>	<b>19</b>
<b>Contact Us</b>	<b>19</b>

# Specifications

Rated Voltage	230V
Rated Frequency	50Hz
Rated Power	1200W
Pump Pressure	19 BAR
Water Tank Capacity	550mL
Capsule Container Capacity	8-6 Capsules
Power Cord	UK 3-Pin Plug
Product Weight	2.2kg
Product Size	207 x 83 x 308mm

# Safety Instructions

Please read these instructions thoroughly, as they provide essential information for the safe installation, use, and maintenance of the product. Keep this manual in a safe place for easy reference whenever you need it.

1. In case of an emergency, immediately unplug the appliance from the power socket.
2. Children should never use the appliance without close adult supervision.
3. Ensure the voltage on the rating plate matches your mains voltage.
4. Connect the appliance only to properly earthed power sockets.
5. Using incorrect connections will void the warranty.

**6.** This appliance is suitable for children aged 8 years and older if they are supervised or instructed on safe use and understand the hazards.

**7.** Children under 8 must not clean or maintain the appliance unless supervised.

**8.** Keep the appliance and its cord out of reach of children younger than 8 years.

**9.** Persons with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, may use the appliance only if properly supervised or instructed and aware of the risks.

**10.** Children must be supervised at all times to ensure they do not play with the appliance.

**11.** This appliance is intended for household and similar uses, including:  
Staff kitchen areas in shops, offices, and other work environments  
Farmhouses

Used by clients in hotels, motels, and other residential-type settings  
Bed and breakfast-type environments

**12.** The appliance must not be placed inside a cabinet while in use.

**13.** Packing materials such as cardboard, cellophane, and metal staples can cause injury if handled carelessly or used improperly. Keep these materials out of the reach of children and untrained persons.

**14.** Before using the appliance, inspect it to ensure all mechanical parts are intact. The appliance body, water tank cover, tank, and brewing unit must never be cracked or broken.

**15.** The sheath and plug of the power cord must also be intact without cracks or damage. If any damage is found, immediately unplug the appliance and take it to an authorized dealer for inspection.

- 16.** Before using, remove all protective films from the outside of the appliance.
- 17.** Electrical safety is guaranteed only when the appliance is connected to a proper earth system in compliance with local safety regulations. Have this checked by a qualified professional. The manufacturer is not responsible for damage caused by lack of proper earthing.
- 18.** Do not use flying leads or non-approved extension cords to power the appliance.
- 19.** Never immerse the appliance, power cable, or plug in water or any other liquid.
- 20.** Keep the power cable away from hot parts of the appliance, heat sources, or sharp edges.
- 21.** Never place the appliance on a hot surface, such as a heating plate.
- 22.** Always place the appliance on a flat, stable, heat-resistant surface, away from water splashes.
- 23.** During the first use, a slight smell may be noticed due to insulating materials and heating elements. This will disappear after a few minutes.
- 24.** Do not use or place the appliance outdoors, near water, or close to open flames.
- 25.** Do not use the appliance with bare feet or wet hands.
- 26.** Do not move the appliance while it is operating.
- 27.** Avoid placing anything on top of the appliance while it is working.
- 28.** Do not touch any hot parts during operation.
- 29.** Be cautious of possible splashes of hot coffee while the appliance is in use.
- 30.** Never open the handle while brewing coffee.

- 31.** Ensure the power plug is always easily accessible in case you need to disconnect the appliance quickly.
- 32.** Do not unplug the appliance by pulling on the power cord.
- 33.** Never operate the machine without water in the tank.
- 34.** Do not leave the machine in rooms where the temperature is 0°C or below. If you will not be using it for a long time, empty the water tank.
- 35.** Unplug the appliance from the main socket if it will not be used for an extended period, such as during holidays.
- 36.** Always unplug the appliance from the main power socket and allow it to cool completely before cleaning or servicing.
- 37.** This appliance is intended solely for coffee preparation. It must not be used for any other purpose, nor modified or tampered with in any way. Improper or unauthorized use is unsafe and voids any manufacturer responsibility for resulting damage.
- 38.** The manufacturer guarantees that this product complies with applicable Community Directives, as confirmed by the declaration of conformity provided with this manual.
- 39.** Please retain these instructions for future reference.
- 40.** This appliance is designed for household use only.

Please read these instructions thoroughly, as they provide essential information for the safe installation, use, and maintenance of the product. Keep this manual in a safe place for easy reference whenever you need it.

# Product Overview



Figure 1 Product

**1. Handle**

**2. Capsule Window**

**3. Coffee Spout**

**4. Used Capsule Container**

**5. Drip Tray Lid**

**6. Drip Tray**

**7. Control Panel**

**8. Water Tank Lid**

**9. Water Tank**

**10. Base**

**11. Machine Body**



Figure 2 Control panel

## ► Operate your coffee maker

### 1. Before first use

**1.1** Confirm that all parts and accessories are present, including the machine body, water tank lid, water tank, used capsule container, drip tray lid, and drip tray.

**1.2** Carefully remove and discard all promotional labels and packaging materials from the machine.

**1.3** Thoroughly wash the water tank lid, water tank, used capsule container, drip tray lid, and drip tray with warm, soapy water. Rinse well and dry completely.

**1.4** Clean the exterior of the machine with a soft, damp cloth, then dry it thoroughly.

**1.5** Place the coffee maker on a flat, stable surface.

**1.6** Ensure the used capsule container, drip tray, and water tank are securely and correctly installed before operating.

## **2. First Use or After a Long Period of Non-Use**

**2.1** Remove the water tank and fill it with approximately 550 ml of fresh water.

**2.2** Reinsert the water tank correctly into the machine.

**2.3** Plug the power cable into a socket.


**2.4** Turn on the machine by pressing any button.

**2.5** Preheating: The buttons will start flashing with a white light.


**2.6** Ready to Use Mode: When the lights remain steady white, the machine is ready to use.

**2.7** Remove the drip tray and place a cup (minimum capacity 300 ml) under the coffee spout.


**2.8** Clean Coffee Pipe: Press the Lungo button to clean the coffee pipe.

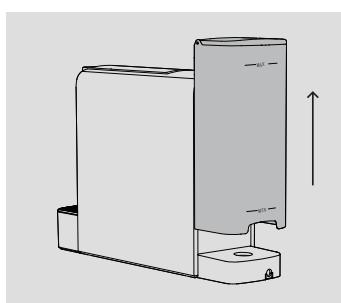


**2.1**

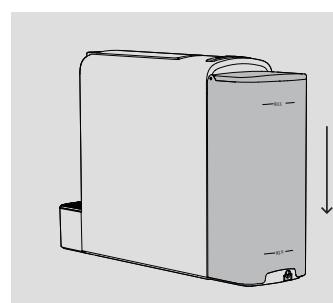


**2.2**

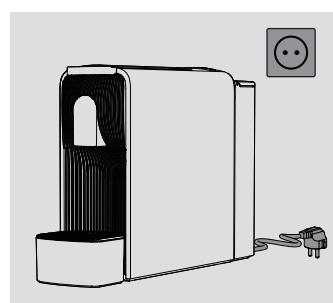


**2.3**

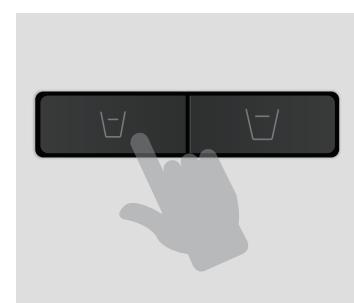


**2.4**

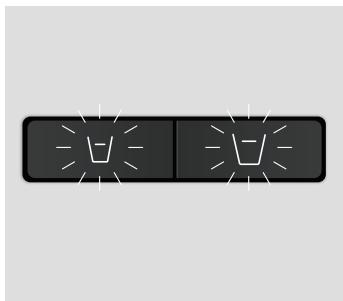


**2.5**

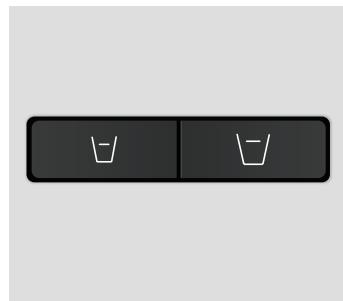

**2.6**

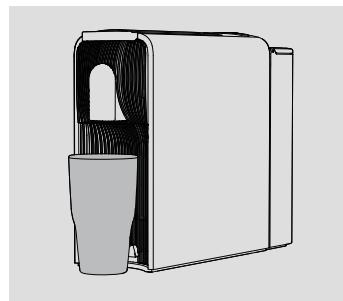

**2.7**

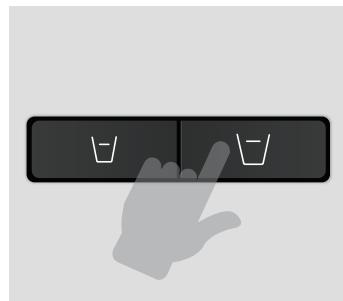

**2.8**

### **Note:**

The water level should be below the MAX mark and above the MIN mark. Ensure the handle is lowered with no capsule inside the machine.

## **3. Extracting Coffee**

**3.1** Raise the handle fully upwards. Insert a capsule into the capsule window, aligning it with the shape of the hole.


**3.2** Lower the handle fully down.

**3a.** Small Cup: Place a cup under the coffee spout.


**3b.** Big Cup: If your cup is tall, remove the drip tray and place the cup directly under the coffee spout.

**4a.** Espresso: In Ready to Use Mode, press the Espresso button. The machine will automatically stop once the preset volume is reached.


**4b.** Lungo: In Ready to Use Mode, press the Lungo button. The machine will automatically stop once the preset volume is reached.

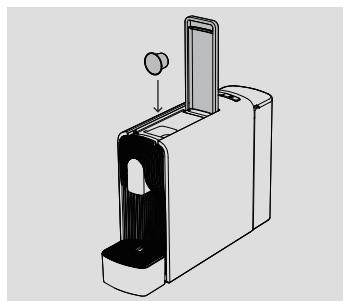


**3**

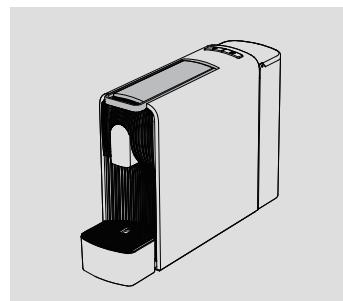


**3.1**

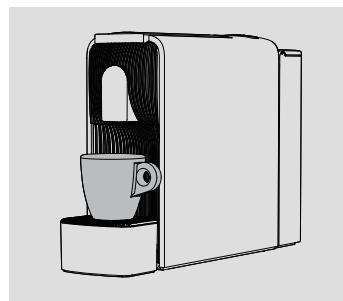


**3.2**

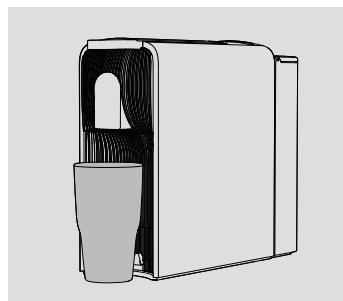


**3.a**

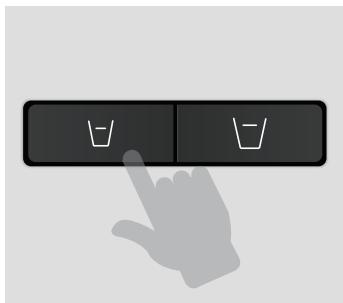

**3.b**

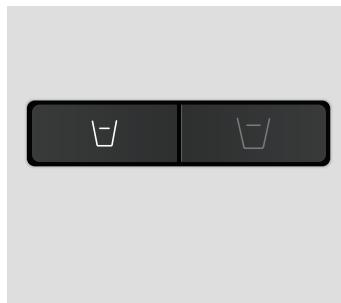

**4.a**

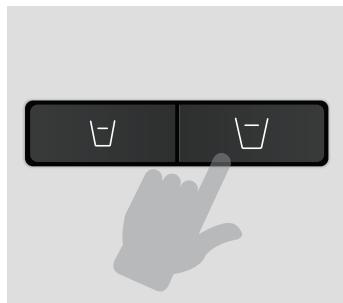

**4.b**

### **Note:**

You can stop the extraction at any time by pressing any extraction button.

Never insert fingers or any objects into the capsule window.

Do not open the handle while the coffee is extracting.

## **4. Pre-set the Volume**


### **4.1 Pre-set the Espresso Volume (Range approx. 20–70 ml)**

1. Place a cup under the coffee spout.


2. In Ready to Use Mode, press and hold the Espresso Button for more than 3 seconds.

3. The machine will start extracting coffee, and the Espresso Button will flash.


4. Press the Espresso Button again to stop extraction. The machine will memorize and operate with the new volume setting.

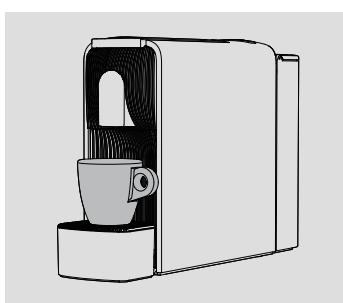


**1**

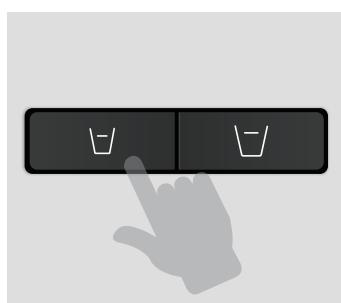

**2**

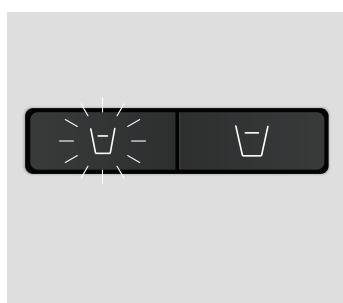

**3**

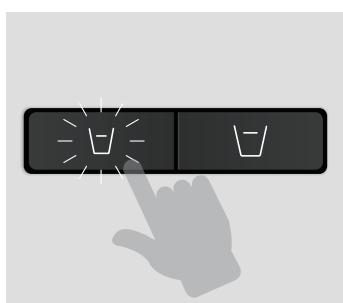


**4**

## Note:


1. If you stop extraction by pressing the Espresso Button before the volume reaches 20 ml, the pre-set volume will be rounded up to approximately 20 ml.
2. If you do not stop extraction manually, the machine will automatically stop when the volume reaches approximately 70 ml.

## 4.2 Pre-set the Lungo Volume (Range approx. 70–130 ml)


1. Place a cup under the coffee spout.
2. In Ready to Use Mode, press and hold the Lungo Button for more than 3 seconds.
3. The machine will start extracting coffee, and the Lungo Button will flash.
4. Press the Lungo Button again to stop extraction. The machine will memorize and operate with the new volume setting.

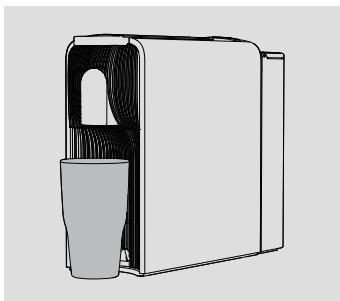


1

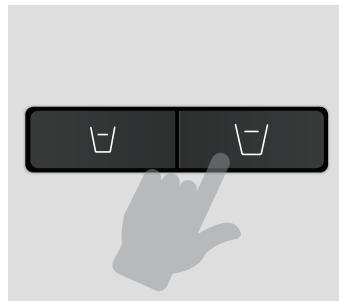

2

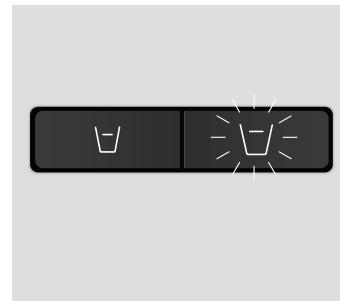

3

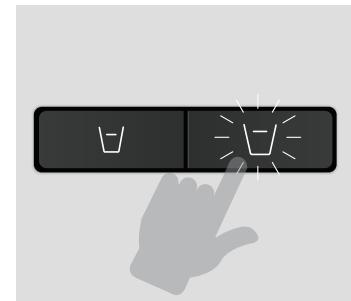


4

## Note:


1. If you stop extraction by pressing the Lungo Button before the volume reaches 70 ml, the pre-set volume will be rounded up to approximately 70 ml.
2. If you do not stop extraction manually, the machine will automatically stop when the volume reaches approximately 130 ml.

# Reset Factory Settings


1. Turn off the machine while keeping it plugged in.
2. Simultaneously press and hold both the Espresso and Lungo buttons for more than 3 seconds.
3. Both extraction buttons will flash three times to confirm that the reset has been completed.
4. The machine will automatically return to Ready to Use Mode.

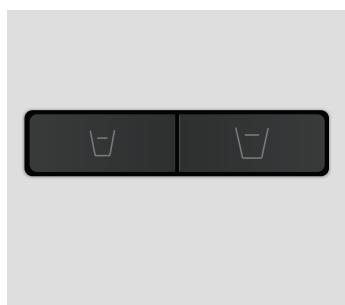


1

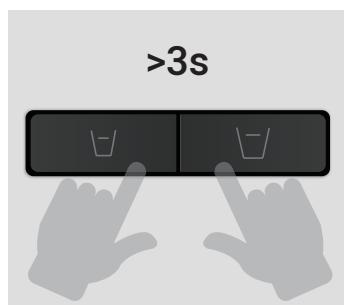

2

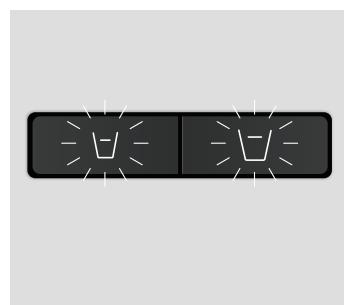

3

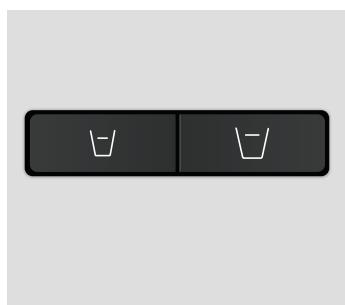

4

## Note:

1. The default espresso volume is approximately 40 ml.
2. The default lungo volume is approximately 110 ml.

# Alarms and Malfunction


## 1. Lack of Water Alarm

1.1 When the Espresso and Lungo buttons flash white three times and the pump produces an abnormal noise, this indicates that the water tank contains insufficient water for proper operation.

1.2 Refill the tank with fresh water, ensuring the level remains below

the MAX mark and above the MIN mark.

**1.3** Resume extraction until the desired coffee volume is achieved.

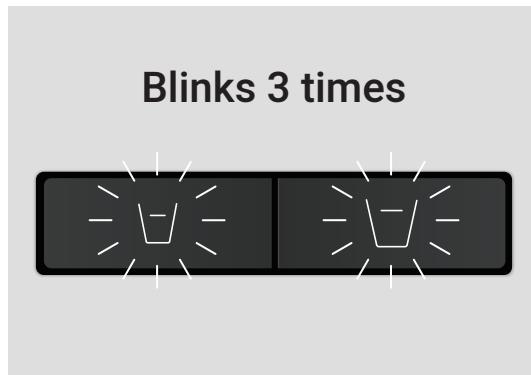


## 2. Malfunction

**2.1** If the Espresso and Lungo buttons flash rapidly and continuously with a white light, this signifies a sensor malfunction.

**2.2** Power off the machine, wait for two minutes, and then power it on again.

**2.3** Should the problem persist, please contact service center for further assistance.

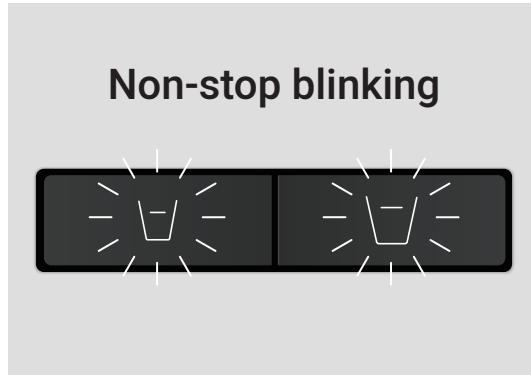

# Alarms and Malfunction

It is recommended to descale the machine every 6 months or after 500 extractions. Please follow the steps below for descaling:


**1. Fill the water tank with fresh water up to the MAX level (approximately**

550 ml), then add the descaling agent to the tank.


**2.** Raise and lower the handle to release any used capsules into the used capsule container.

**3.** Empty the used capsule container. Place a container with a minimum capacity of 500 ml under the coffee spout.


**4.** After preparation, with the machine in Ready to Use Mode, simultaneously press and hold the Espresso and Lungo buttons for more than 3 seconds to start the descaling process.

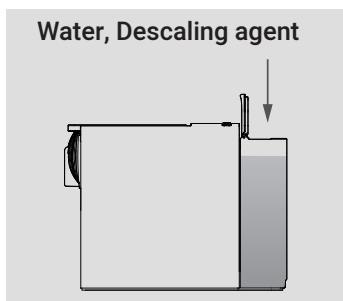


**1**

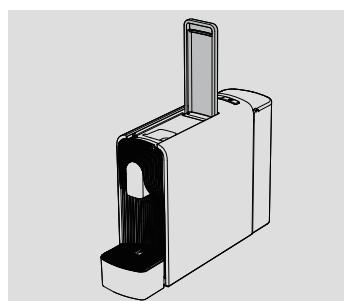

**2**

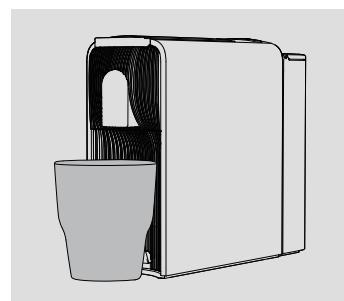

**3**

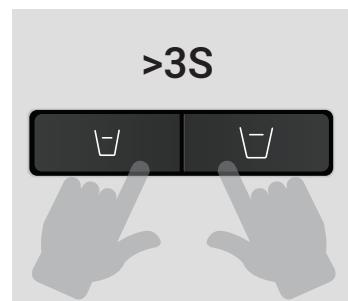


**4**


**5.** During the descaling process, the Espresso and Lungo buttons will flash alternately.

**6.** Once descaling is complete, the machine will return to Ready to Use Mode.


**7.** Empty and replace the container placed under the coffee spout. Repeat the descaling process using fresh water only.

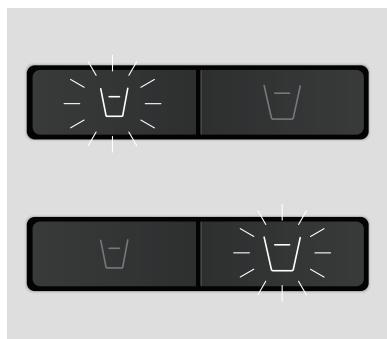

**5**

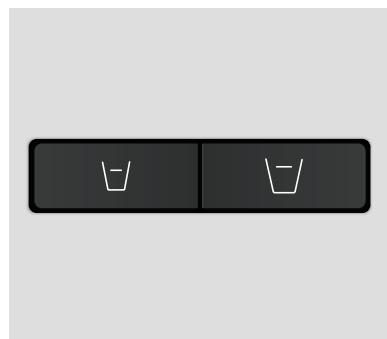

**6**

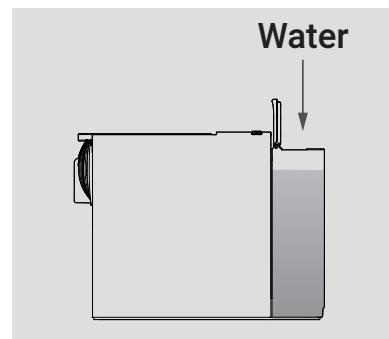

**7**


## **Note:**

The descaling process can be canceled at any time by pressing any extraction button, or it will automatically stop if the water tank runs out of water.

After descaling with the descaling agent and water, it is recommended to repeat the descaling process using fresh water only, as described in step 7.

## **Power Off**

1. While in Ready to Use Mode, press and release the Espresso and Lungo buttons simultaneously for approximately one second to power off the machine.
2. The machine will automatically shut down after 10 minutes of inactivity.

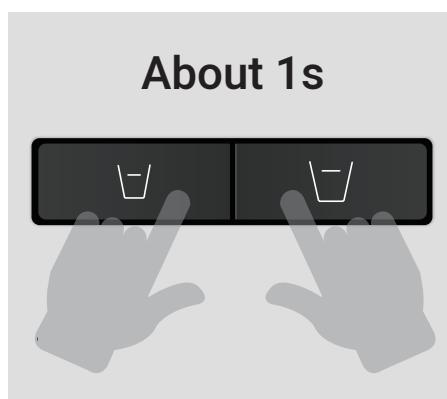

## **Cleaning and Maintenance**


### **Note:**

- a. Ensure the machine is unplugged before cleaning.
- b. To avoid electric shock, do not immerse the power cord, plug, or


machine in water or any other liquid.

- c. Do not use abrasive or solvent-based cleaning agents.
- d. Avoid using metal objects to remove encrustations or coffee deposits, as they may scratch metal or plastic surfaces.


1. Raise and lower the handle to release the used capsule into the used capsule container.
2. Remove and empty the drip tray, used capsule container, and water tank.
3. Rinse these parts with water and dry them with a soft, clean cloth.
4. Wipe the outer surfaces of the machine body with a damp cloth.

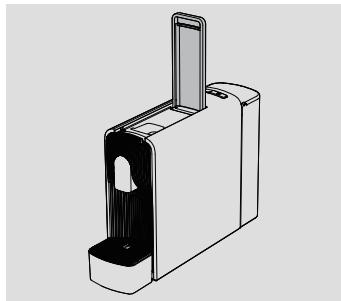


1

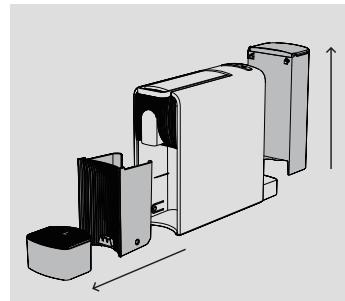

2

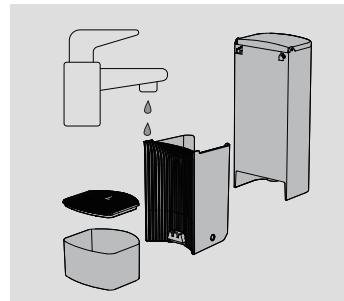

3

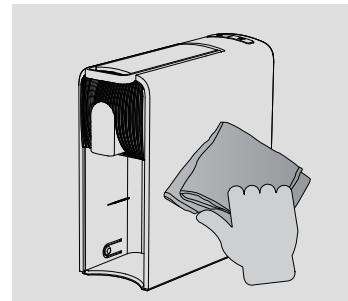

4

**Important:**

Empty the used capsule container regularly (every 6-8 extractions) to prevent damage to the machine and ensure optimal functioning.

## Troubleshooting

If the machine is not functioning properly, please perform the following simple checks:

Problem	Possible Cause	Solution
There is no light indicator when the buttons are pressed.	The machine is not connected electrically.	Check the power outlet, plug, voltage, and fuse. If the problem persists, please contact a Service Center.
The coffee is not hot enough.	The cup and machine are not warmed up before extraction.	Warm up the cup and/or warm up the machine without a capsule by pressing any button before extraction.
	Scale builds up in the machine.	Descale if necessary. Please refer to the Descaling instructions.
The coffee flows very slowly.	There is excessive resistance in the machine.	Clean and descale if necessary. Please refer to the Cleaning and Descaling Instructions. If the issue still persists, please contact a Service Center.
	The used capsule is not completely broken.	Clean the machine by pressing any button to extract water without inserting a capsule.
No coffee is dispensed from the machine.	The water tank lacks water.	Refill the water tank.
	The water tank is wrongly positioned.	Remove and replace the water tank.
	Scale builds up in the machine.	Descale if necessary. Please refer to the Descaling instructions. If the issue still persists, please contact a Service Center.
	The used capsule is not broken.	Clean the machine by pressing any button to extract water without inserting a capsule.

Water leaks from the base of the machine.	The used capsule container and/or drip tray are overfilled.	Empty the used capsule container and/or drip tray. If the issue still persists, please contact a Service Center.
---	---	--

### Note:

If your issue is not listed above or persists after following the provided instructions, please contact Customer Service for further assistance.

## Disposal

This product must not be disposed of as unsorted household waste. It is important to separate such waste for proper treatment and recycling, in compliance with local waste management regulations.



## **Warranty**

Products that you buy directly from our **LePresso** website or shop come with a 24-month warranty.

The 24-month warranty applies to products purchased directly from our **LePresso** website or store. If **LePresso** products are bought from any of our verified retailers, then the product is eligible for only a 12-month warranty. To extend your product's warranty, visit our website [\*\*https://www.lepresso.com/warranty\*\*](https://www.lepresso.com/warranty) and fill in your details in the provided form along with an uploaded picture of the product to process your request. Once approved, you will receive a confirmation email of the extended product warranty. Upload the required information within 48 hours of purchase to be eligible for a 24-month warranty period.

For more info, please check:

[\*\*https://www.lepresso.com/warranty\*\*](https://www.lepresso.com/warranty)

## **Contact Us**

If you have any questions or concerns about our Shipping and Returns Policy, please contact us at: [\*\*info@lepresso.com\*\*](mailto:info@lepresso.com)

Website: [\*\*https://www.lepresso.com/\*\*](https://www.lepresso.com/)

Instagram: **lepresso\_official**