

LèPRESSO



LePresso

**Electric Cordless Burr Grinder
for High-Precision Grinding**

SKU: LPRCGRBK

Table of Contents

Safety Instructions	2
Features	3
Product Overview	4
Specifications	4
Instructions for Use	5
Warranty	6
Contact Us	6

Before using the product, please carefully read this User Manual to guarantee correct usage and keep it secure for future reference.

Safety Instructions

- 1.** Read all instructions carefully.
- 2.** Keep the appliance and its power cord away from children, infants, and pets.
- 3.** To protect against fire, electric shock, and injury to persons, do not immerse the appliance in water or any other liquid.
- 4.** Ensure the device is turned off before initiating a cleaning process.
- 5.** Avoid contact with moving parts.
- 6.** Only use the supplied charging cable to charge the appliance.
- 7.** Do not operate the appliance if it malfunctions, has been dropped, or damaged in any way. In such cases, send the appliance to the nearest approved Service Center for examination, repair, or electrical or mechanical adjustment.
- 8.** The use of accessories not recommended or sold by the manufacturer may cause fire, electric shock, or injuries.
- 9.** Ensure the appliance is placed on a flat surface and is not on the edge of a table or counter, or near hot surfaces, including stoves.
- 10.** This product is intended for household use only. Any commercial use or failure to follow the instructions may result in injury or damage.
- 11.** This appliance must not be used by individuals with reduced physical, sensory, or mental abilities, or by those lacking experience and knowledge, unless they have received supervision or instructions.
- 19.** Children must not play with the appliance.
- 20.** Warning: Turn off the appliance and disconnect it from the power supply before changing accessories or handling moving parts.
- 21.** The appliance should be charged under supervision. Do not leave the charging appliance unattended.

- 22.** Cleaning and maintenance must not be carried out by children.
- 23.** This appliance is intended for household and similar environments, including:
- * Staff kitchen areas in shops, offices, and other workplaces.
 - * Farmhouses.
 - * Guest use in hotels, motels, and other residential facilities.
 - * Bed and breakfast establishments.
- 24.** Do not immerse the product in water.
- 25.** The product should not be cleaned using harsh chemicals or abrasive detergents.
- 26.** The user should never attempt to disassemble, repair, or puncture the appliance as it will result in injury, damage, or fire.

Features

- 1.** The conical ceramic burr ensures a consistent grind with less heat, preserving the original flavor and aroma of coffee beans. Enjoy freshly ground coffee anytime, anywhere.
- 2.** Easily adjust the grind size from coarse to fine by twisting the knob. Compatible with various coffee makers like Moka pots, pour-over, percolators, and French presses.
- 3.** Compact and lightweight making it perfect for travel, camping, business trips, or work. Enjoy freshly ground coffee without the effort of manual grinding.
- 4.** Equipped with a rechargeable battery, it can grind enough beans for 40 cups of coffee. Simply pour the beans, press the button, and within 2 minutes, you'll have fresh coffee grounds.
- 5.** The detachable ceramic burr and powder container are easy to clean with a brush, and the container can be rinsed with water.

Product Overview



Specifications

Rated Power	18W
Input Power	5W
Battery	Lithium 7.4V 800mAh
Charging Time	3 Hours
Bean Container	30-35g
Powder Container	35-40g
Weight	550g
Dimensions	Φ83×189mm

Instructions for Use

1. Before using the product for the first time, ensure that the exterior, bean container, and powder container are clean and dry.
2. Connect the device to a power source that matches its specifications. Charge the battery fully, then disconnect from the power source.
3. Choose the desired amount of coffee to grind. The maximum capacity of the coffee bean container is 35g.
4. Securely attach the grinding component to the coffee powder container.
5. Add the coffee beans to the container and close the lid.

Warning: Avoid overfilling the container, as this may damage the device and disrupt the grinding process.

6. Press the power button to begin grinding.
7. Once grinding is complete, ensure the appliance is turned off. Twist open the device and remove the ground coffee from the container.

Note: Always clean the appliance after each use to maintain optimal performance.



Warranty

Products that you buy directly from our **LePresso** website or shop come with a 24-month warranty.

The 24-month warranty applies to products purchased directly from our **LePresso** website or store. If **LePresso** products are bought from any of our verified retailers, then the product is eligible for only a 12-month warranty. To extend your product's warranty, visit our website [**https://www.lepresso.com/warranty**](https://www.lepresso.com/warranty) and fill in your details in the provided form along with an uploaded picture of the product to process your request. Once approved, you will receive a confirmation email of the extended product warranty. Upload the required information within 48 hours of purchase to be eligible for a 24-month warranty period.

For more info, please check:

[**https://www.lepresso.com/warranty**](https://www.lepresso.com/warranty)

Contact Us

If you have any questions or concerns about our Shipping and Returns Policy, please contact us at: [**info@lepresso.com**](mailto:info@lepresso.com)

Website: [**https://www.lepresso.com/**](https://www.lepresso.com/)

Instagram: [**lepresso_official**](#)