

PORODO
LIFESTYLE



Porodo Lifestyle


**Snap and Go
Mini Digital Camera**

SKU: PD-ETK06

Table of Contents

Schematic View	2
Product Overview	3
Features	3
Charging Instructions	3
Power On/Off	4
Video Recording	4
Photo Mode	4
Silent Photo/Video Mode	5
Sound Recording Mode	5
Turn on the Fill Light	5
Filter	6
File Playback	6
Using as a Webcam	6
Time Display Settings	6
Automatic Shutdown	7
Reset Function	7
Specifications	7
Attention	8
Disposal	9
Warranty	9
Contact Us	9

Schematic View

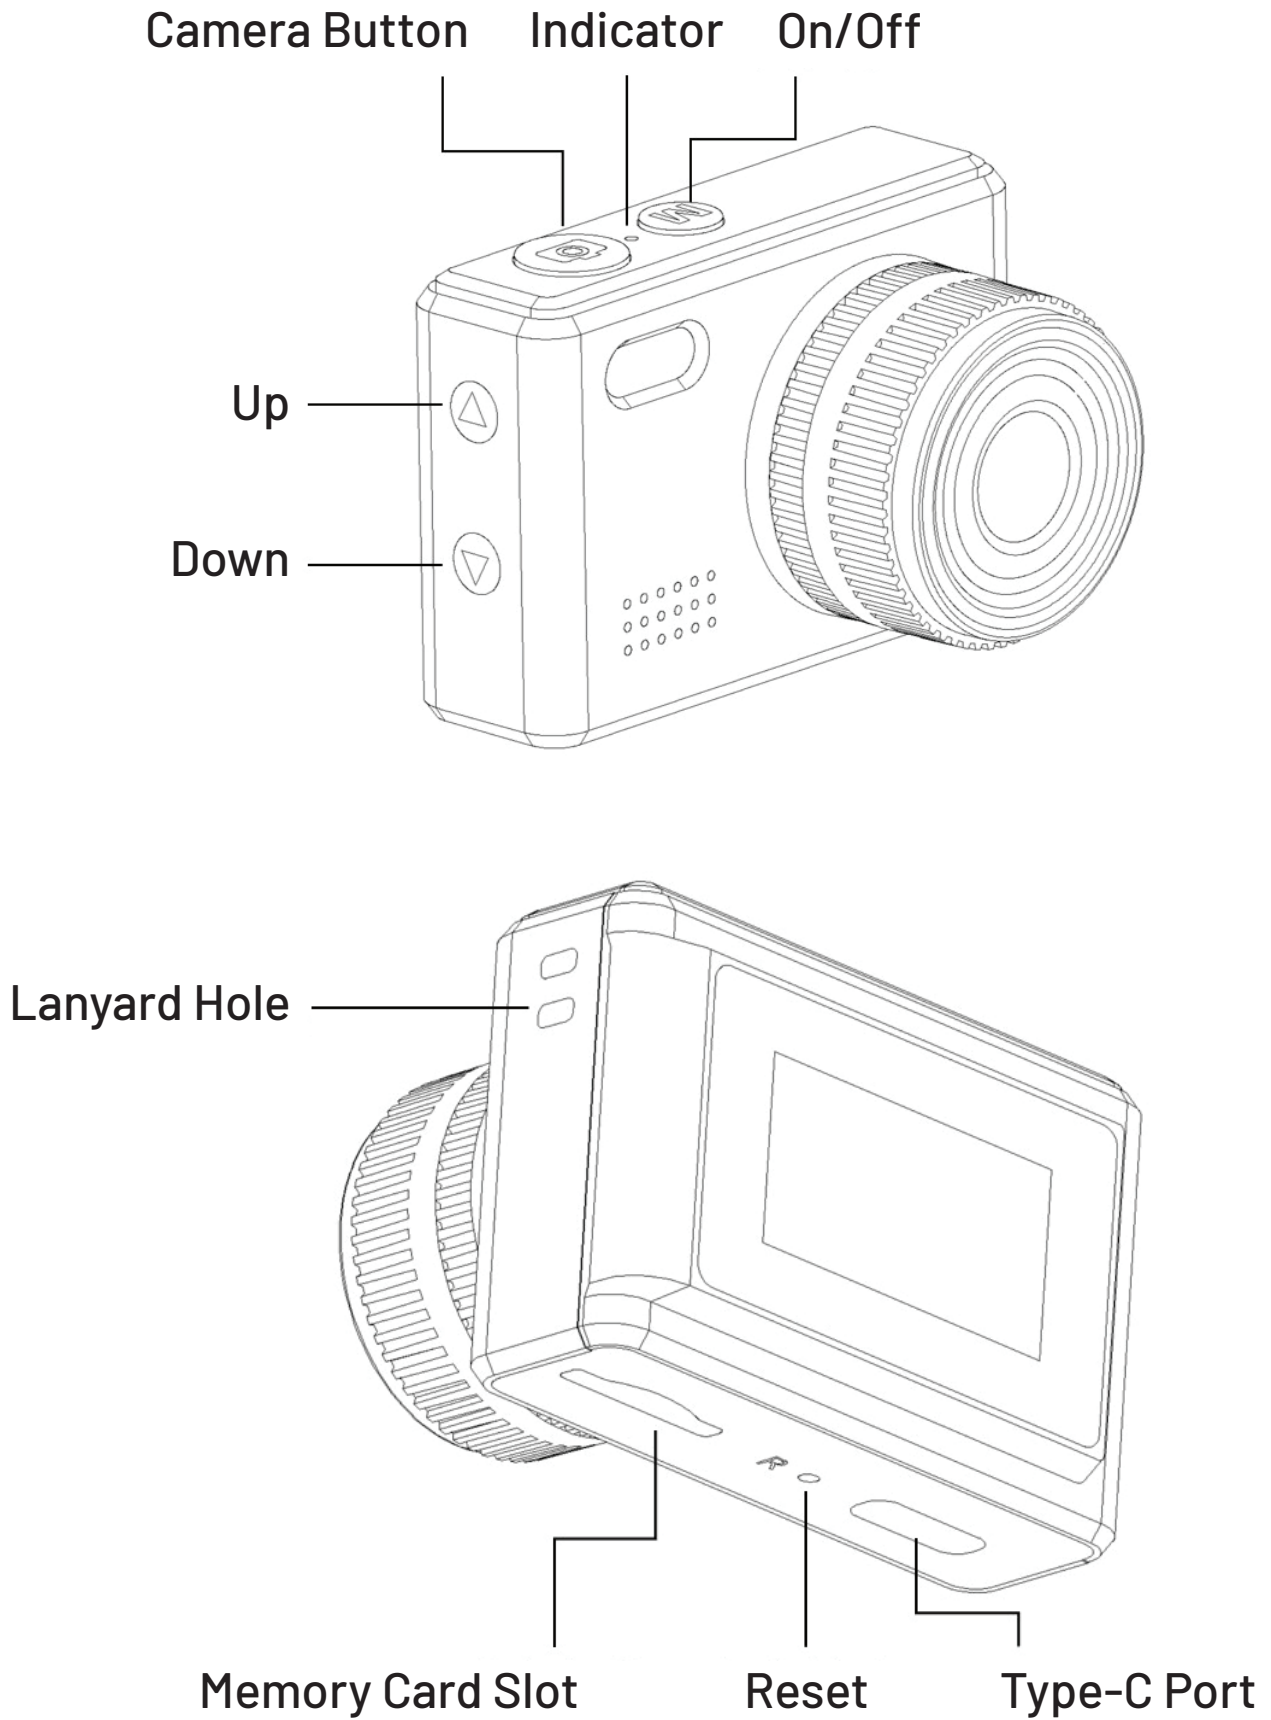

Product Overview

This multifunctional digital camera allows real-time recording and offers a broad range of applications. It is user-friendly, compact, and stylish, combining beauty and practicality. Ideal for various uses, including outdoor activities, cycling recordings, driving logs, sports captures, pet documentation, business meetings, educational purposes, security, and more.

Features

1. The camera boasts a sleek, modern design that enhances both functionality and aesthetics.
2. The camera can record videos in the widely supported AVI format for easy compatibility with other devices.
3. Capture high-quality video in stunning HD resolution for clearer, sharper imagery.
4. Choose between 1080P for full high-definition recording or 720P for standard HD quality.
5. Store large amounts of data with support for memory cards up to 128GB for extended recording time.
6. Equipped with a powerful built-in polymer battery that ensures long-lasting usage and reliable performance.
7. Easily connect your camera to your smartphone via Type-C, allowing seamless transfer and viewing of photos and videos.
8. The compact camera measures 28.5×28.7×42.4mm, making it portable and easy to carry for all your recording needs.

Charging Instructions

Before using the device for the first time, it is essential to charge it fully. You can charge the device using the following methods:

1. Connect the charger to charge.

2. Connect the device to a computer for charging.

3. Use a power bank to charge the device.

Charging Indicator: While charging, the red charging indicator light will remain on. Once the charging process is completed, the red indicator will turn off.

Important Note: If the battery level is critically low, the device will enter a protection mode and cannot be powered on. Please ensure the device is charged before turning it on for use.

Power On/Off

Power On: To turn the device on, press and hold the On/Off button (M Button) for 3 seconds. The blue indicator light will turn on to confirm the device is powered on.

Power Off: To turn the device off, press and hold the On/Off button (M Button) for 2 seconds. The blue indicator light will turn off, signaling that the device is powered off.

Video Recording

1. After inserting the memory card, the device will automatically enter video standby mode upon powering on, and a recording icon will appear in the upper left corner of the screen.

2. To start recording, press the camera button. The video time statistics will be displayed in the upper right corner of the screen.

3. To stop recording, press the camera button again. The device will automatically save the video file to the memory card and re-enter video standby mode.

Photo Mode

1. While the camera is in video standby mode, press the on/off button (M Button). The upper left corner of the screen will display a photo icon, indicating that the

device has entered photo mode.

2. To capture a photo, press the camera button. The flash will light up, and the speaker will click to indicate the photo has been successfully taken.
3. The upper right corner of the screen will display the remaining number of photos that can be taken.

Note: Please ensure the camera remains steady while taking a photo to avoid any blurriness.

Silent Photo/Video Mode

In standby mode, press the up button briefly. The upper left corner of the screen will display a microphone off icon. In this mode, both photo and video recording will be silent, and the flash will be turned off.

Sound Recording Mode

1. In standby mode, press and hold the camera button to enter sound recording mode, which will automatically start recording.
2. To stop recording and enter the recording standby mode, briefly press the camera button. To start a new recording, press the camera button again.
3. To exit the sound recording mode, press and hold the camera button or briefly press the power button.

Turn on the Fill Light

In video standby mode, press and hold the up button for 3 seconds to turn on the fill light. Press and hold it for another 3 seconds to turn it off.

Filter

In standby mode, briefly press the down button to cycle through various filter effects.

File Playback

Press the on/off button to enter file playback mode. Use the up and down buttons to select the file you want to view, and press the camera button to play or pause the video.


Using as a Webcam

Once the memory card is removed from the device and it is connected to the computer, it can be used directly as a webcam.

Time Display Settings

1. Insert the memory card into the device, and after powering it on, connect it to the computer. Open the root directory and locate the text file named "time.txt" to set the time.

20240101235959 Y

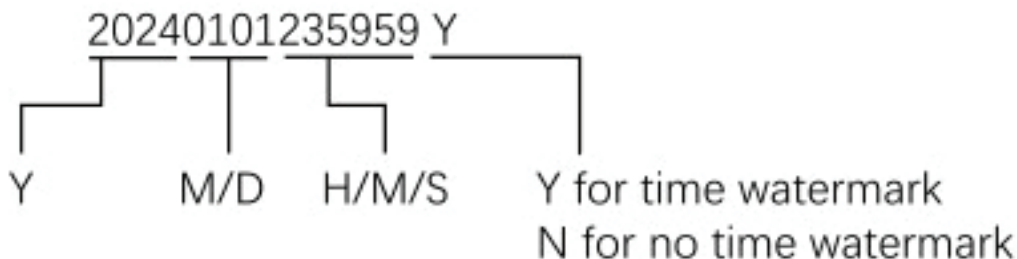

Y M/D H/M/S Y for time watermark
N for no time watermark

2. Open the time.txt document and follow the format precisely. Modify the text inside to set the desired time. After making the changes, save the document and reboot the device to synchronize the time.

Automatic Shutdown

1. The device will automatically power off in the following scenarios:
2. During recording, if the battery level is insufficient, the system will save the recorded content before shutting down.
3. If the device remains idle in standby mode for 3 minutes without any operation, it will automatically power off.

Reset Function

If the device becomes unresponsive or encounters an issue, insert a reset pin into the reset hole and press briefly to complete the reset. Afterward, power the device back on to resume normal operation.

Note: Most device crashes are caused by improper operations or issues with the memory card.

Specifications

Model Number	PD-ETK06
Photo Resolution	2MP
Video Resolution	1080P
Screen Size	0.96"
Battery Capacity	200mAh
Video Format	AVI
Photo Format	JPG

Charging Port	Type-C
Sensor Type	CMOS
Operating Time	75-80 minutes
Storage	Micro SD Up to 128GB (Not Included)
Dimensions	28.7x28.5x42.4mm (Lens Included)

Attention

1. Please read the user manual carefully and store it in a safe location for future reference.
2. Avoid placing the device near strong magnetic objects, such as magnets and motors.
3. Keep the device away from objects that emit strong radio waves, as high magnetic fields may interfere with the device's functionality and affect the image and sound quality.
4. For optimal performance, it is recommended to use a high-quality TF card to store high-definition video files.
5. Ensure the TF card is not placed near high-magnetic areas to prevent data loss.
6. Keep the device out of reach of children.
7. Do not pour liquids or insert foreign objects into the device.
8. Do not attempt to repair the device yourself. If repair is necessary, please seek professional assistance.
9. The device contains a battery. Do not dispose of it in regular trash. Please follow the proper disposal methods for electronic waste.

Disposal

This product must not be disposed of as unsorted household waste. It is important to separate such waste for proper treatment and recycling, in compliance with local waste management regulations.

Warranty

Products that you buy directly from our **Porodo** website or shop come with a 24-month warranty.

When you buy **Porodo** products from any of our approved sellers, you only get a 12-month warranty. If you want to extend this warranty, go to our website at **porodo.net/warranty** and fill out the form with your information. Don't forget to upload a picture of the product too. After we've checked and accepted your request, we'll send you an email to confirm that your product's warranty has been extended.

For more info, please check:
porodo.net/warranty

Contact Us

If you have any questions about this Privacy Policy, please contact us at:
info@porodo.net

Website: **porodo.net**

Service Support: **support@porodo.net**

Instagram: **porodo**